


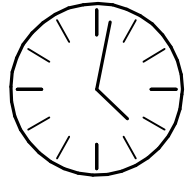
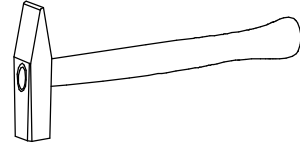
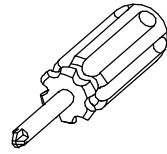
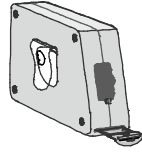
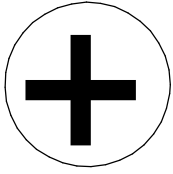
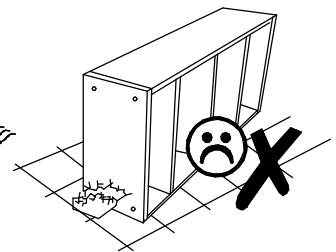
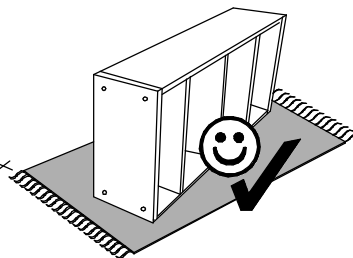
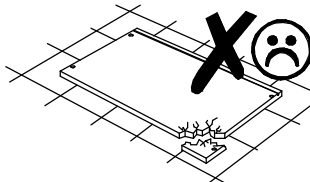
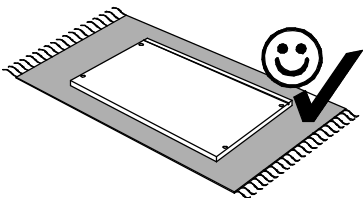
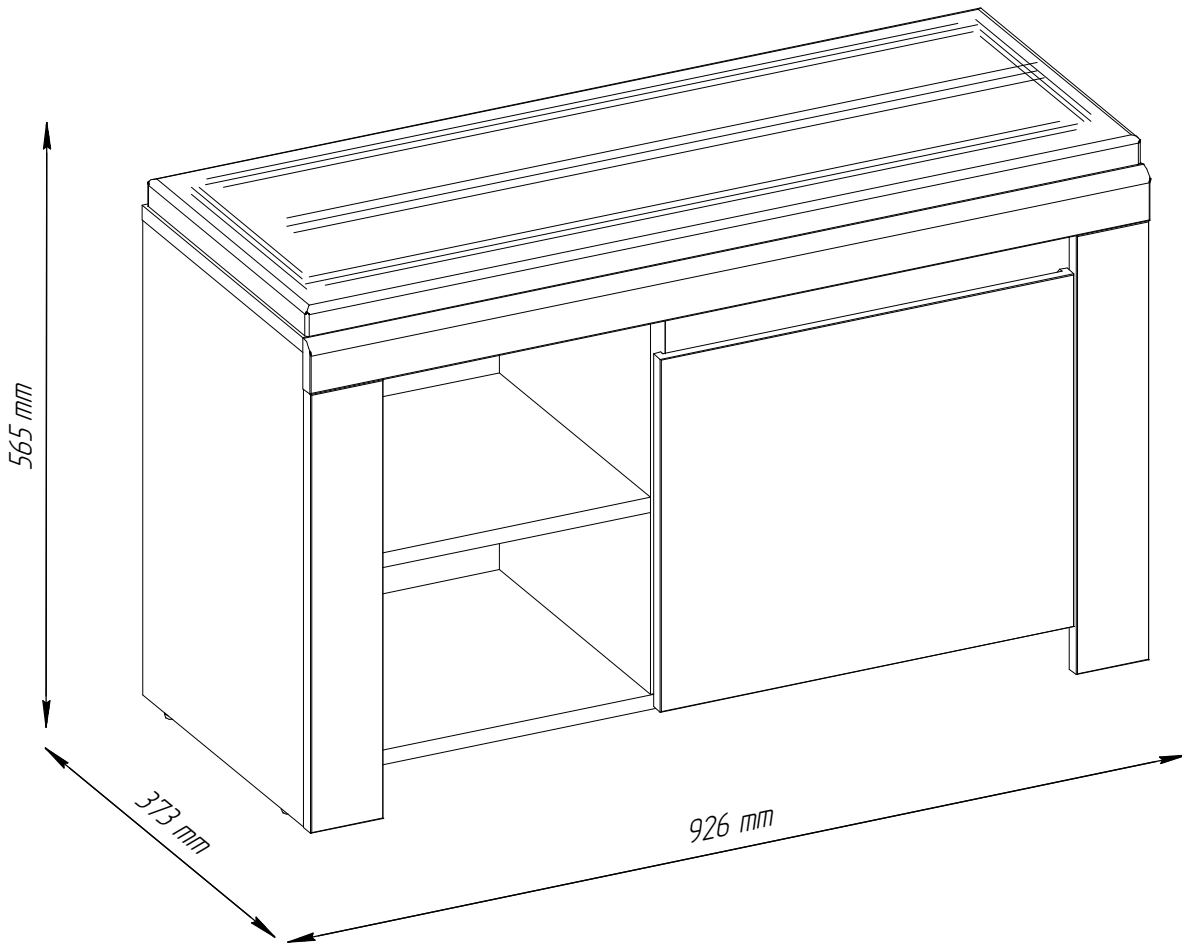

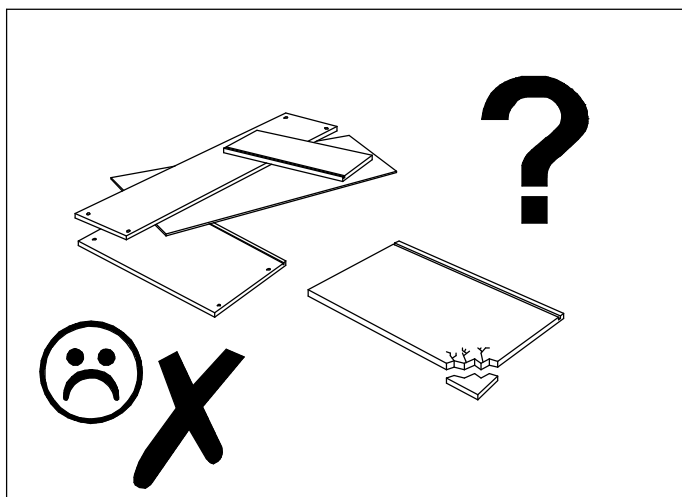



# VIGO I

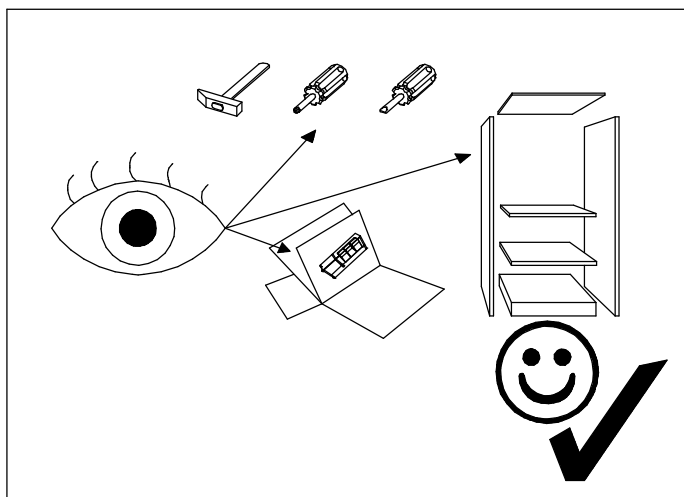




70 min


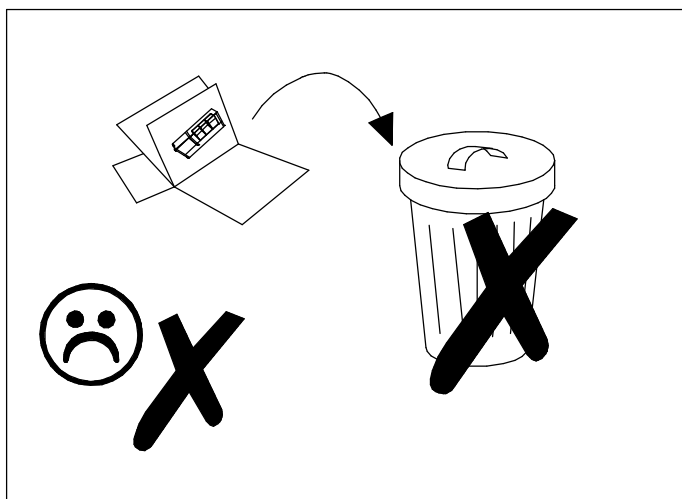


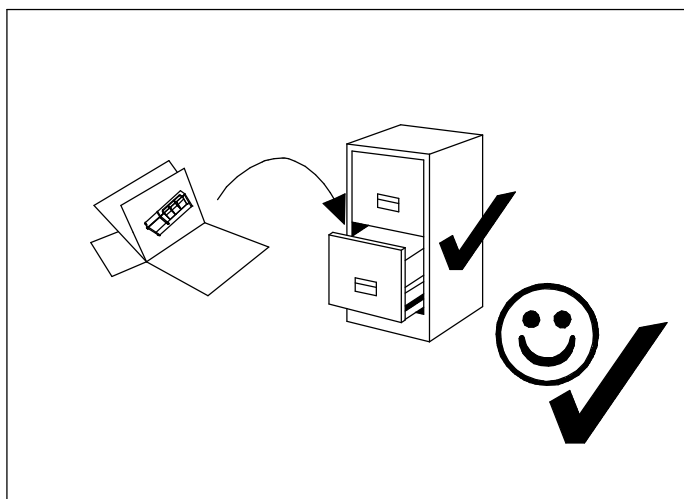








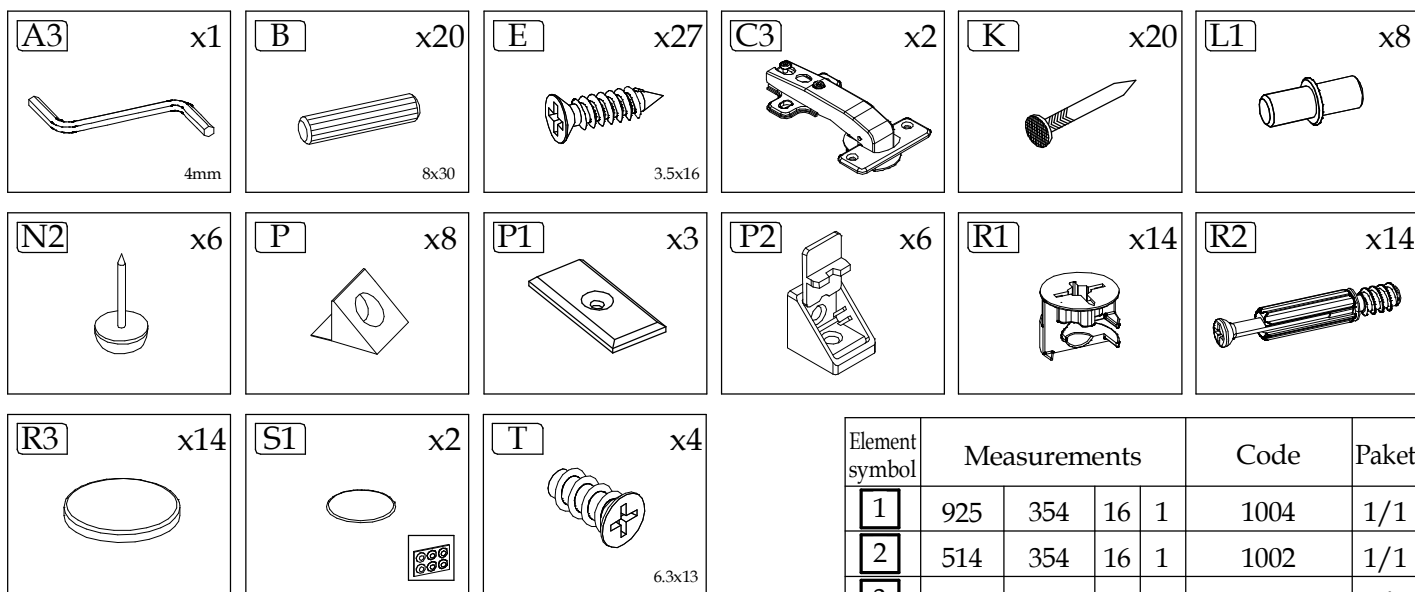


Element symbol	Measurements				Code	Paket
	1	2	3	4		
1	925	354	16	1	1004	1/1
2	514	354	16	1	1002	1/1
3	514	354	16	1	1003	1/1
4	891	334	16	1	1005-2005	1/1
5	448	333	16	1	1007	1/1
6	300	50	16	1	1039	1/1
7	508	75	16	1	1040	1/1
8	366	333	16	1	N/A	1/1
9	508	333	16	1	N/A	1/1
10	469	381	3	1	N/A	1/1
11	469	524	3	1	N/A	1/1
12	384	458	16	1	1044/3001	1/1
13	477	82	16	1	1045/3002	1/1
14	477	82	16	1	1045/3003	1/1
15	928	57	19	1	1042/3004	1/1
16	920	350	30	1	SOFT SEAT	1/1

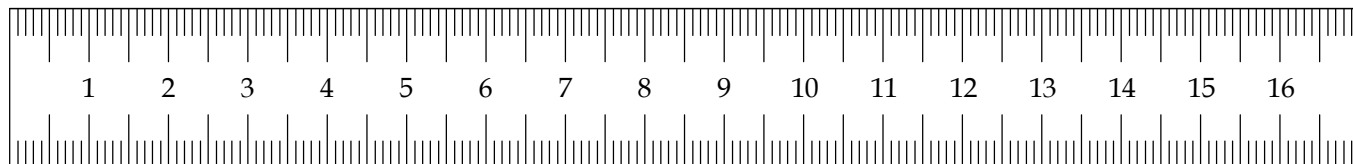
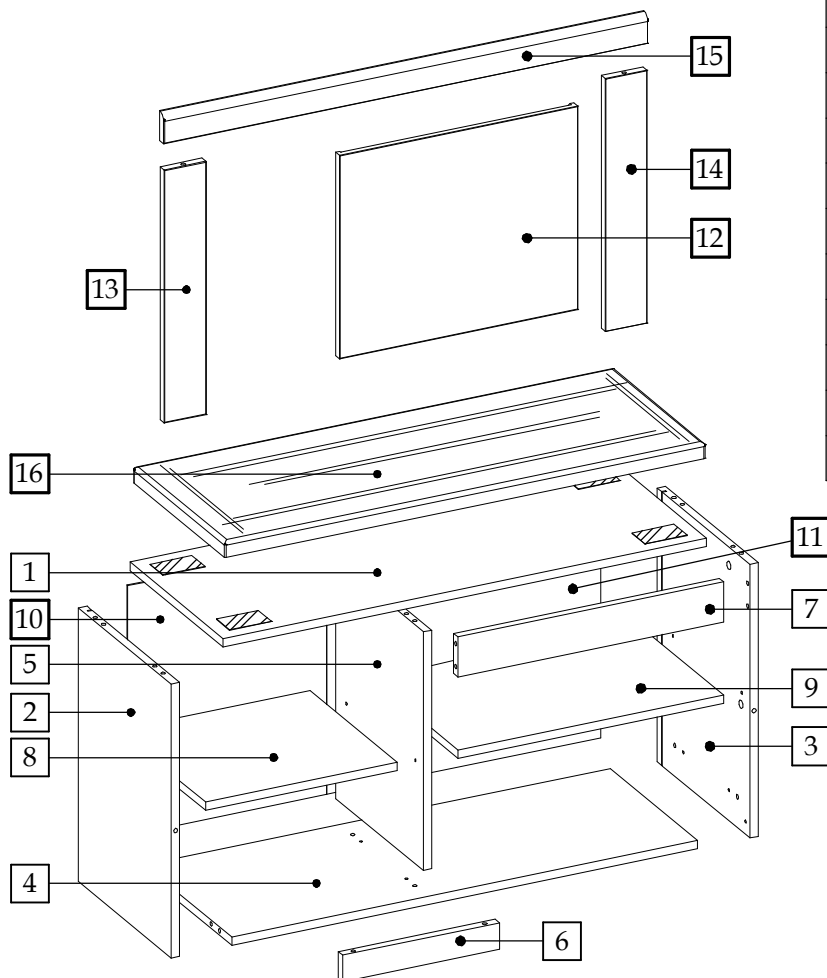


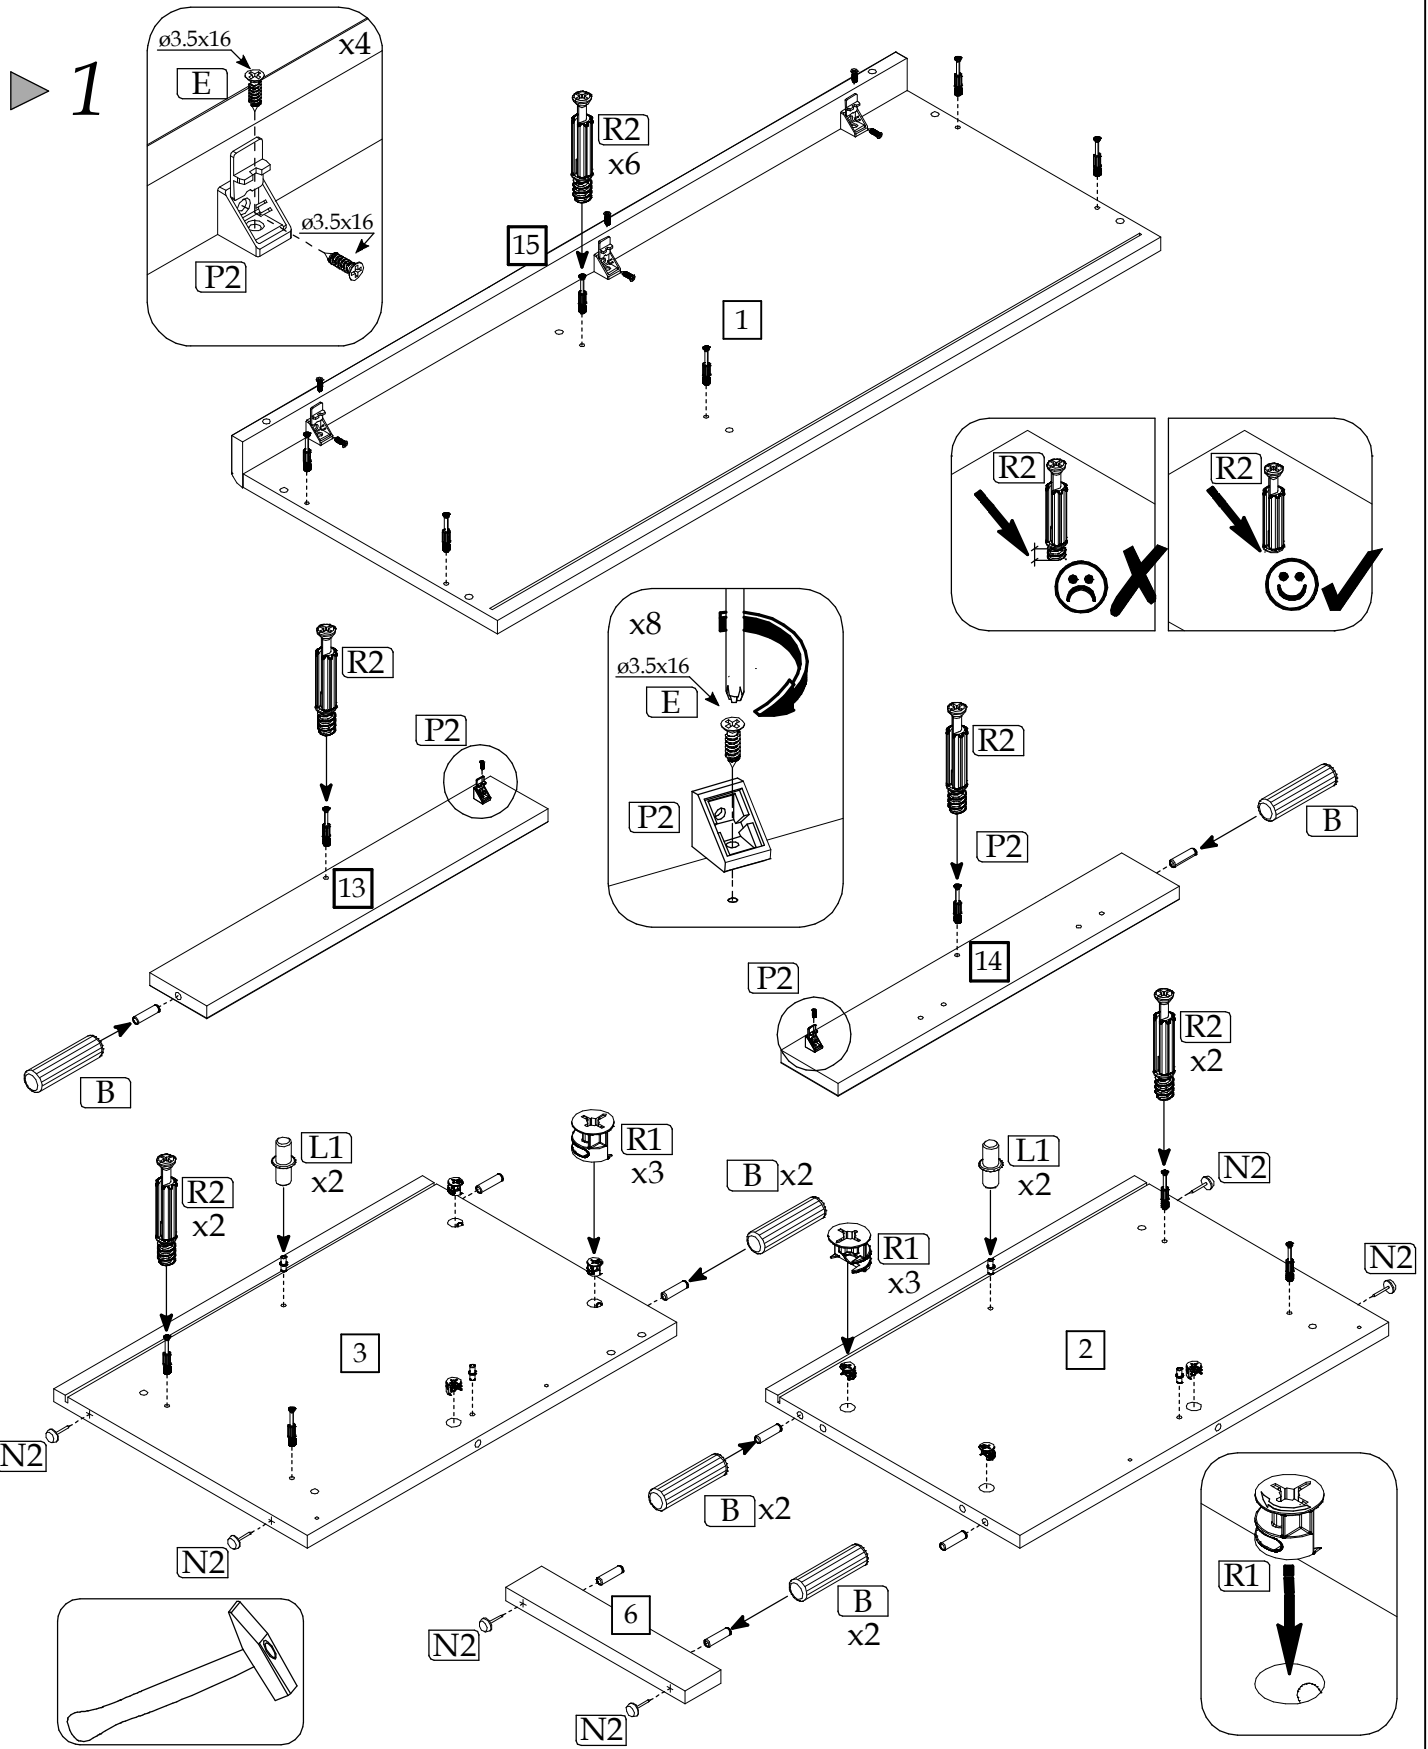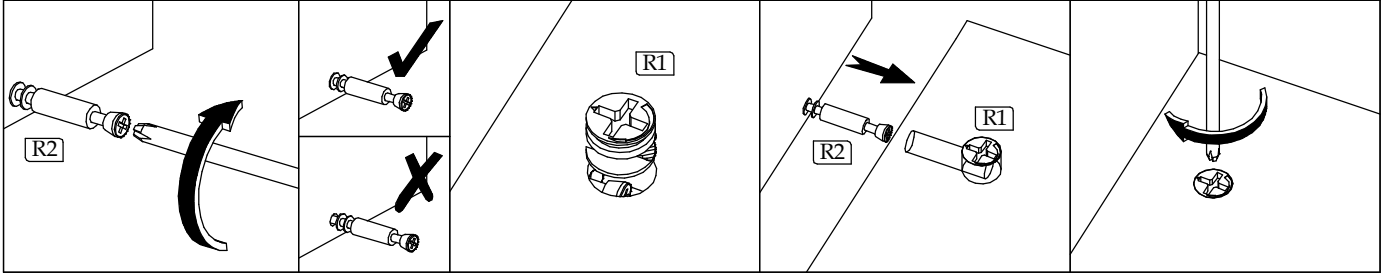



▶ 2

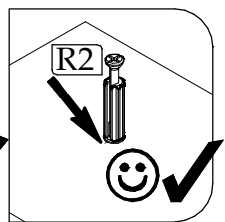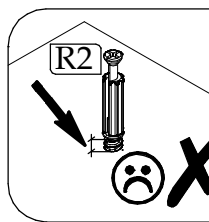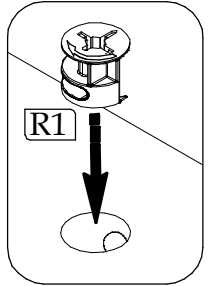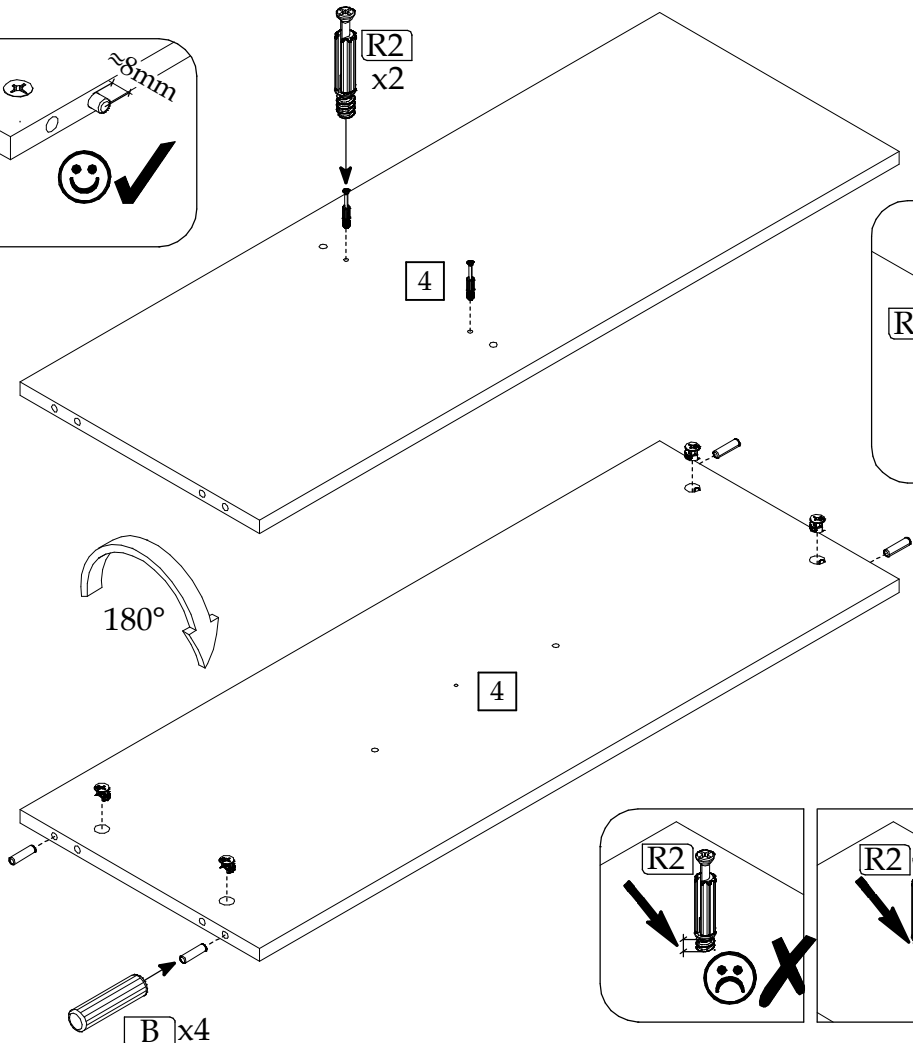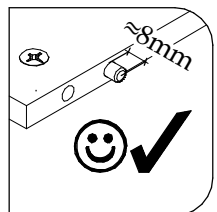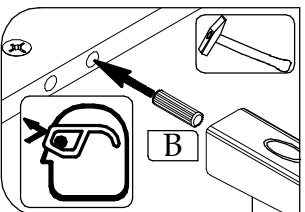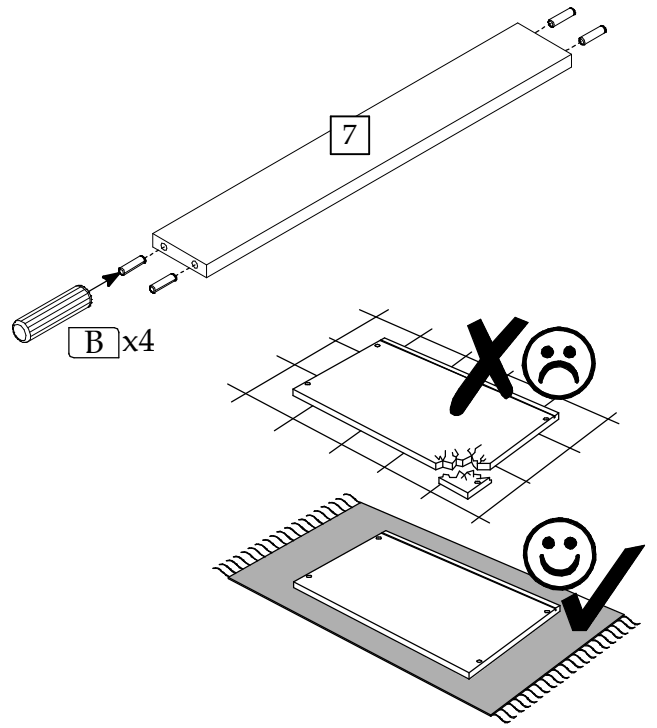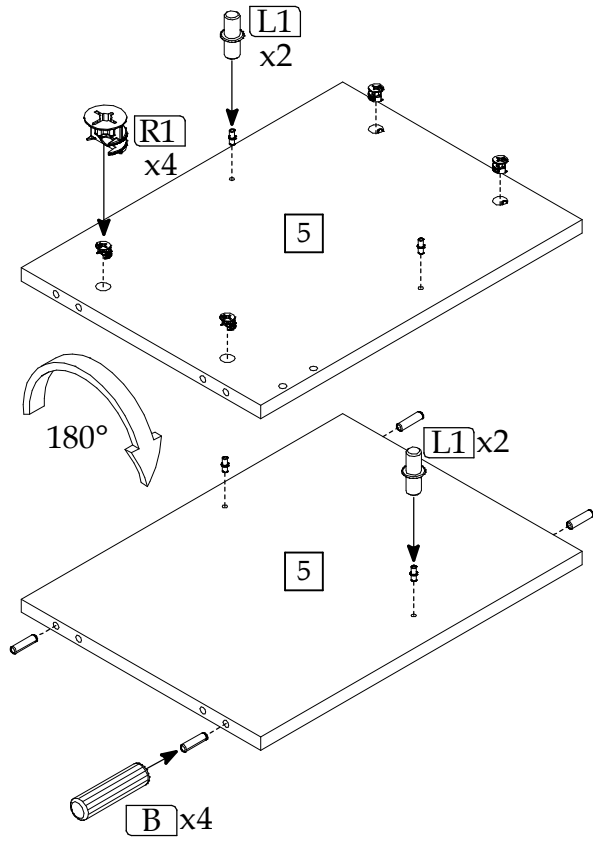


▶ 3

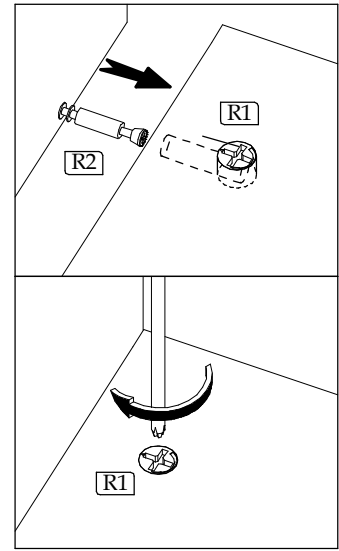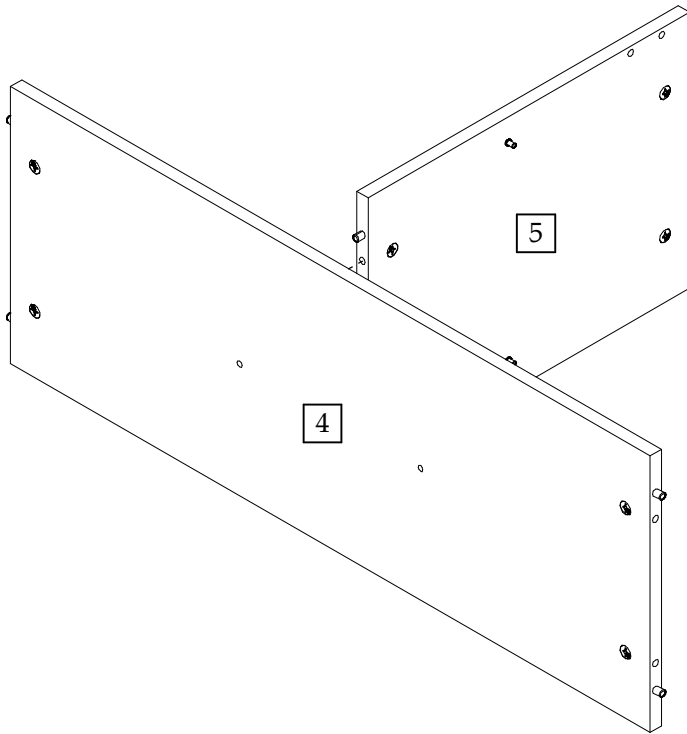


▶ 4

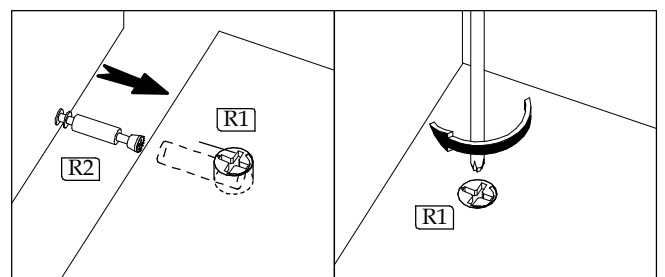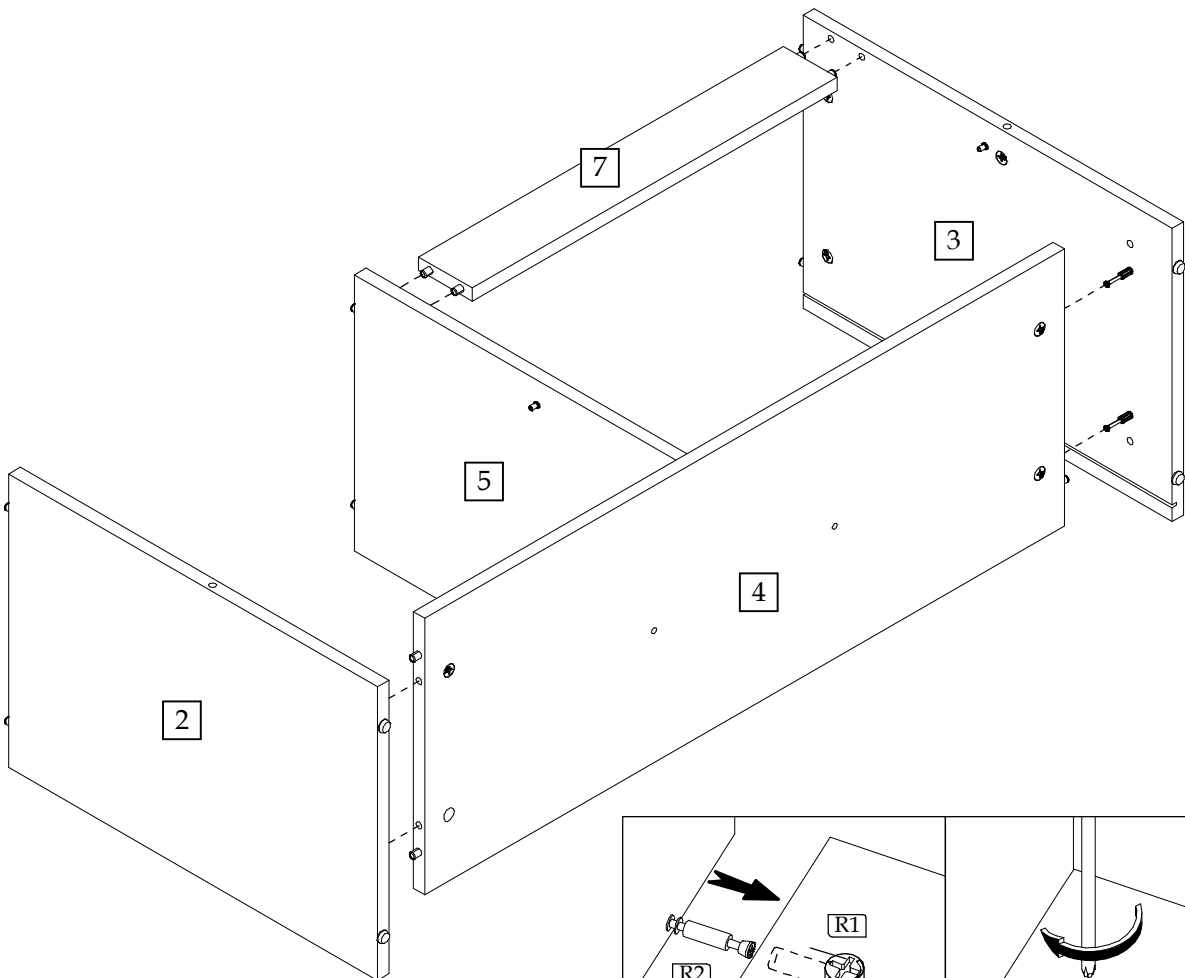


▶ 5

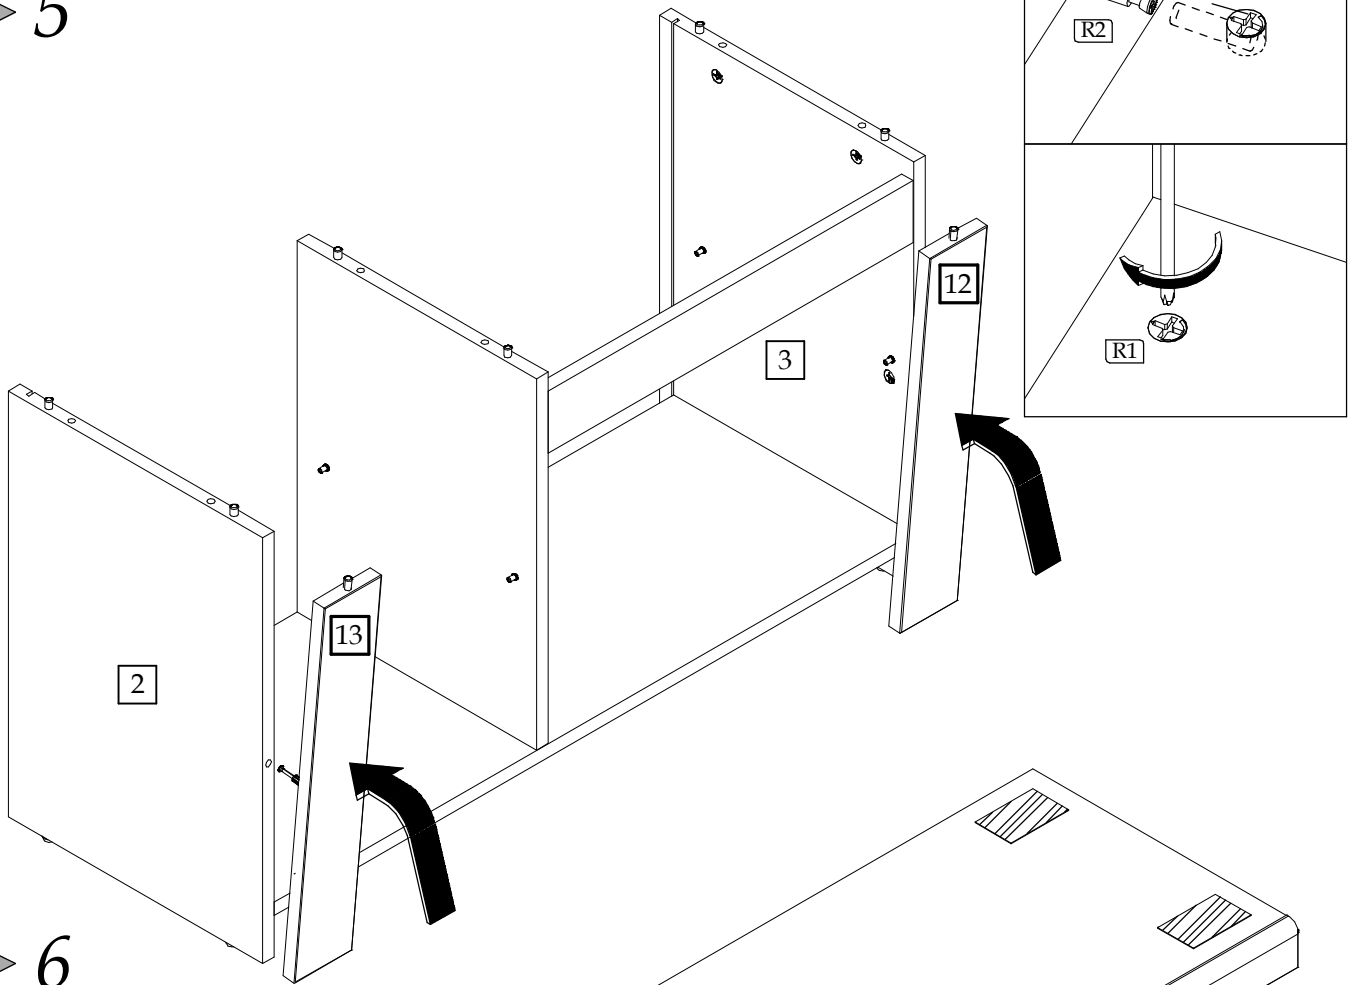


▶ 6

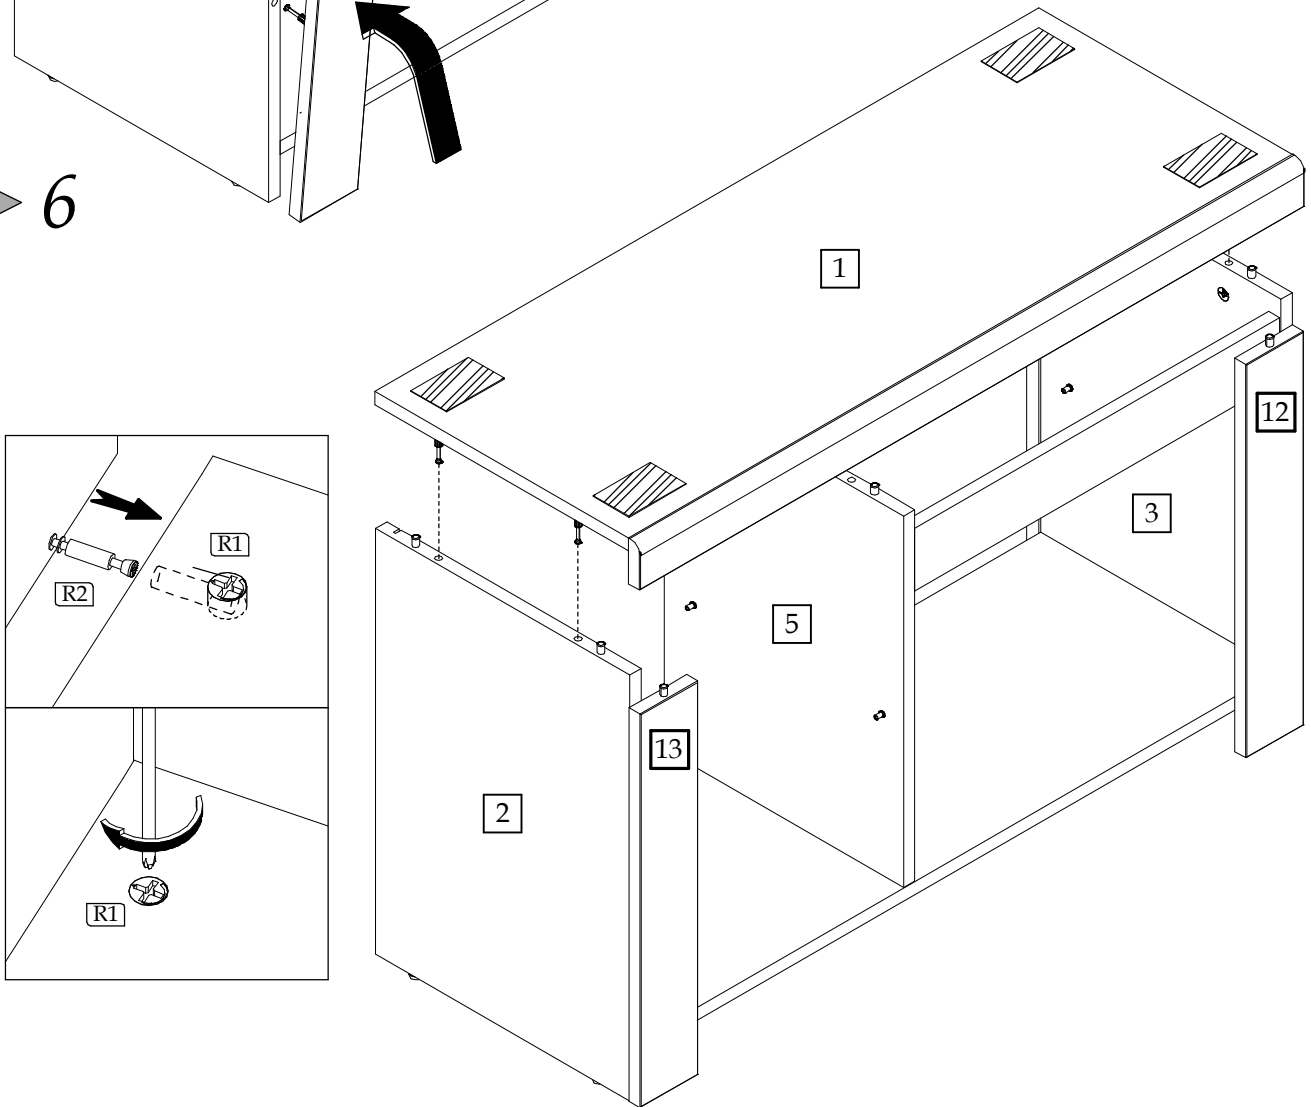

▶ 7

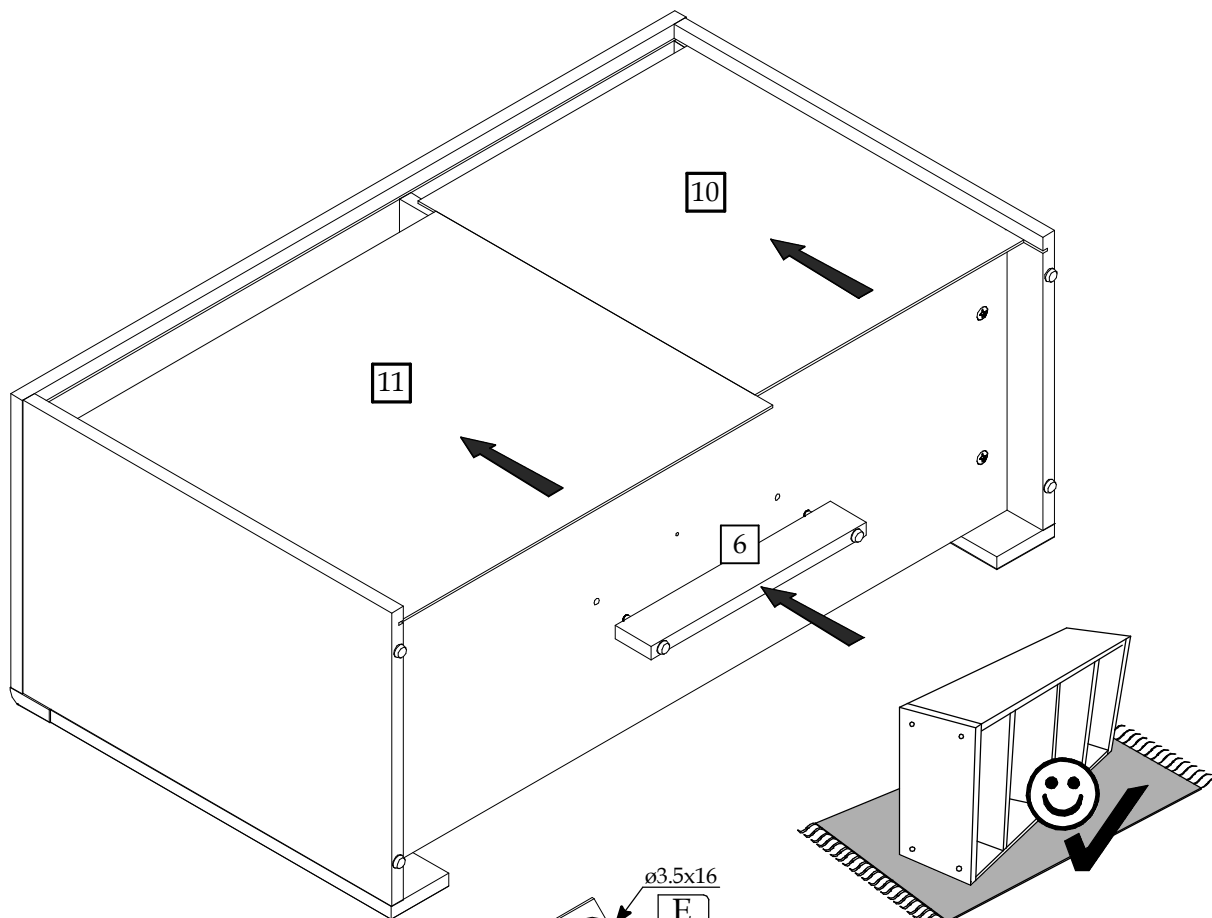


▶ 8

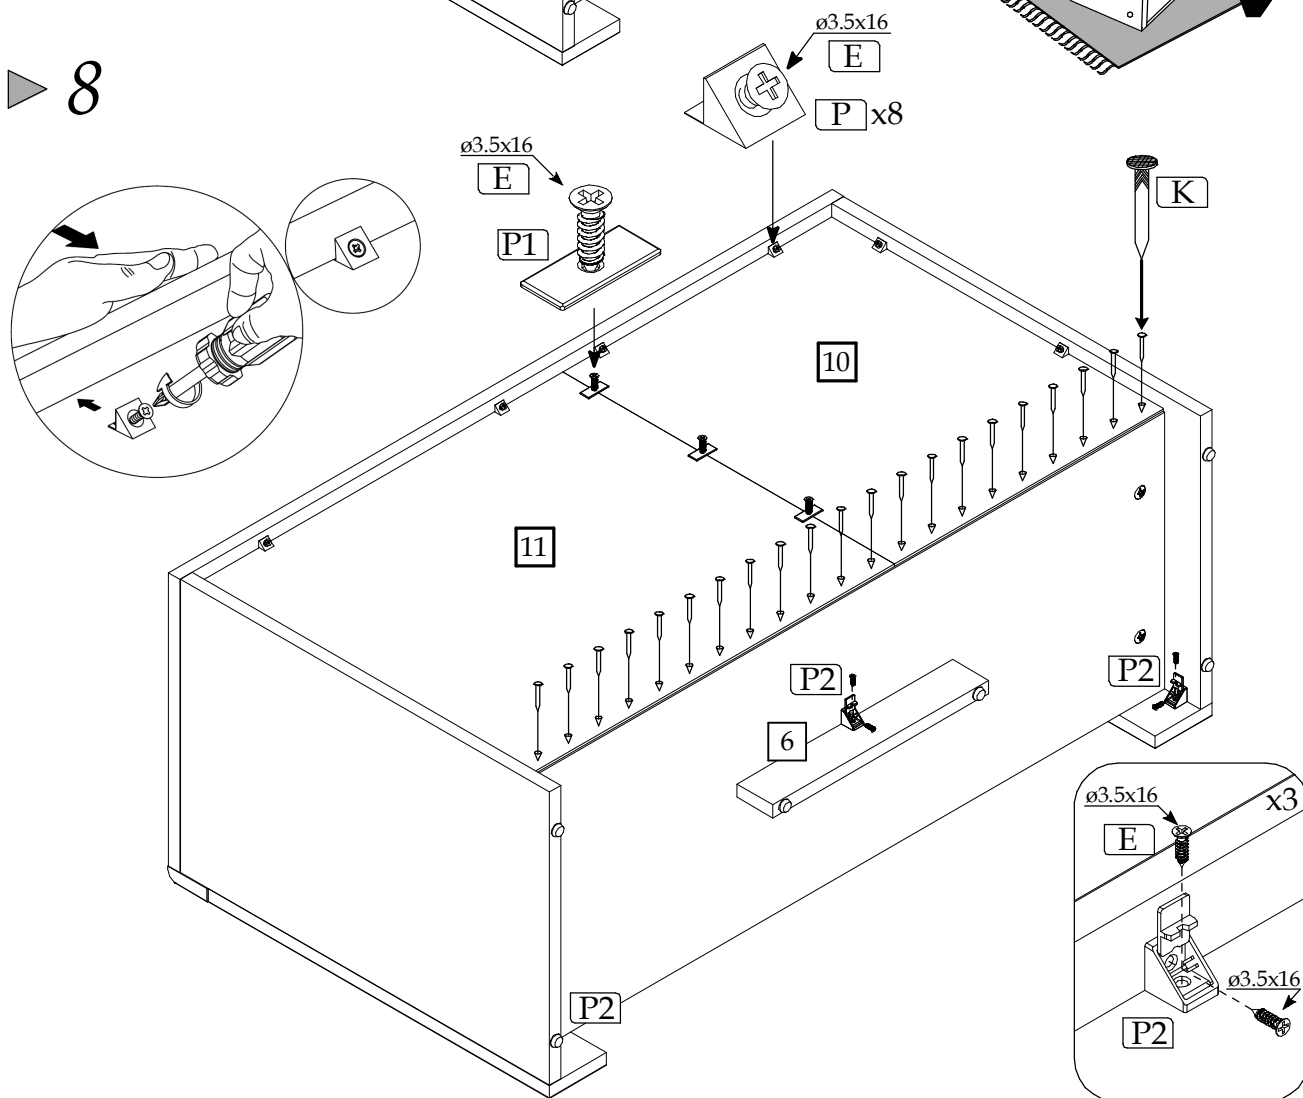







▶ 9

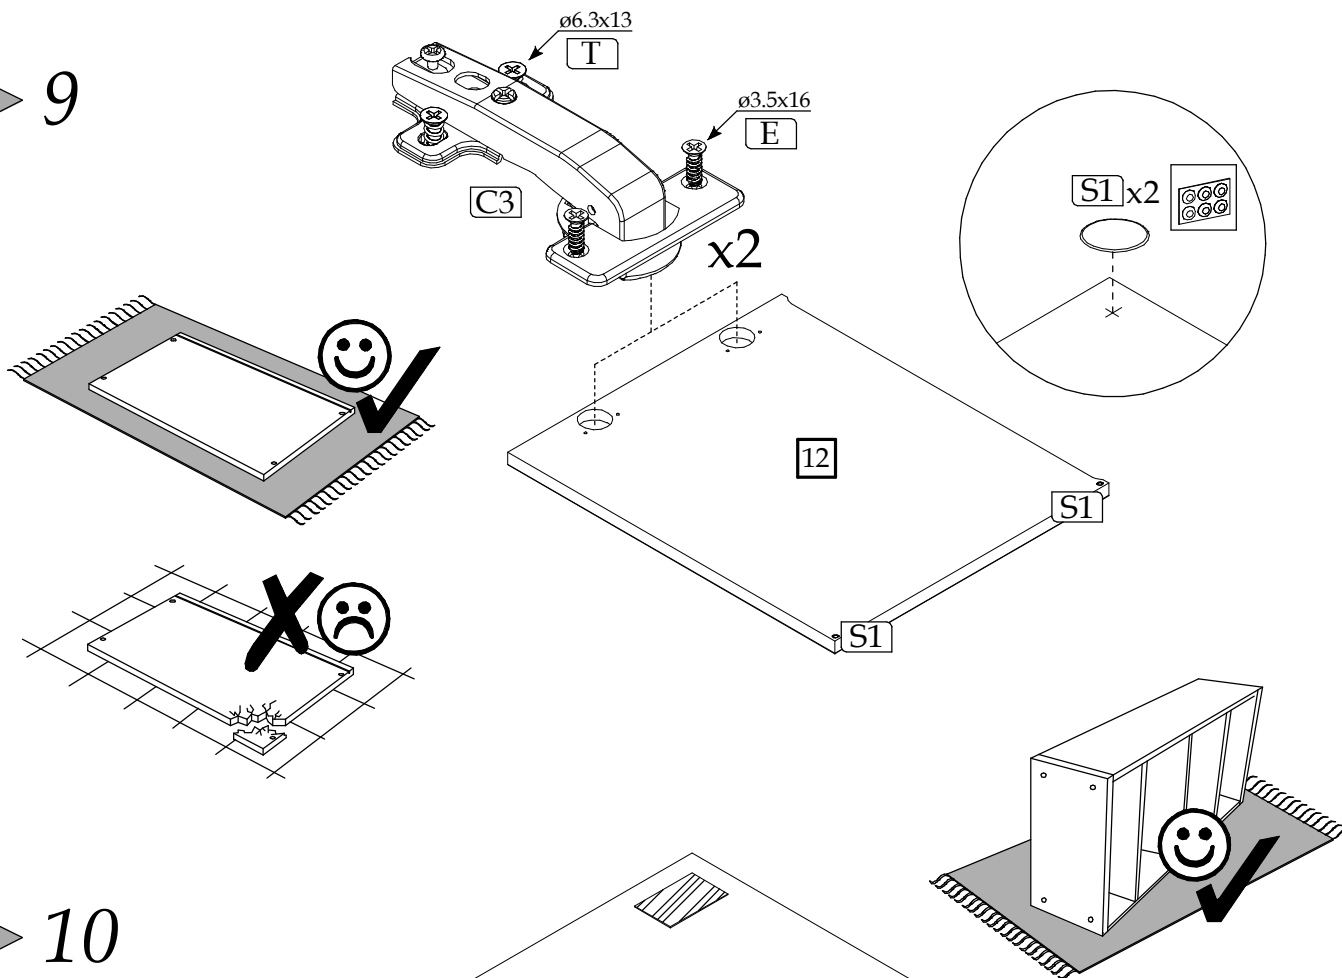

▶ 10

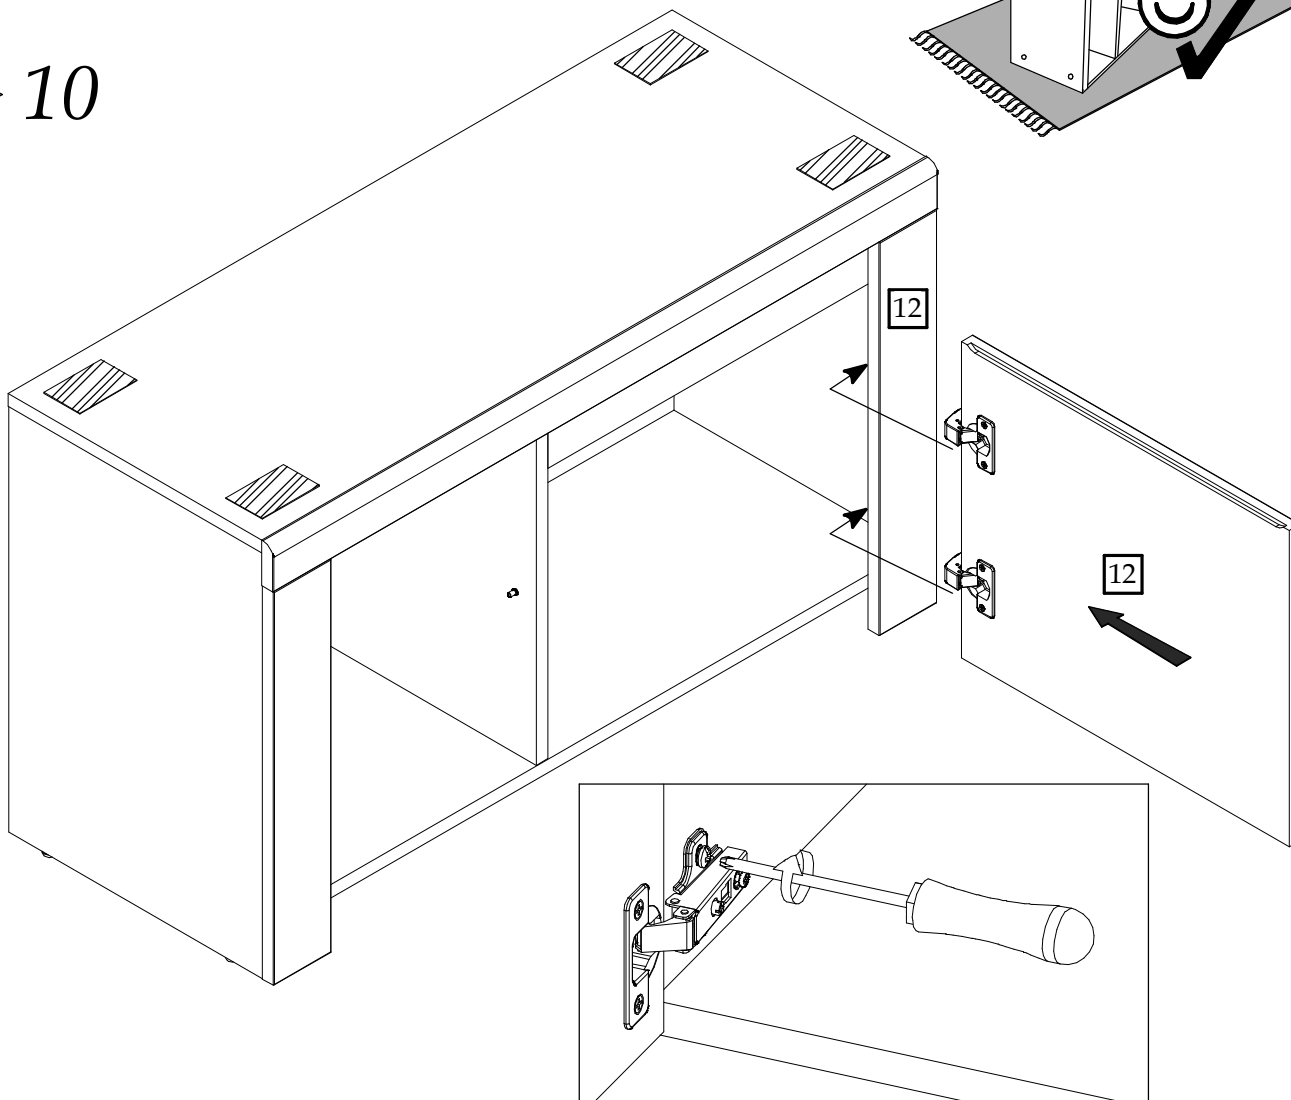

▶ 11

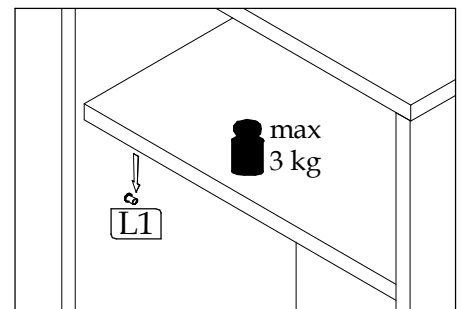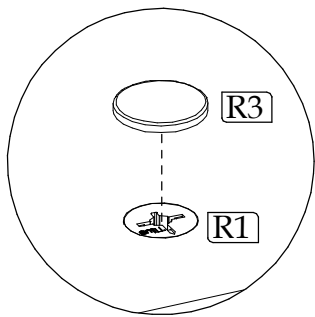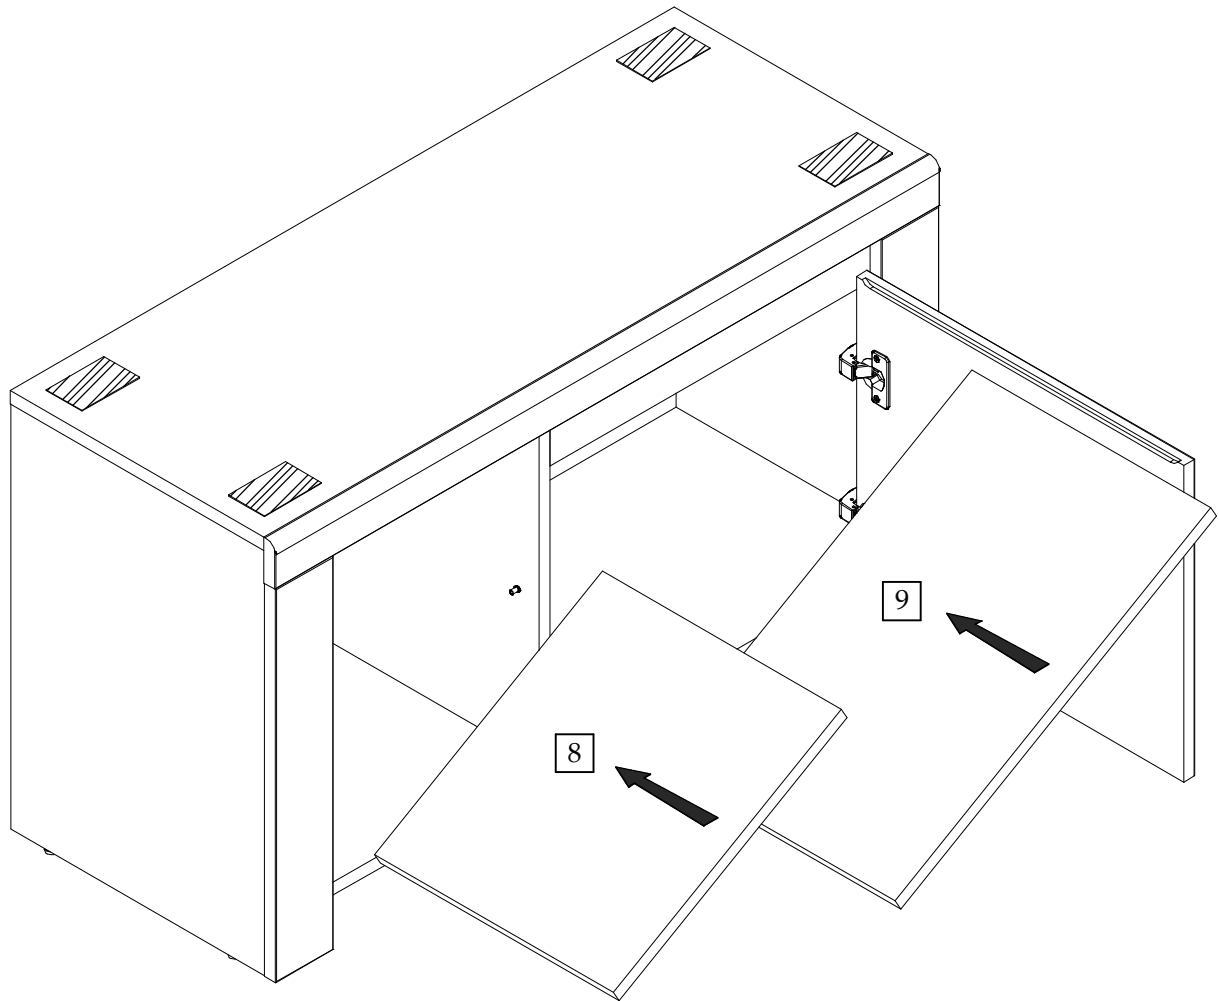

▶ 12

