


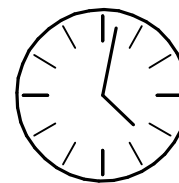
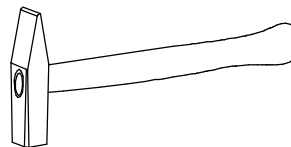
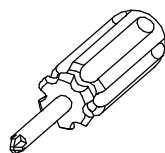
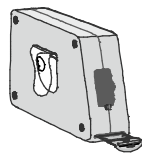
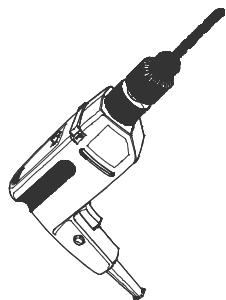
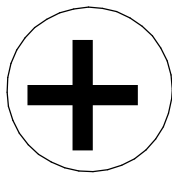
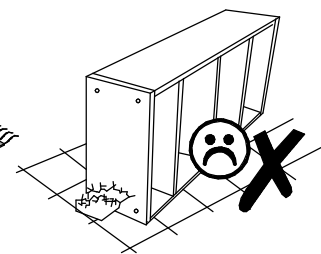
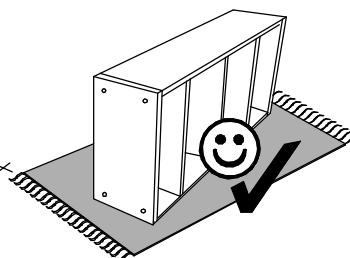
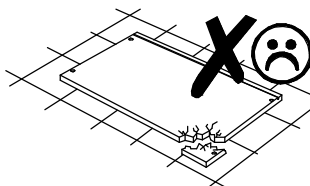
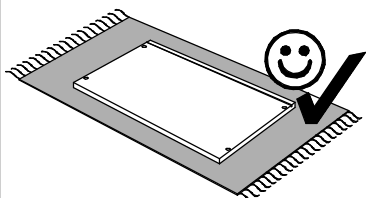
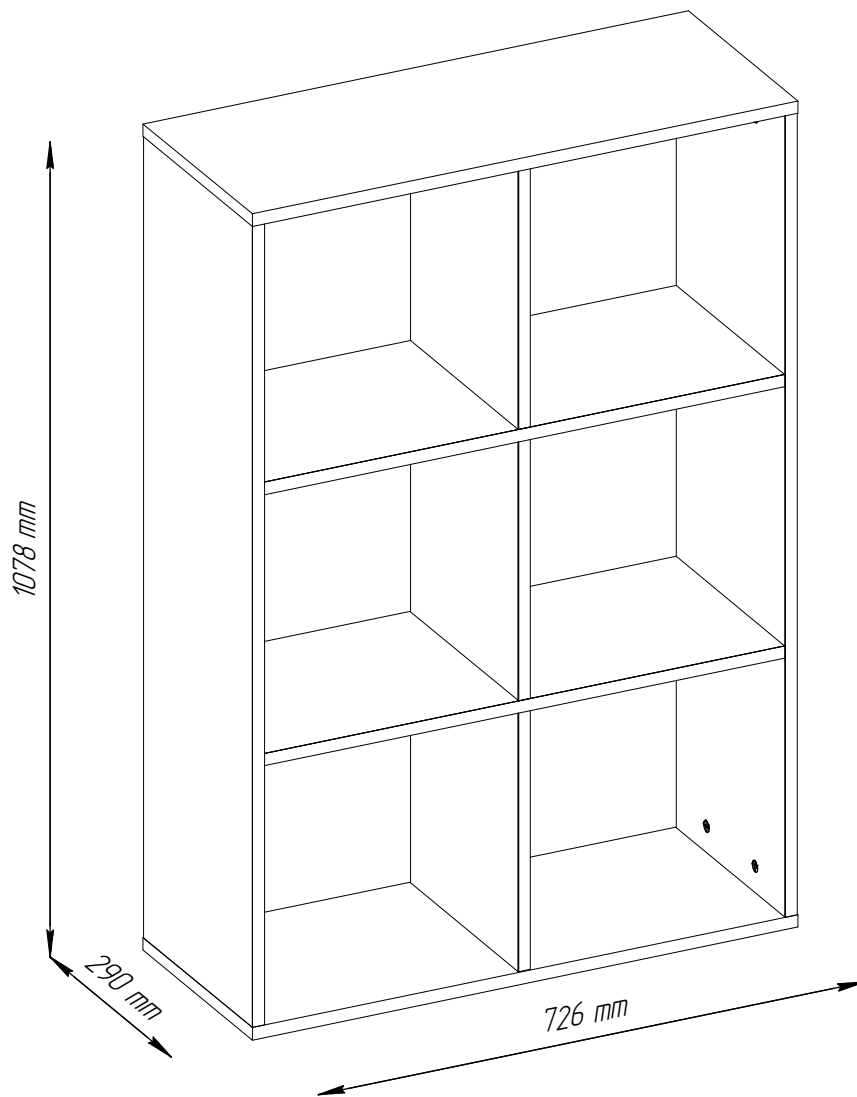
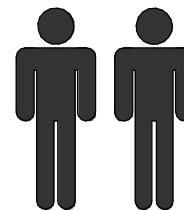
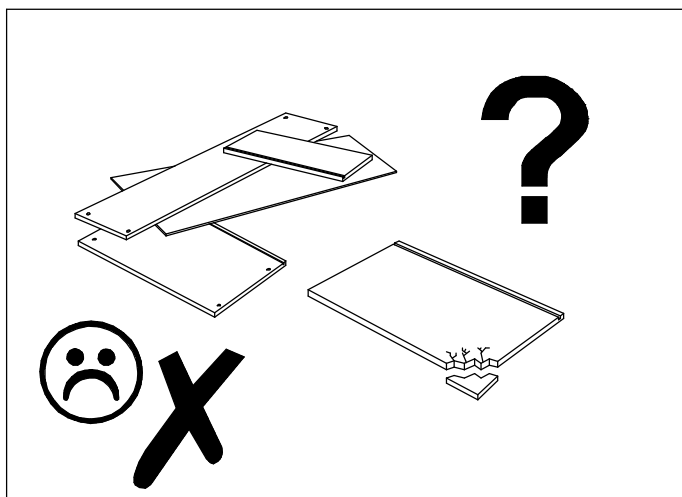
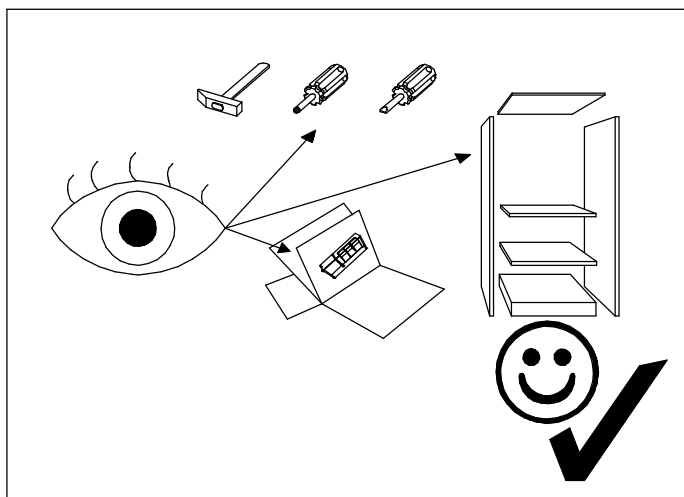
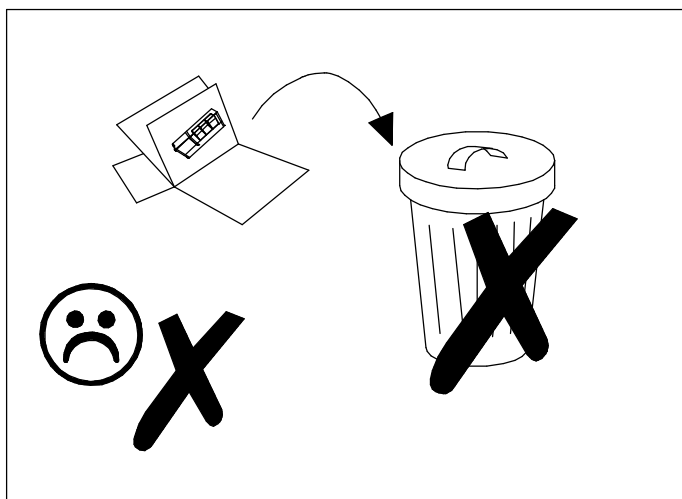



VOYAGE T06

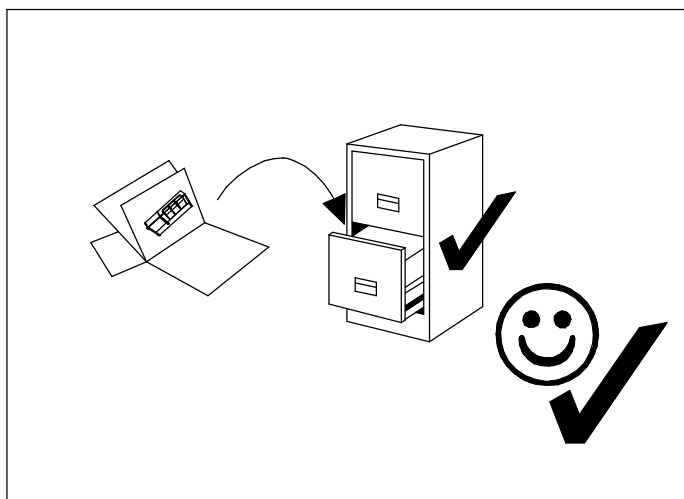




40 min






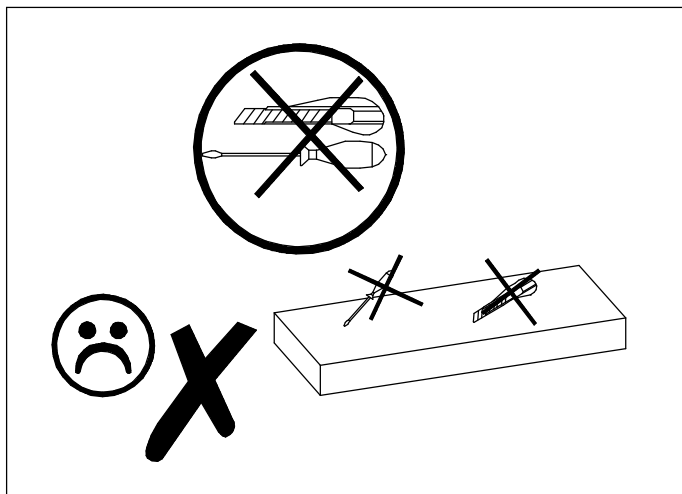


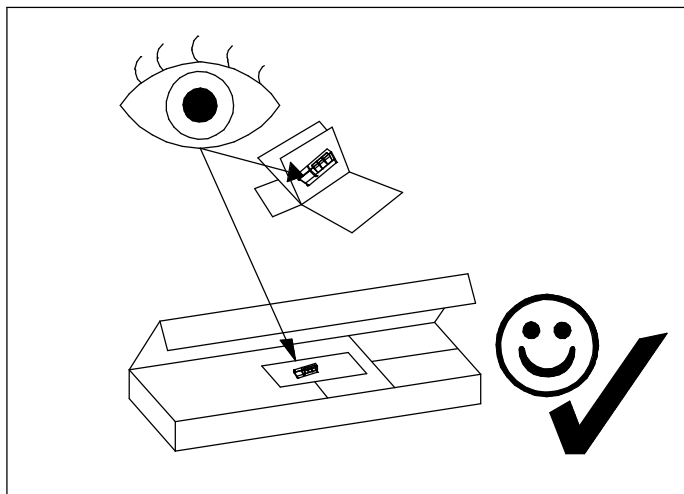


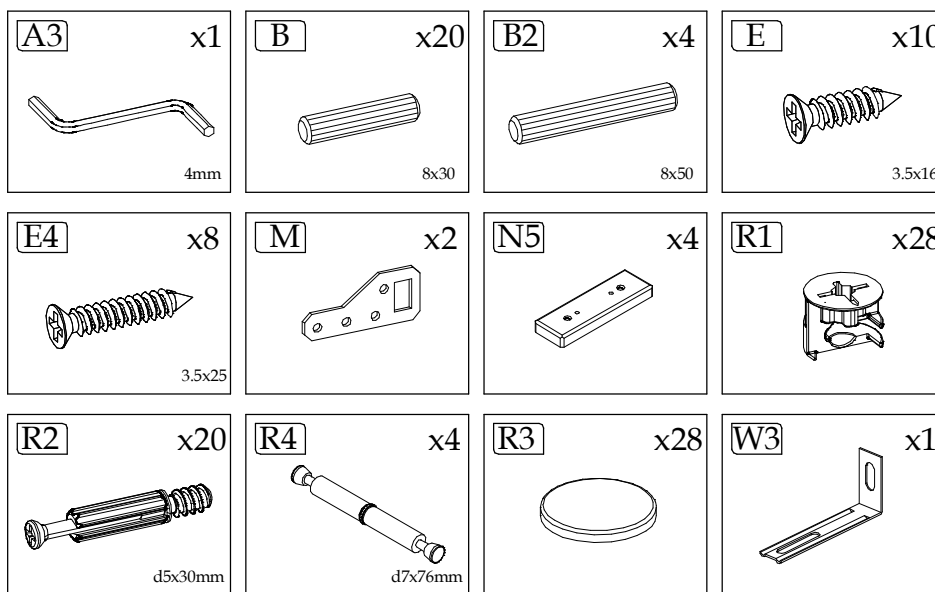


Element symbol	Measurements				Code	Paket
	1	2	3	4		
1	1046	291	16	1	1001	1/1
2	1046	291	16	1	1002	1/1
3	726	292	16	1	1003	1/1
4	726	292	16	1	1004	1/1
5	692	290	16	1	1019	1/1
6	692	290	16	1	1020	1/1
7	338	289	16	1	1021	1/1
8	338	289	16	1	1022	1/1
9	338	289	16	1	1023	1/1

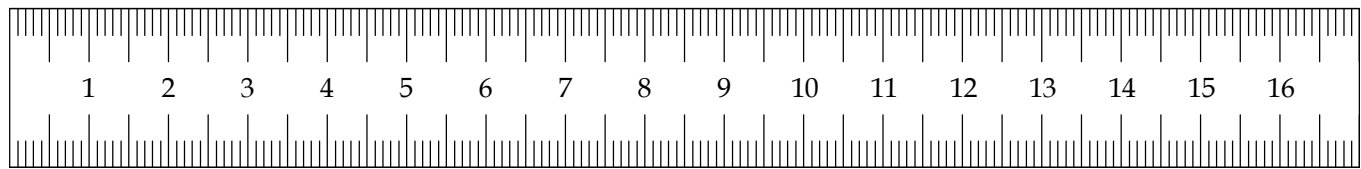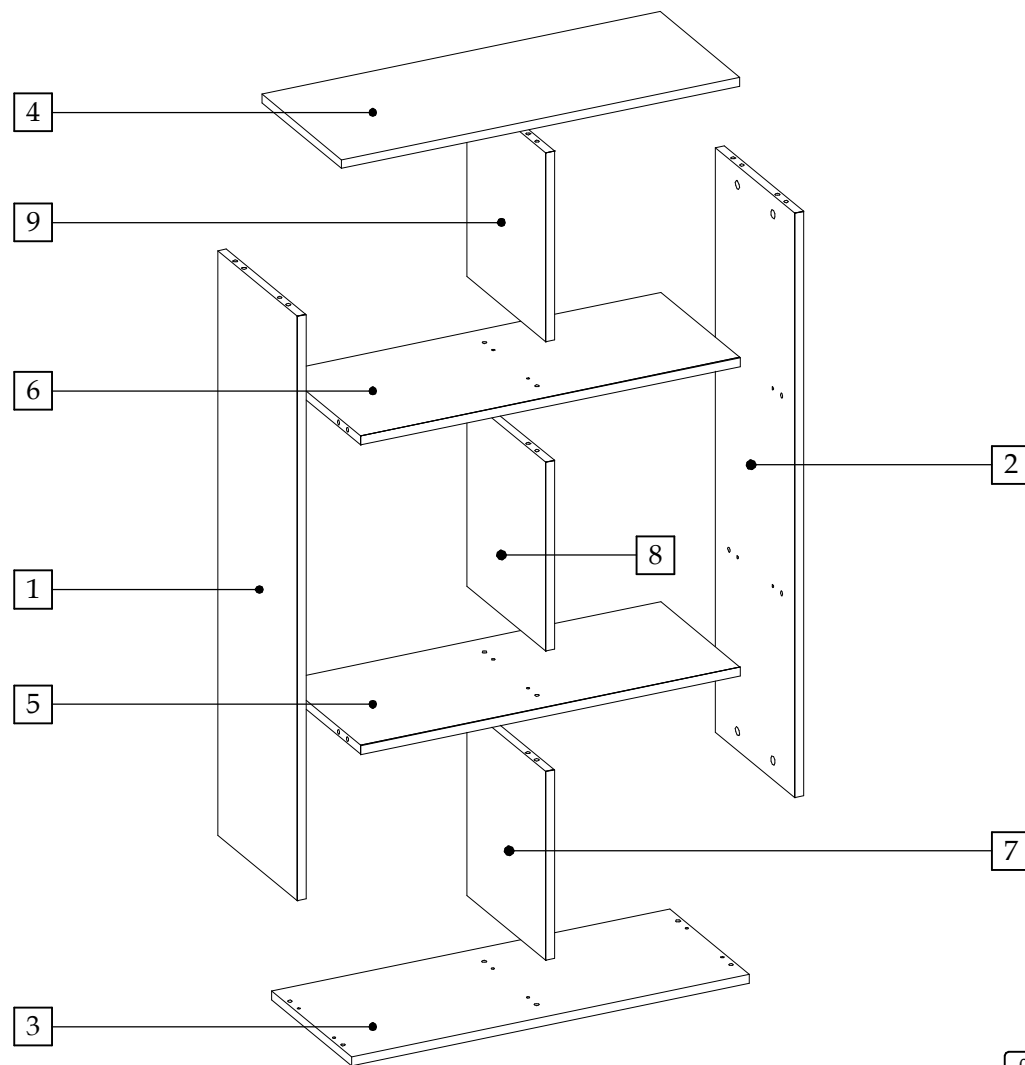

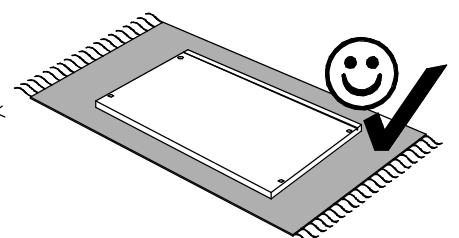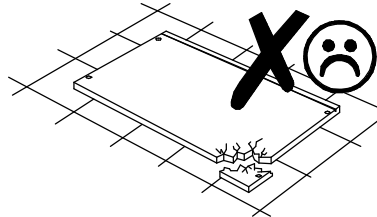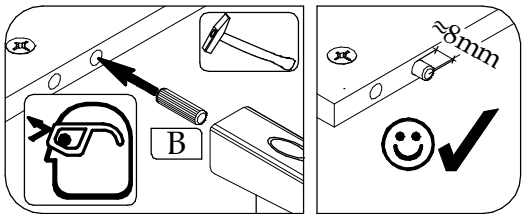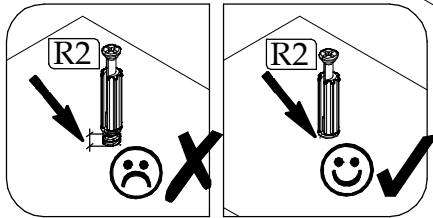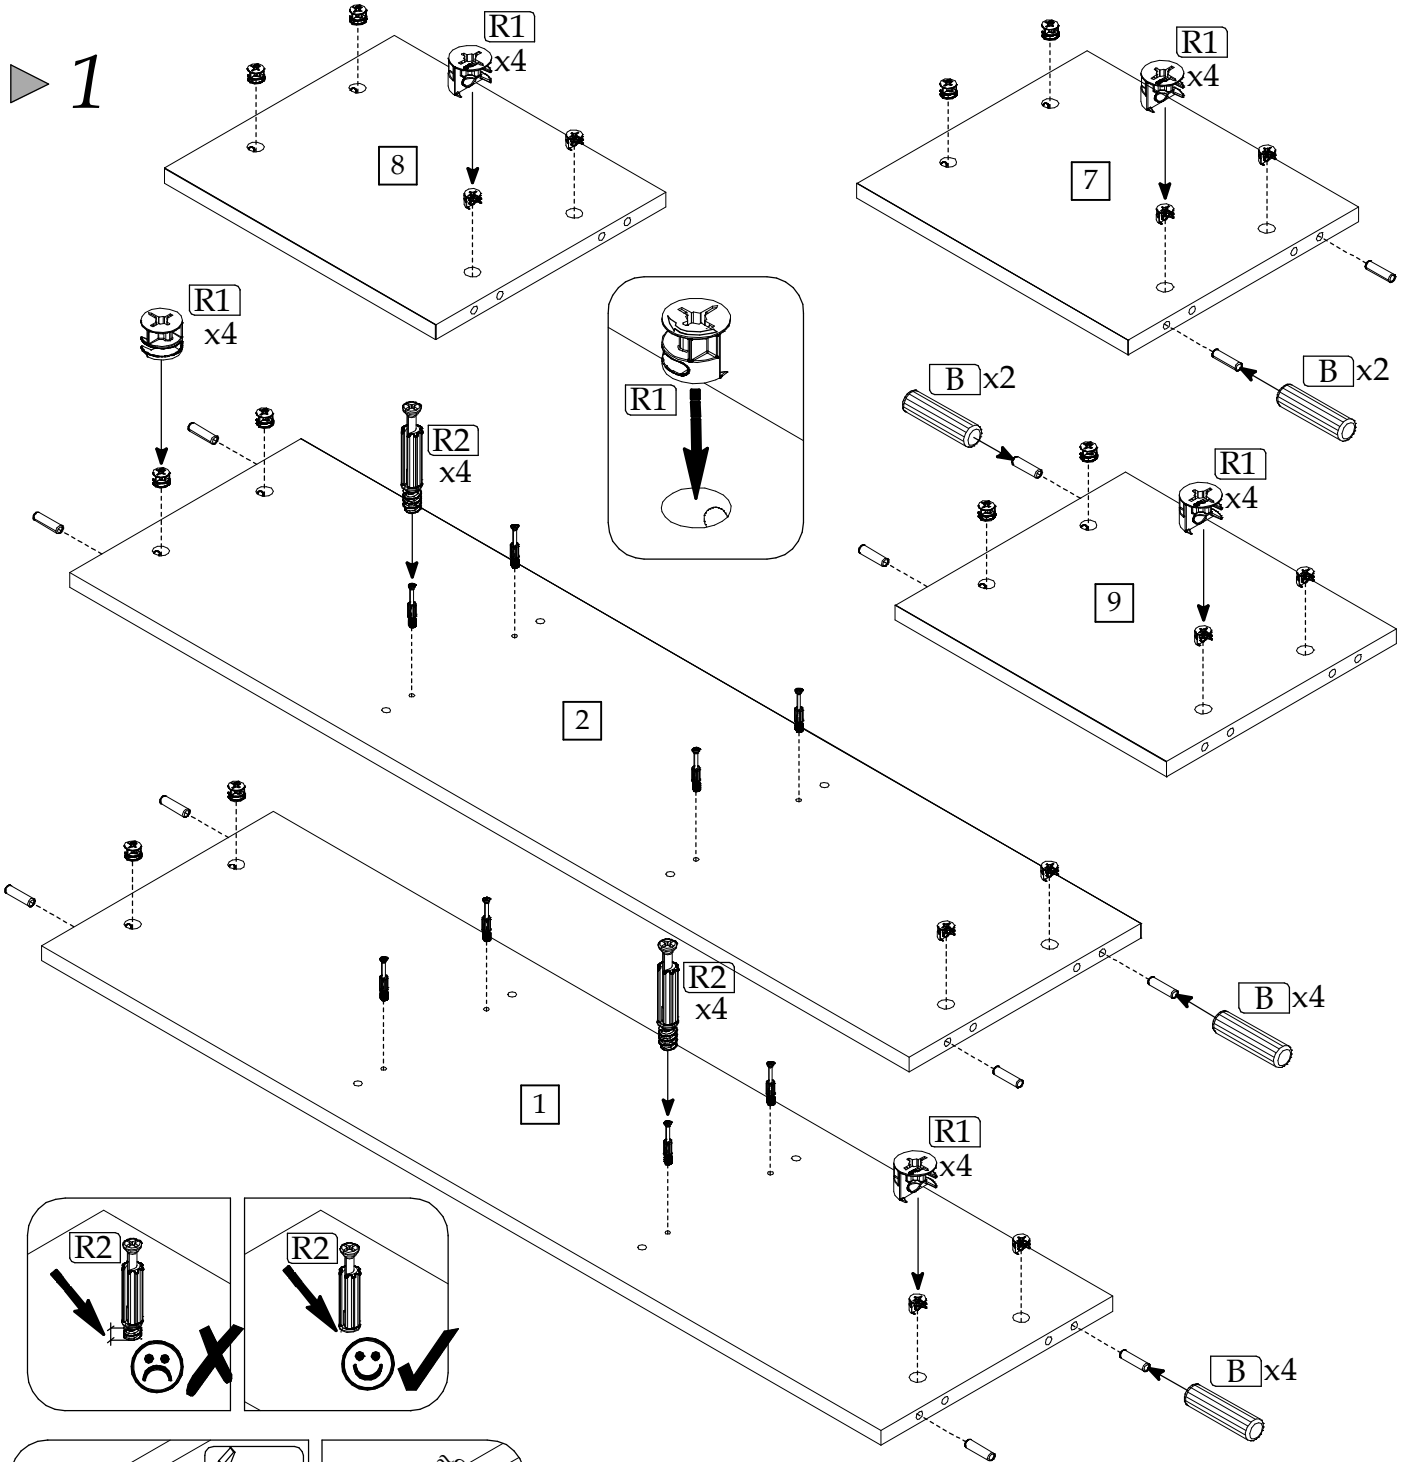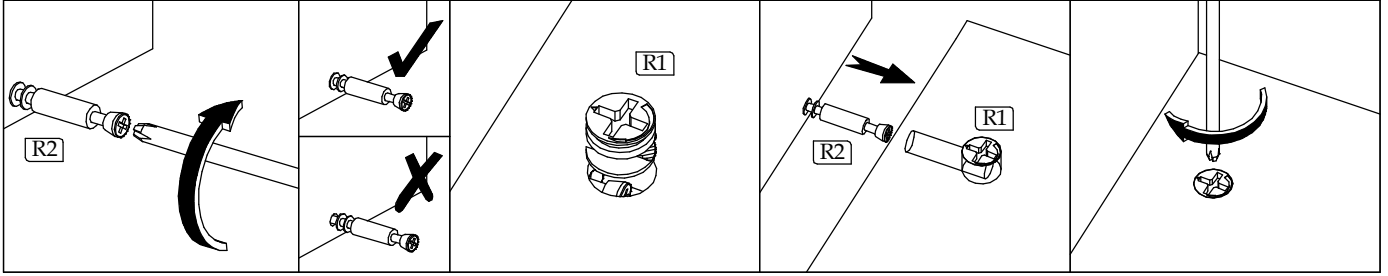


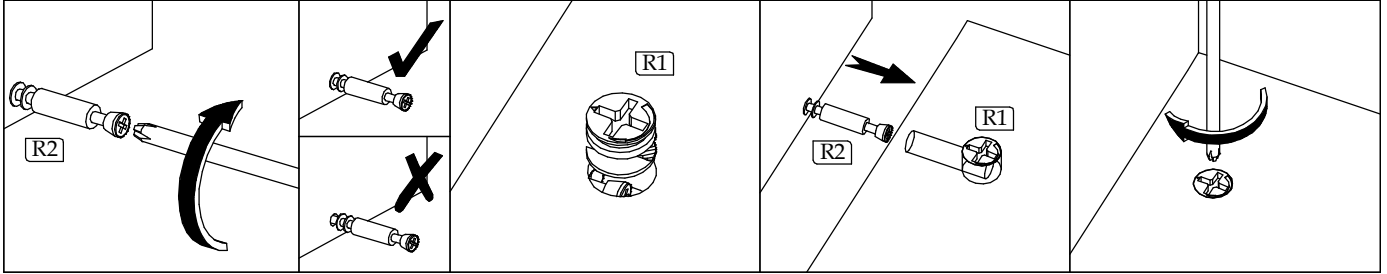


2

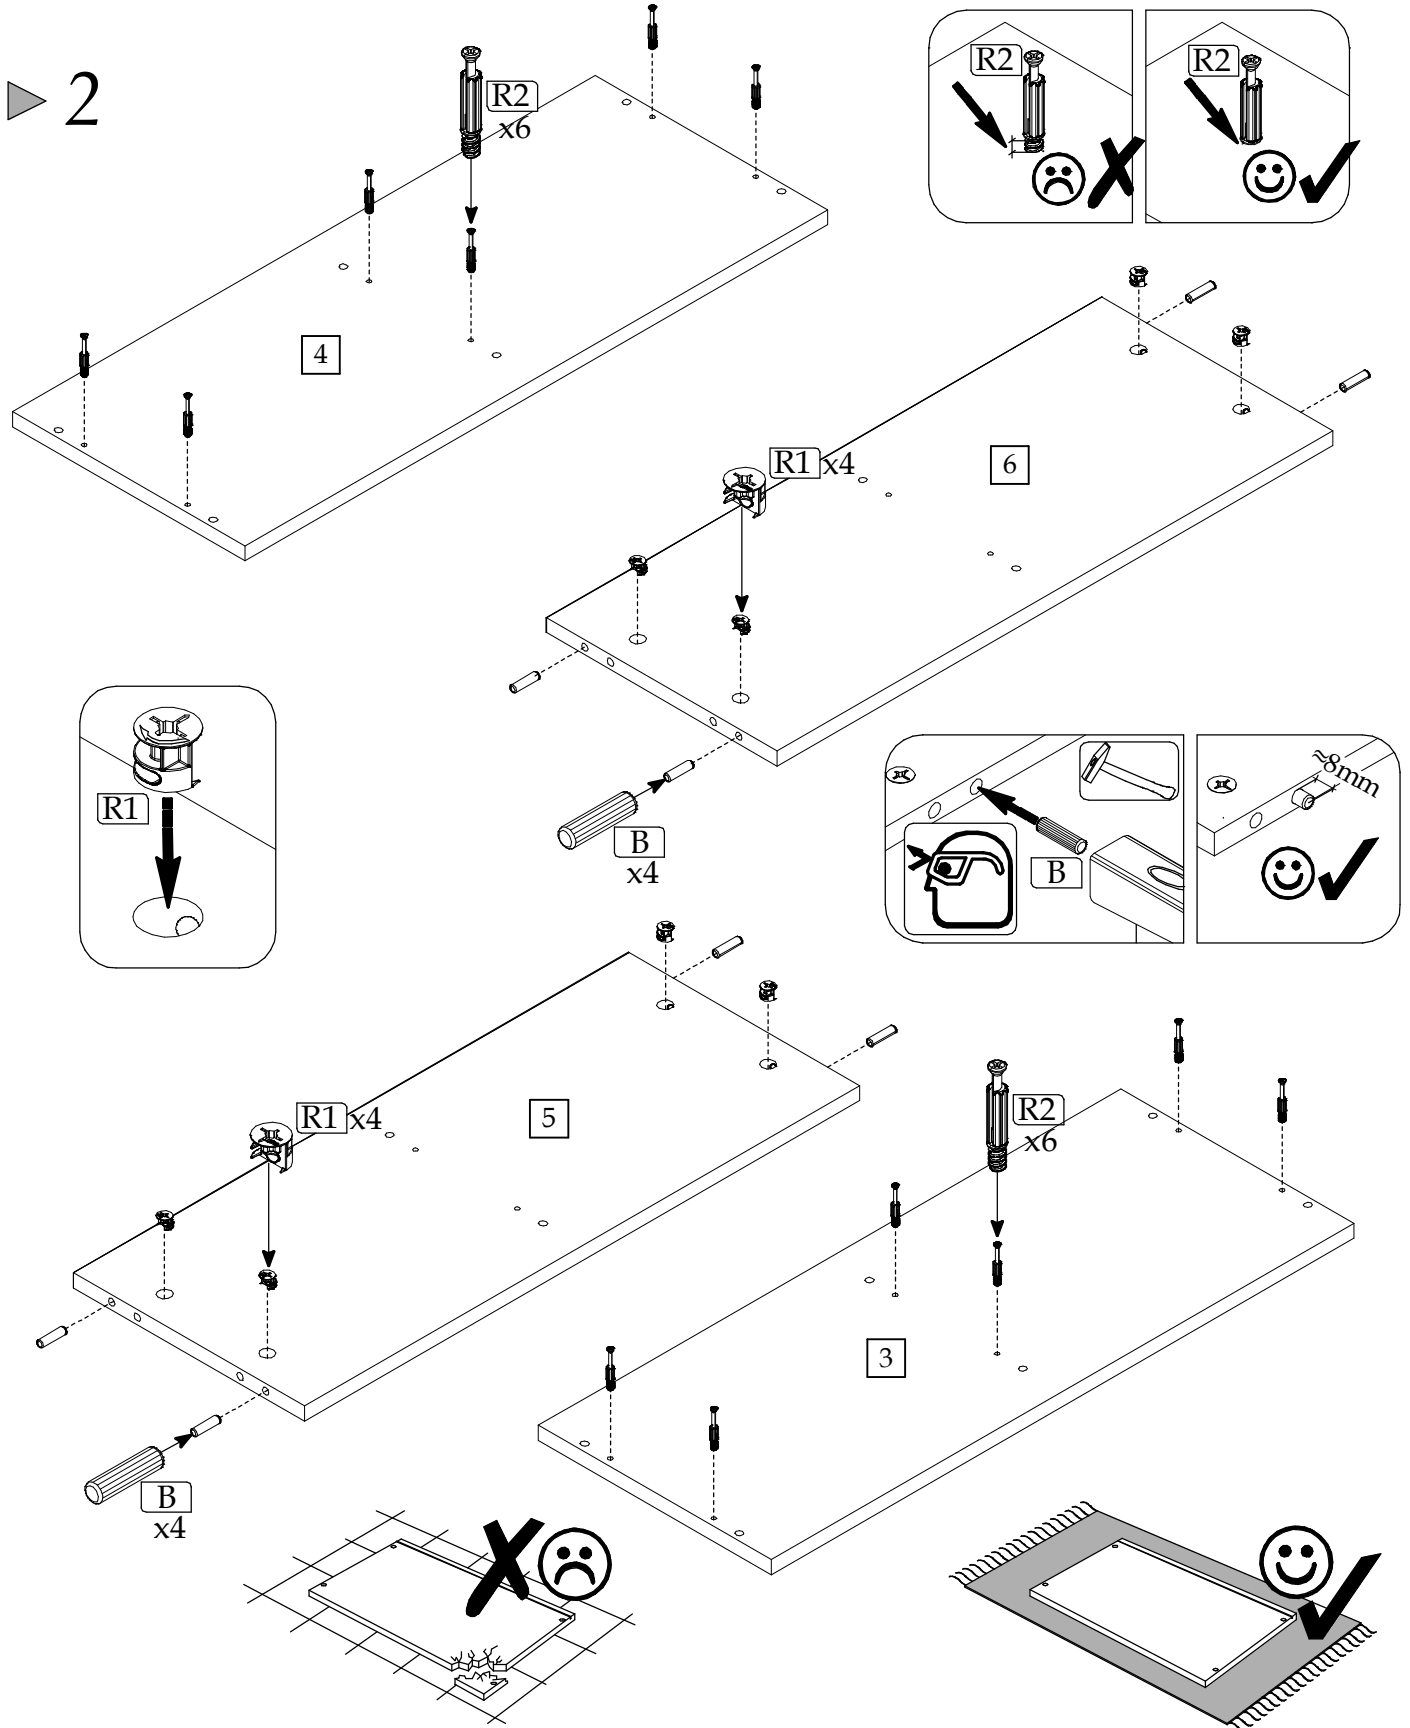




▶ 3

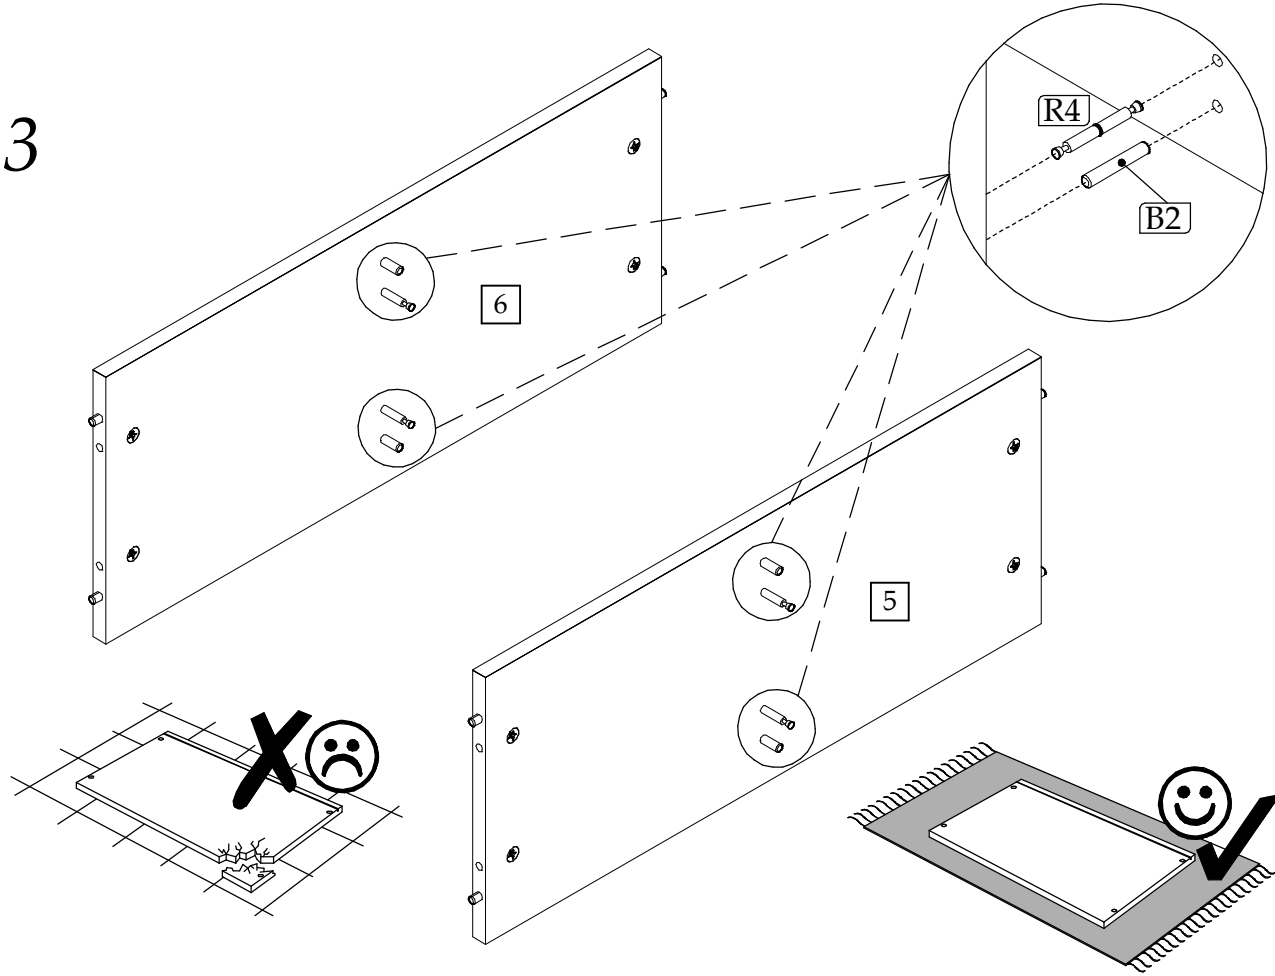



▶ 4

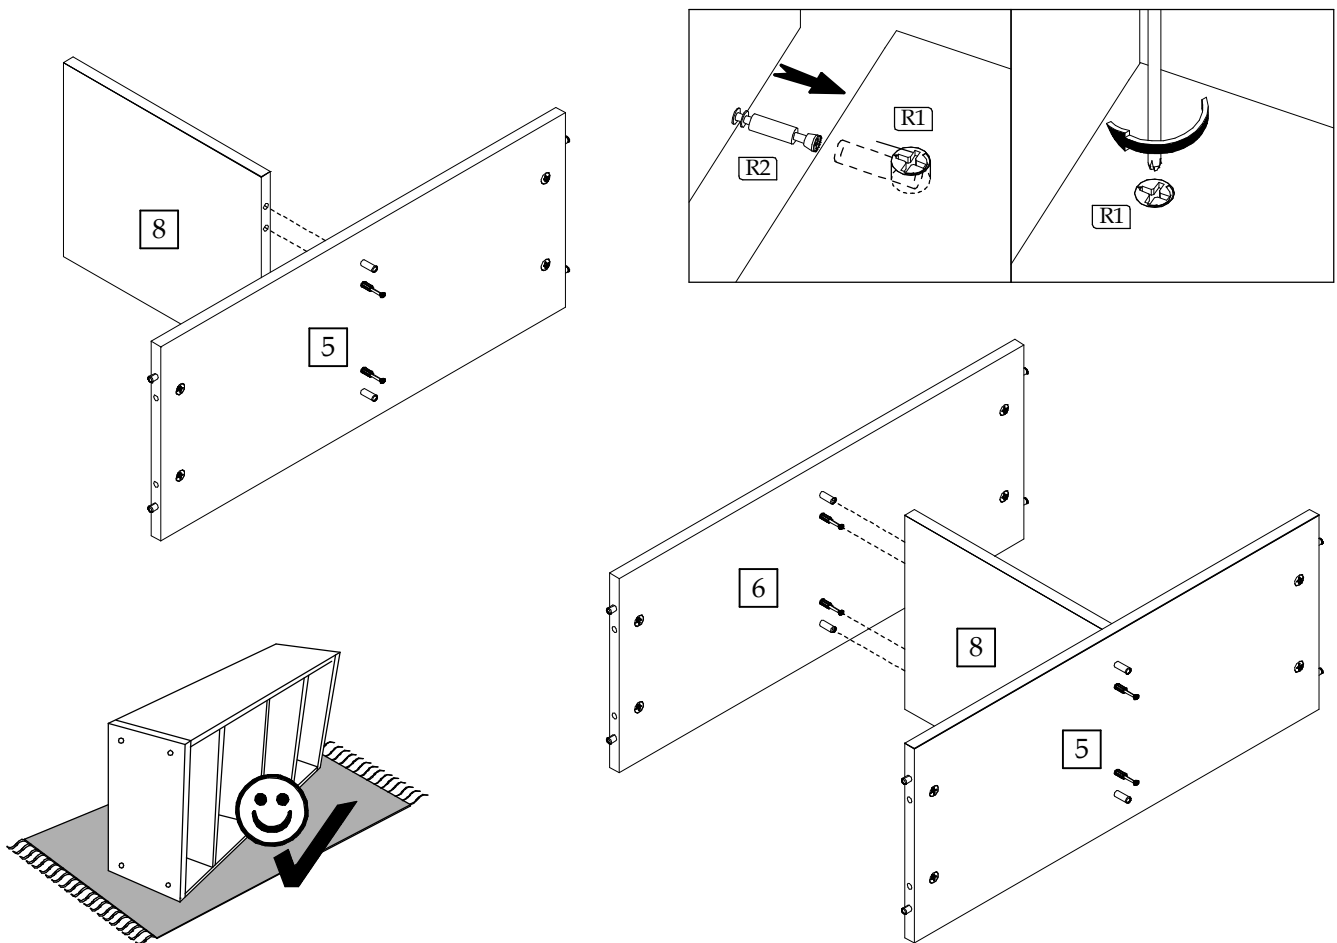





▶ 5

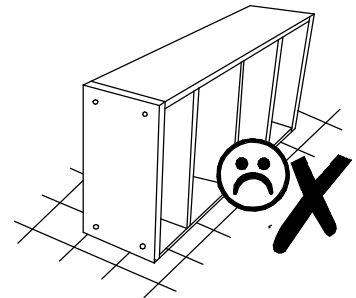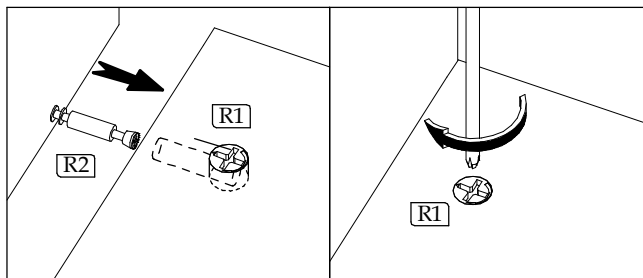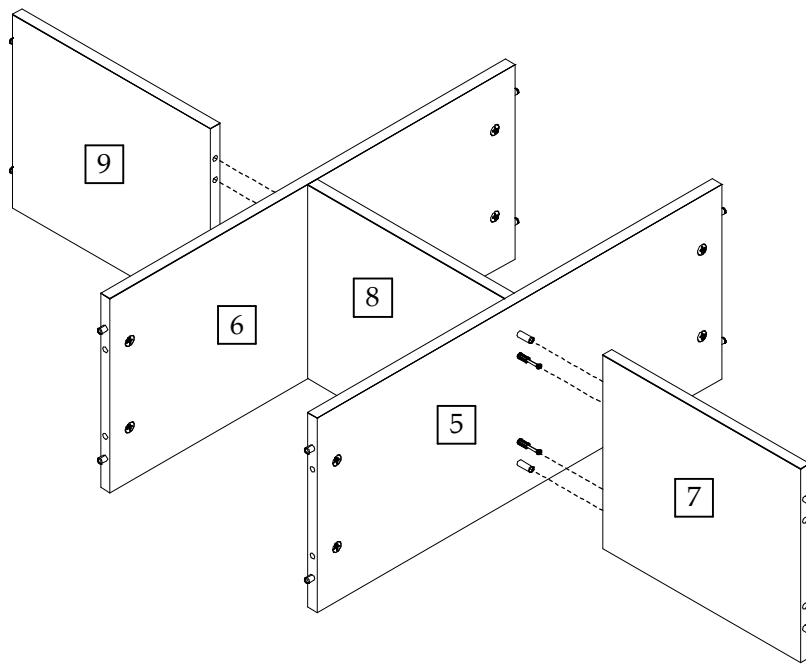



▶ 6

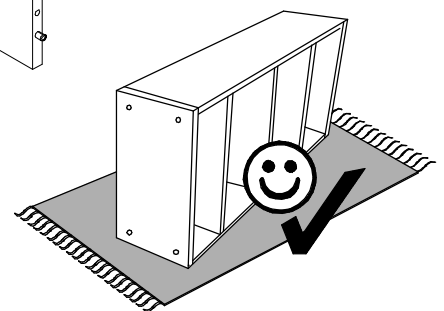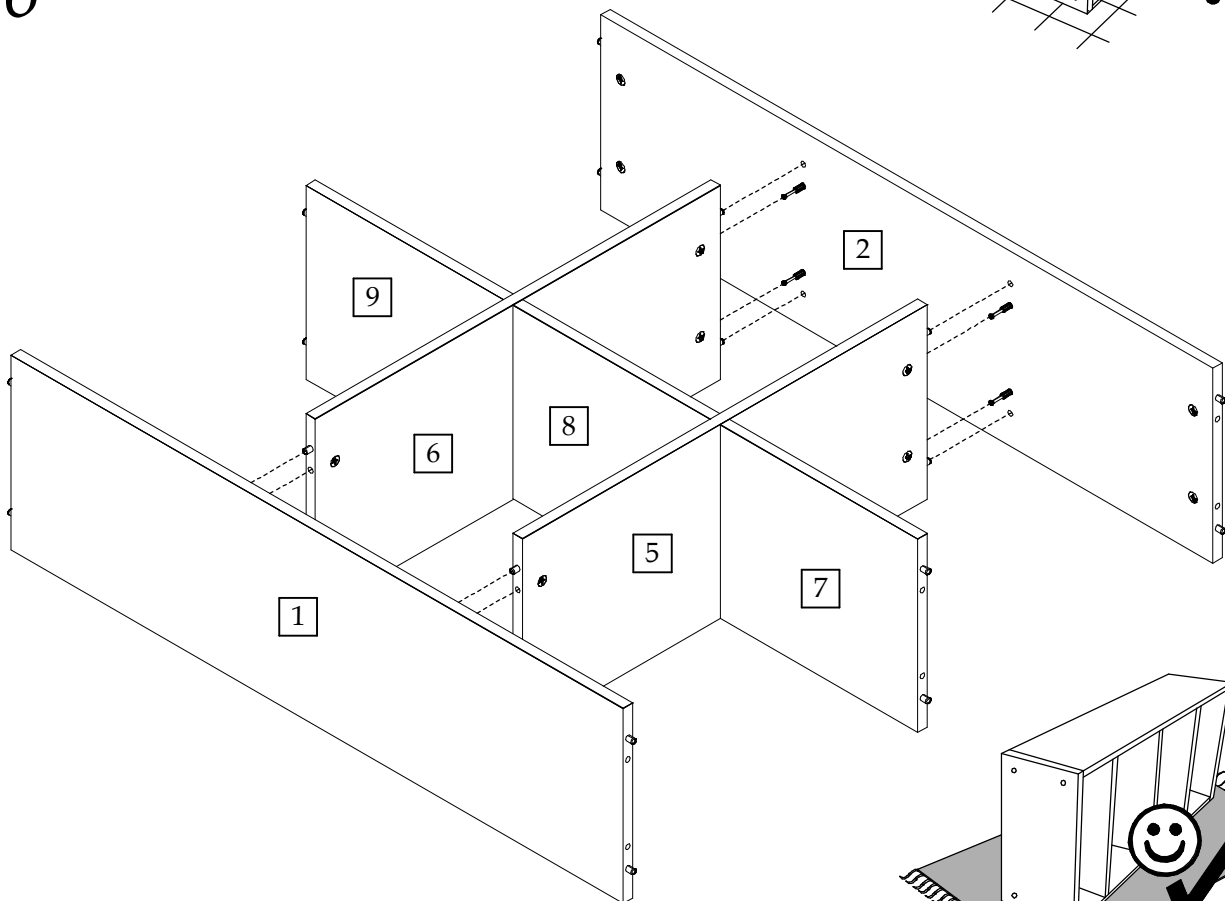







▶ 7

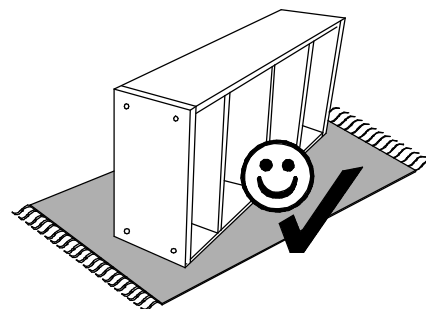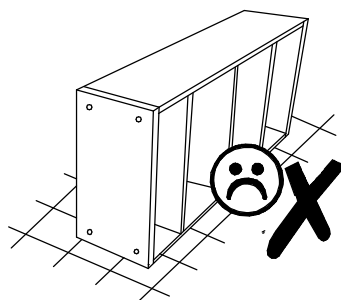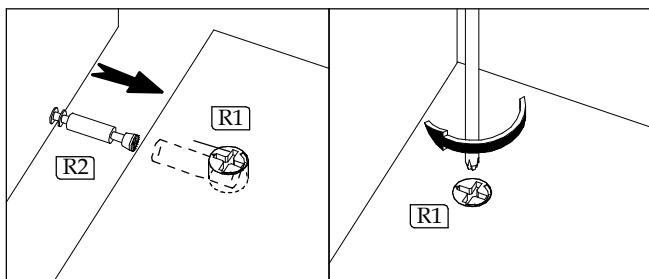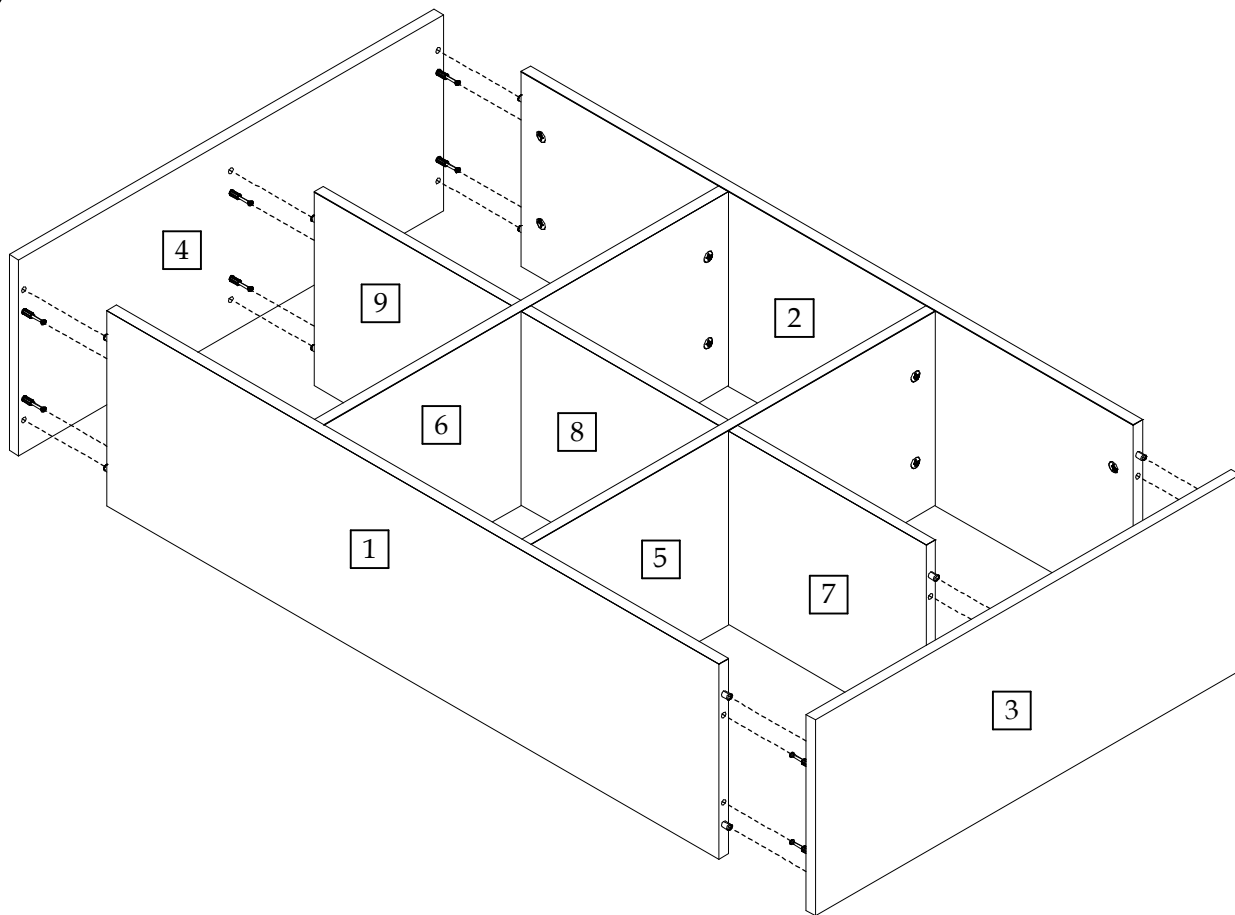

8

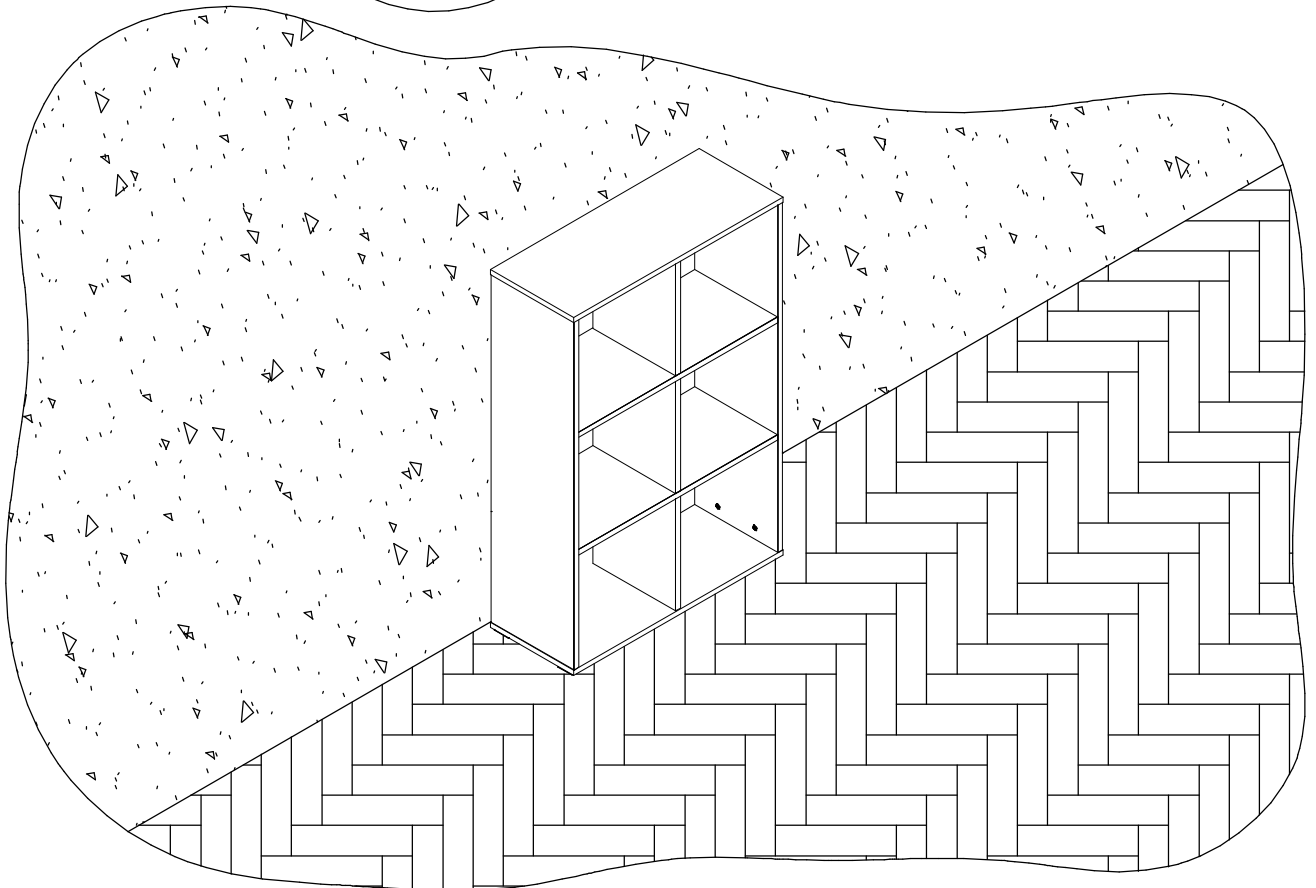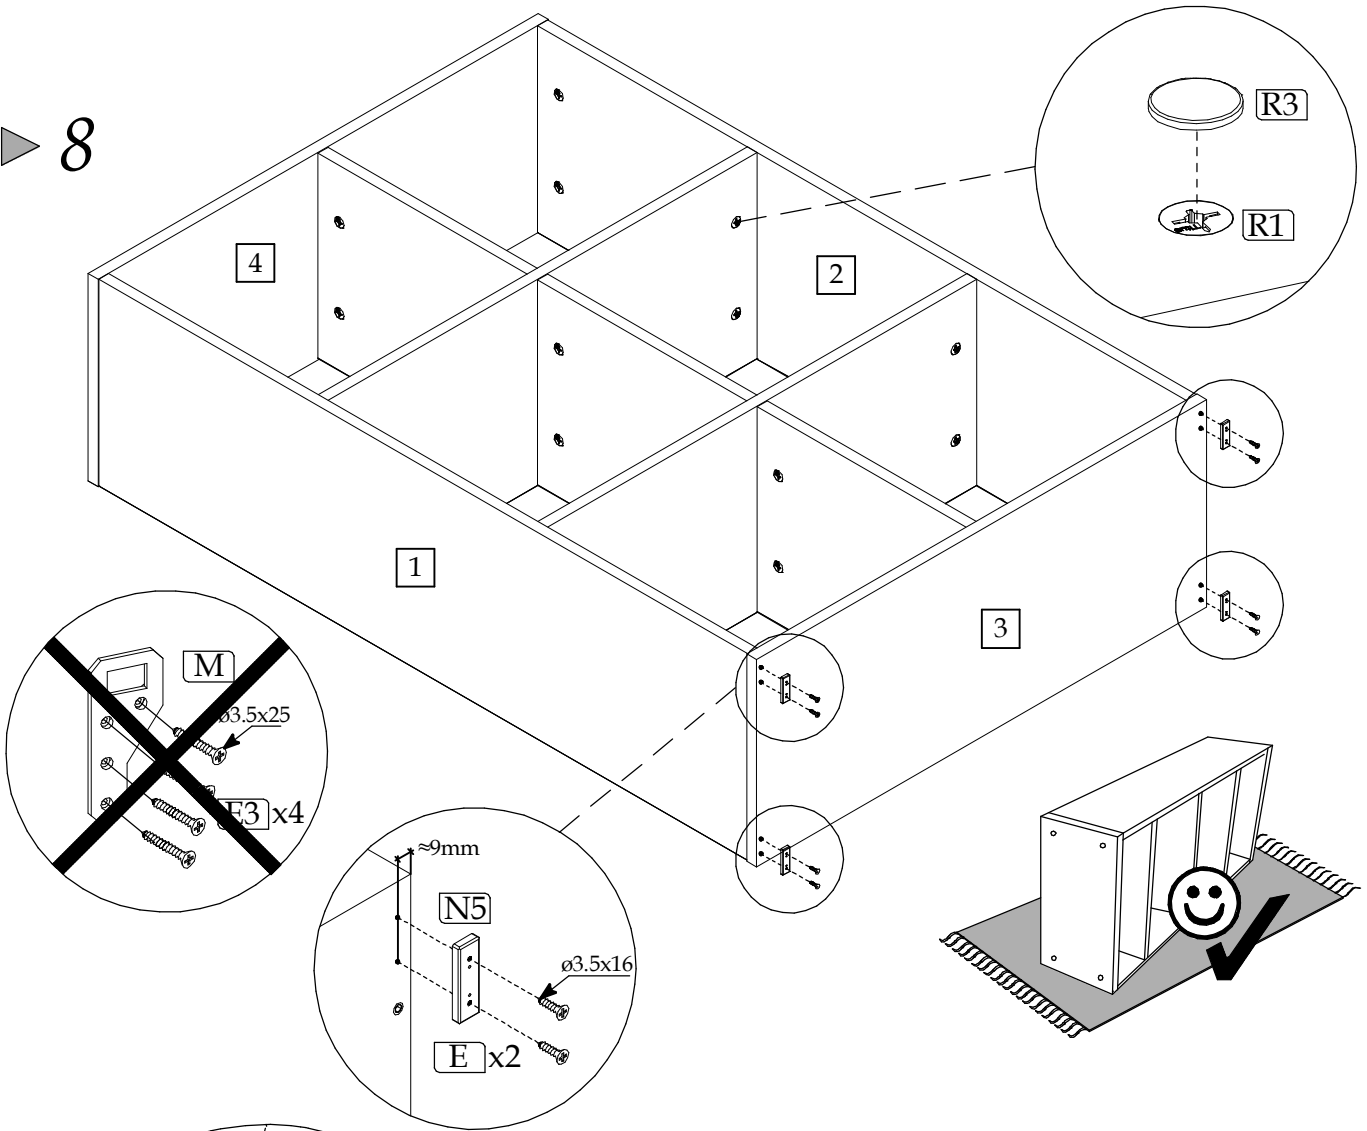

9

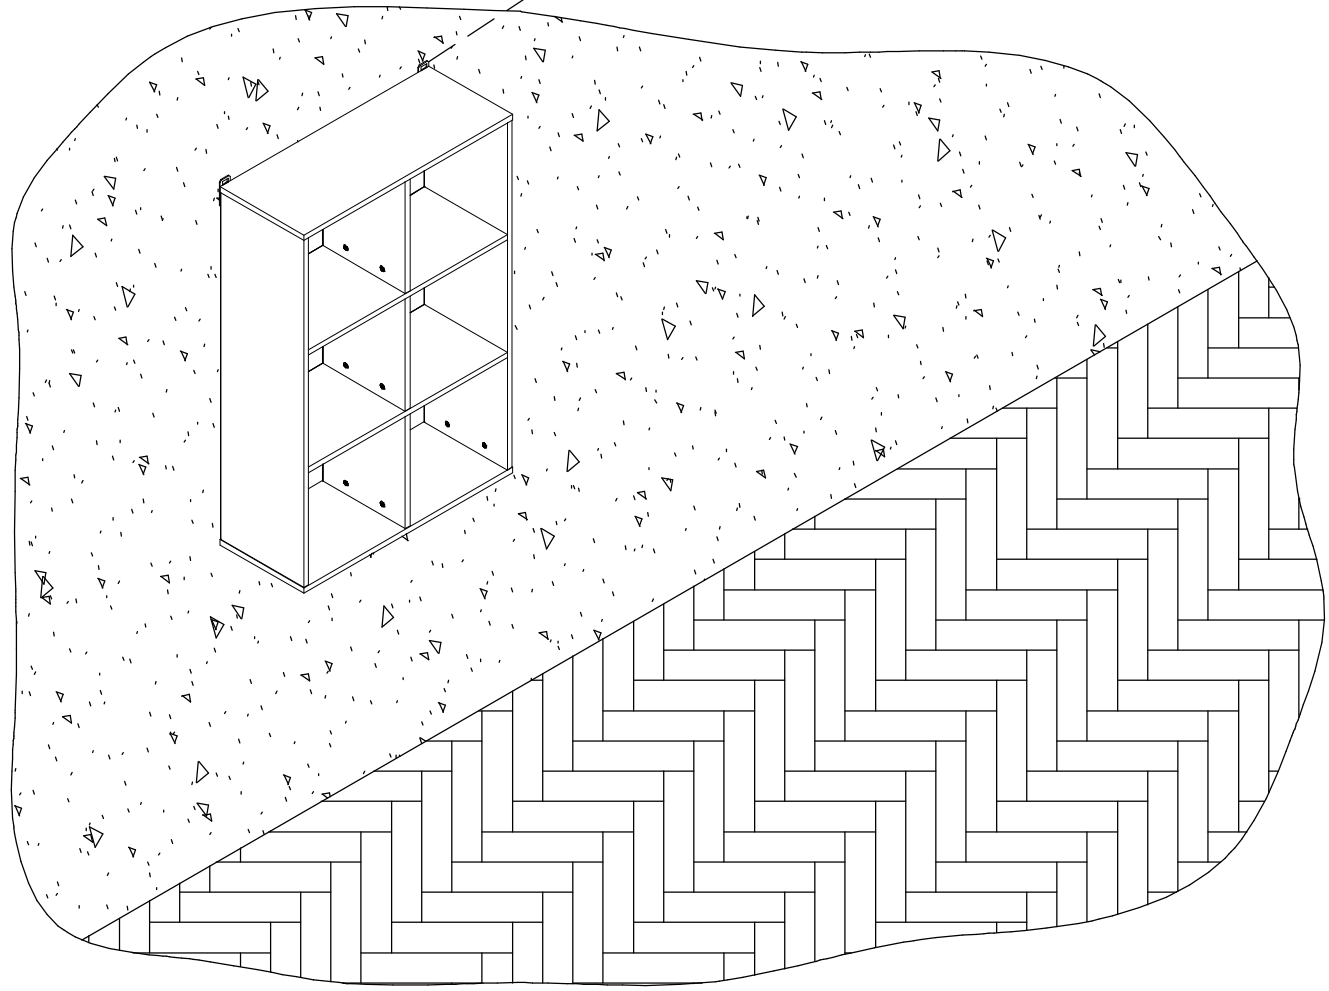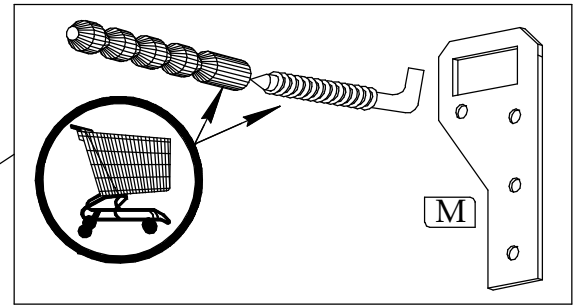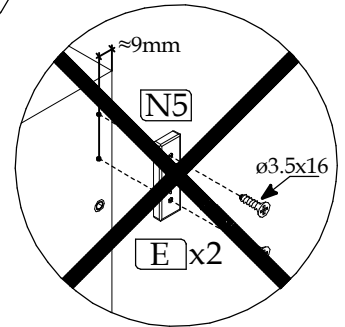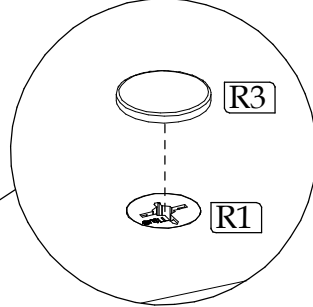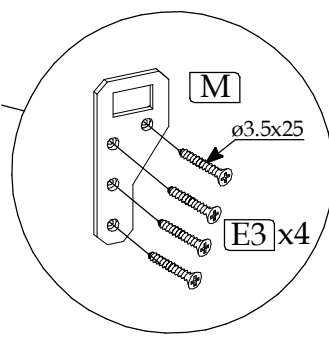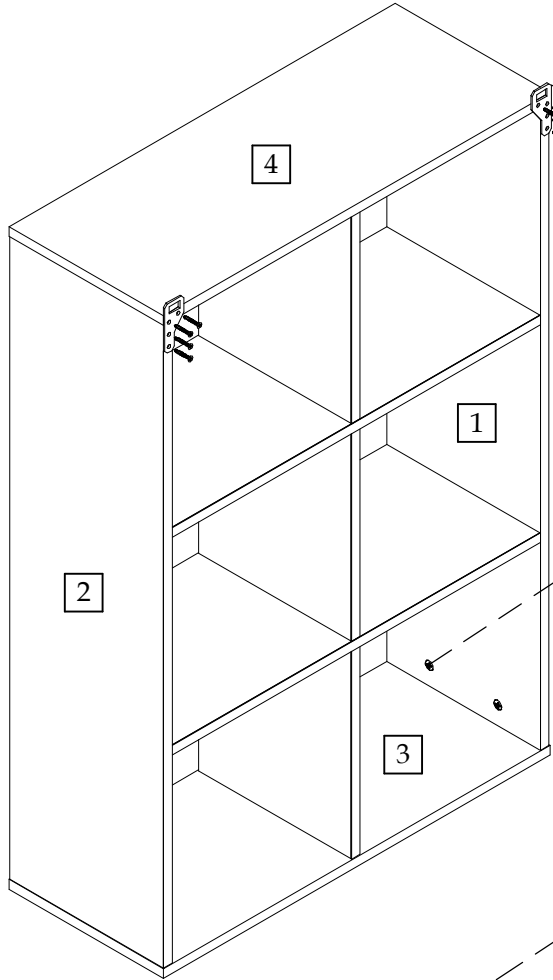

▶ 10

