


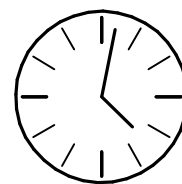
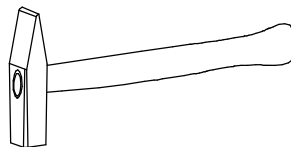
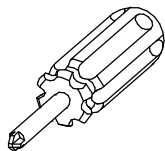
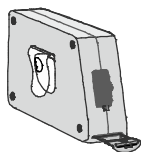
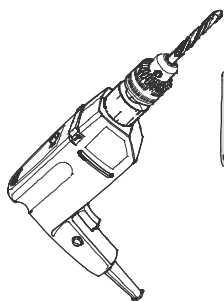
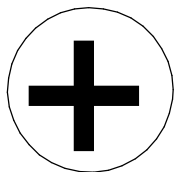
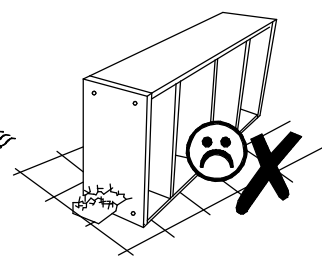
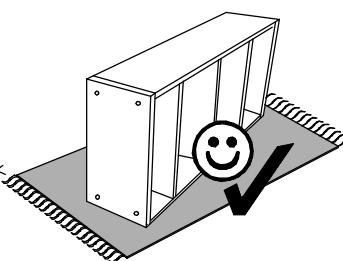
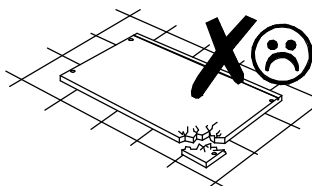
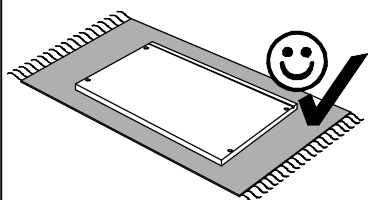
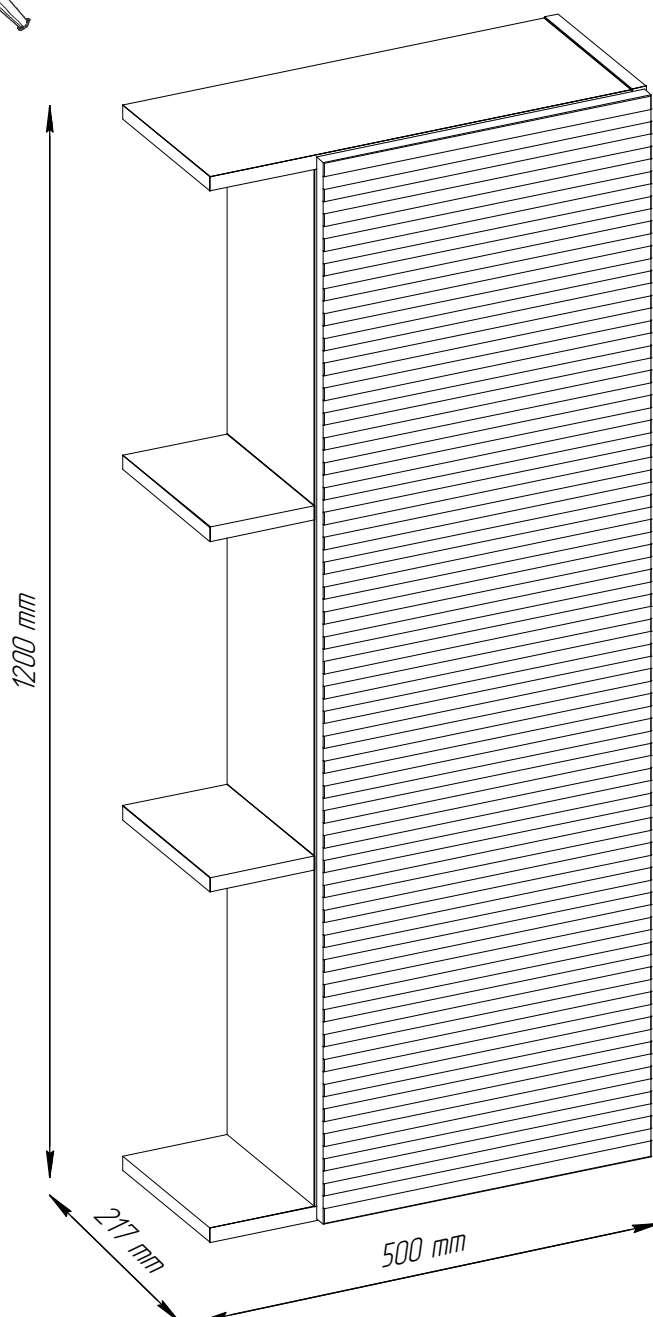
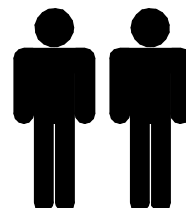
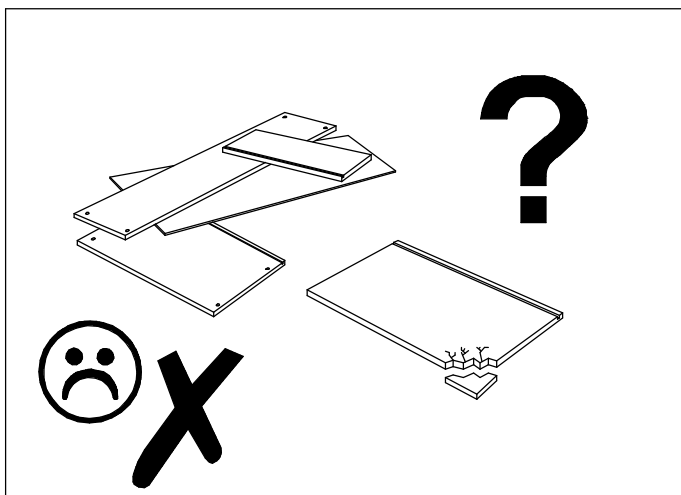
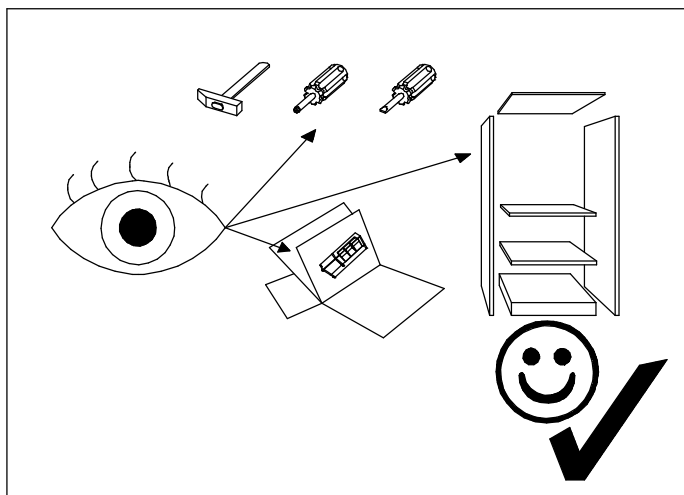
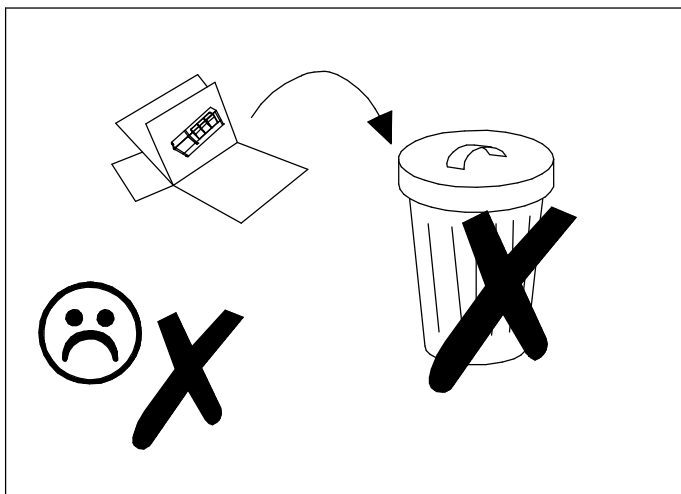











BRUNO L50

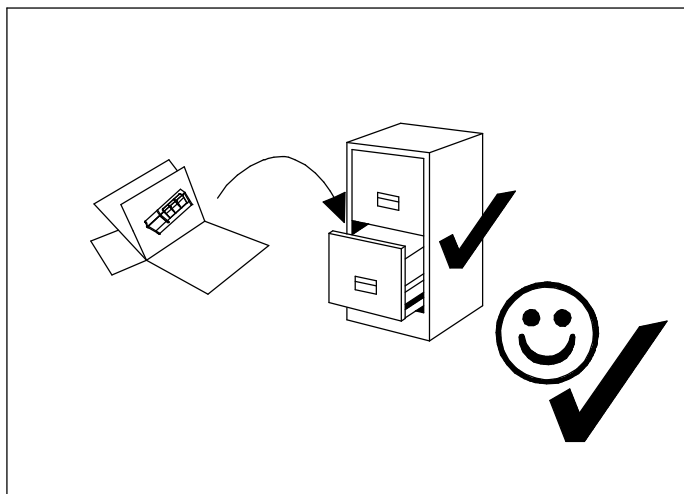




90 min

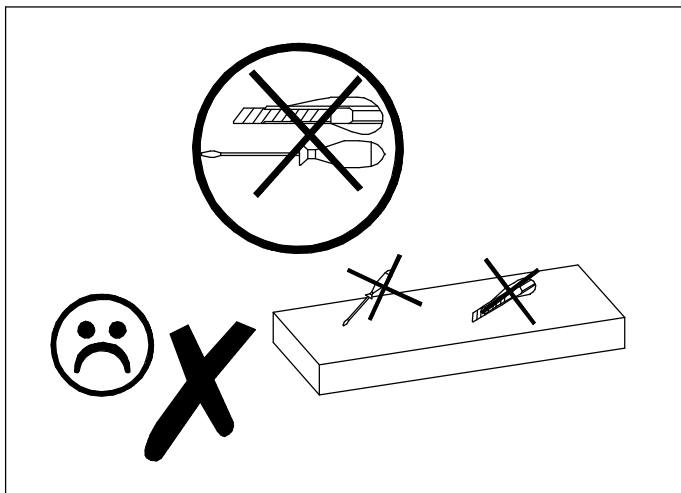


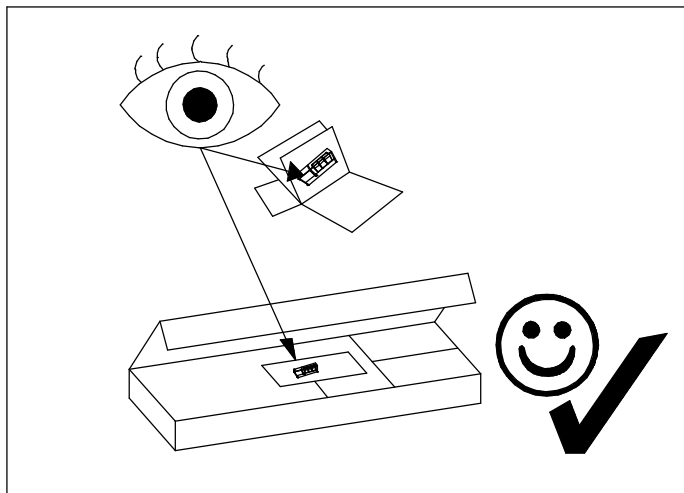

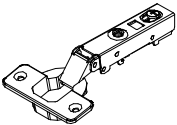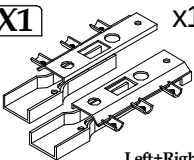

A1 x4  6.4x50	A3 x1  4mm	B x8  8x30	C4 x3 	C5 x3 	DU x4 
E x16  3.5x16	E3 x4  3.5x20	L1 x8 	P x10 	R1 x8 	R2 x8 
R3 x8 	R5 x4  	S1 x2  			
T x6  6.3x13	X1 x1  Left+Right	X2 x2 			

Element symbol	Measurements					Code	Pack
1	484	200	16	1		1003	1/ 1
2	1202	201	16	1		1001	1/ 1
3	1168	200	16	1		1004	1/ 1
4	484	200	16	1		1002	1/ 1
5	348	170	16	2		N/ A	1/ 1
6	120	200	16	1		1005	1/ 1
7	120	200	16	1		1006	1/ 1
8	1182	362	3	1		1081_v	1/ 1
9	1198	378	16	1		1002-3001	1/ 1

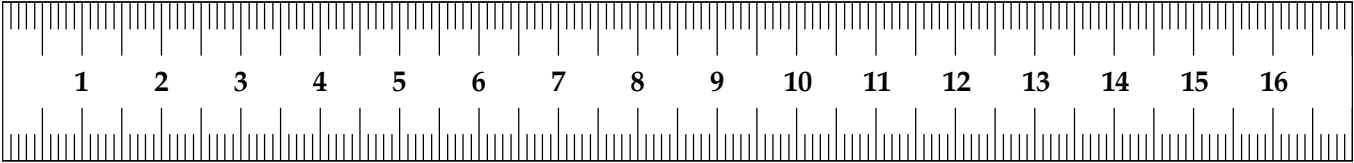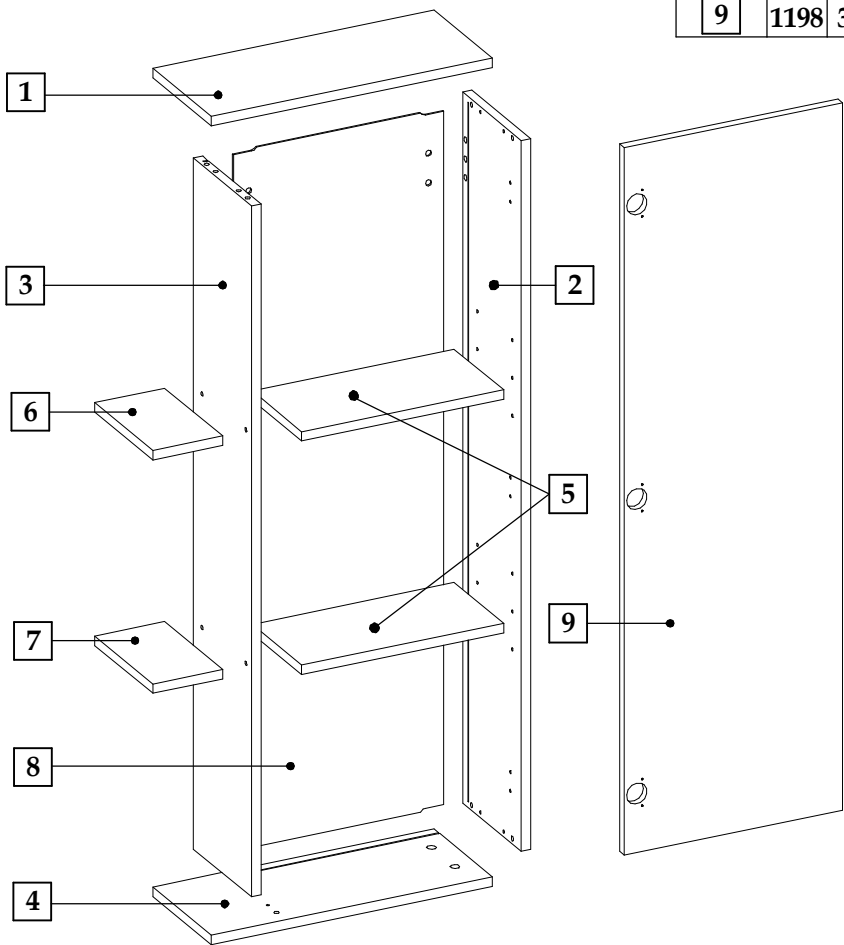





► 4

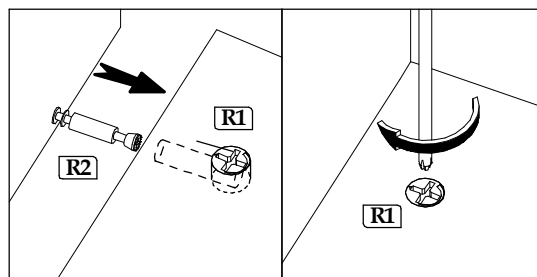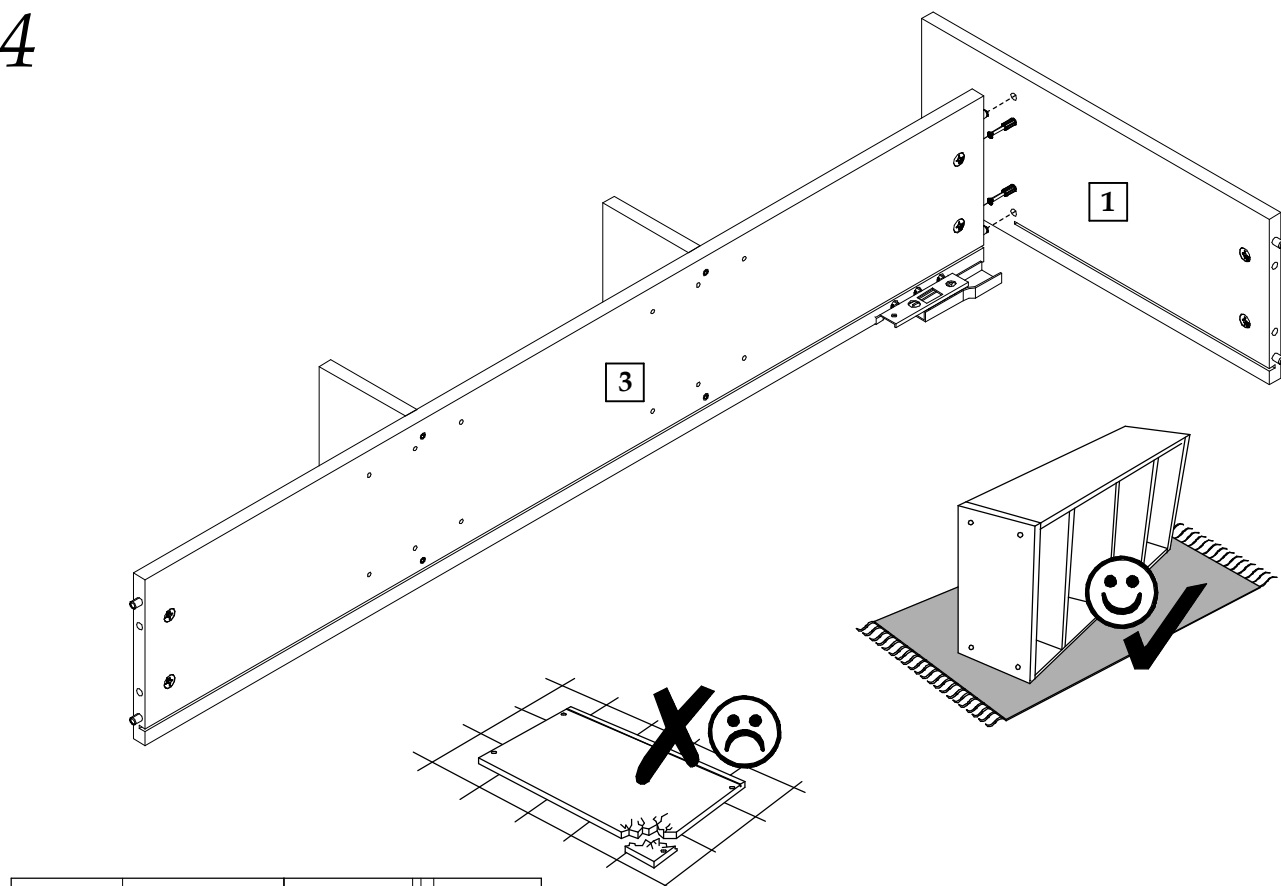



► 5


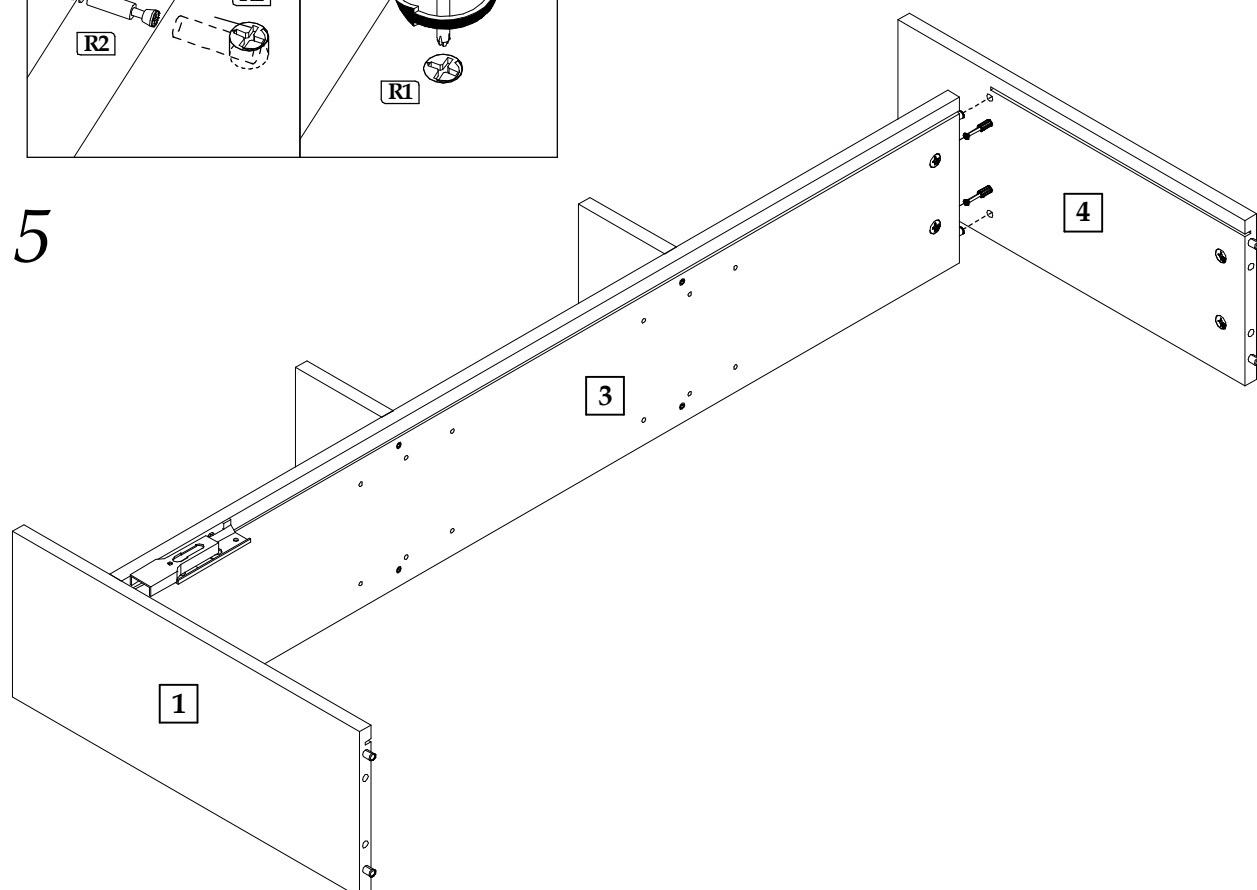


► 6




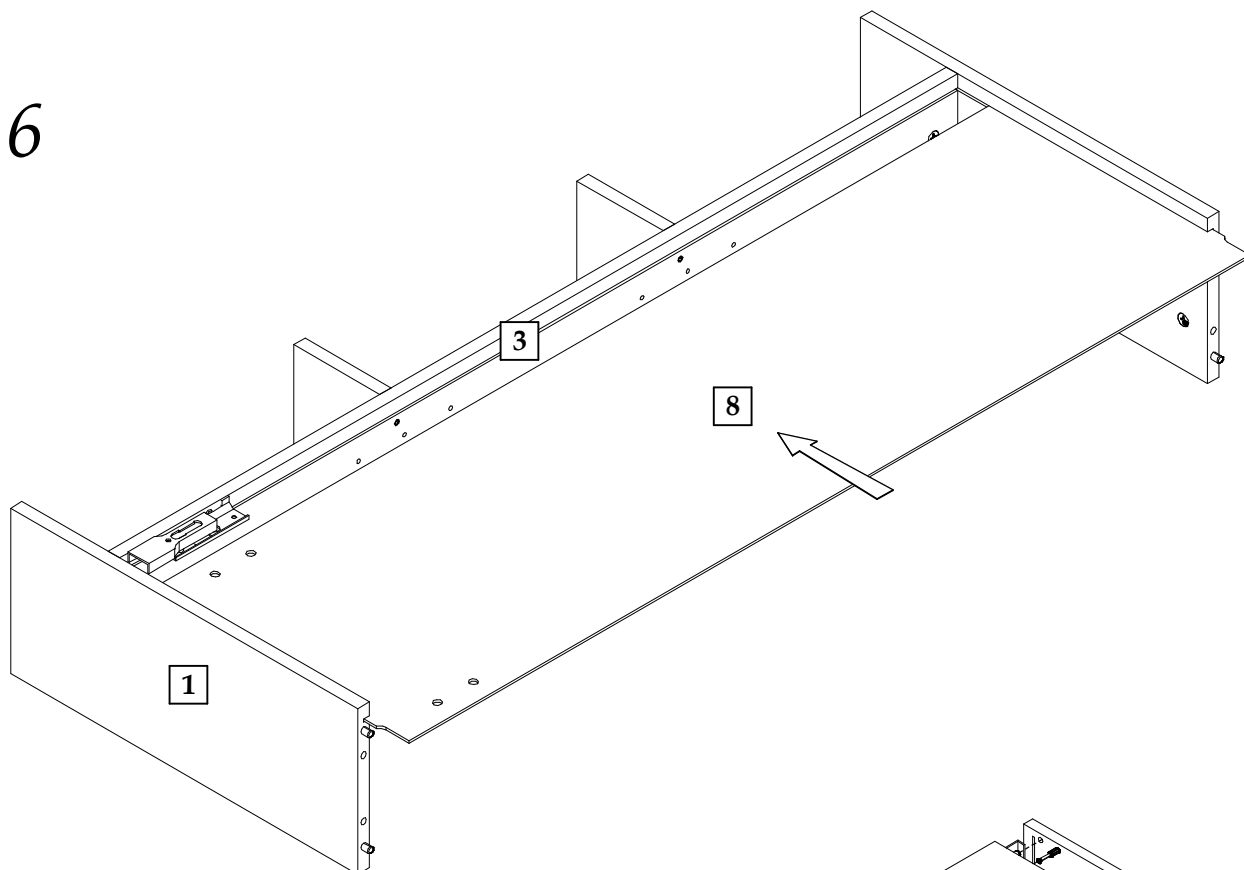


► 7

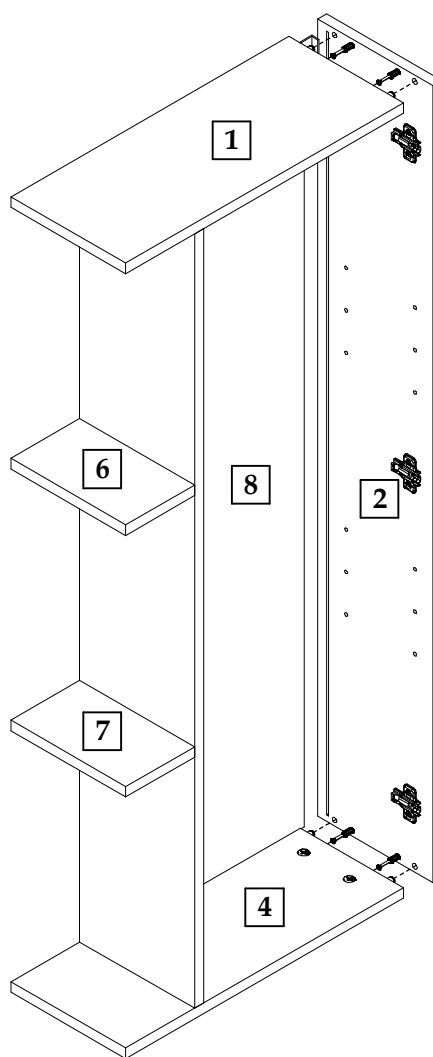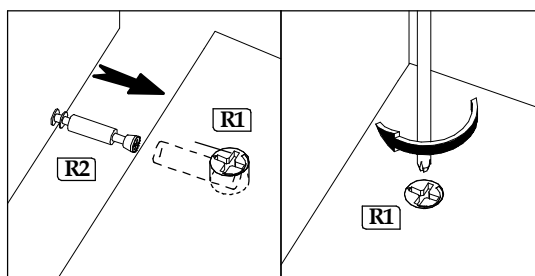

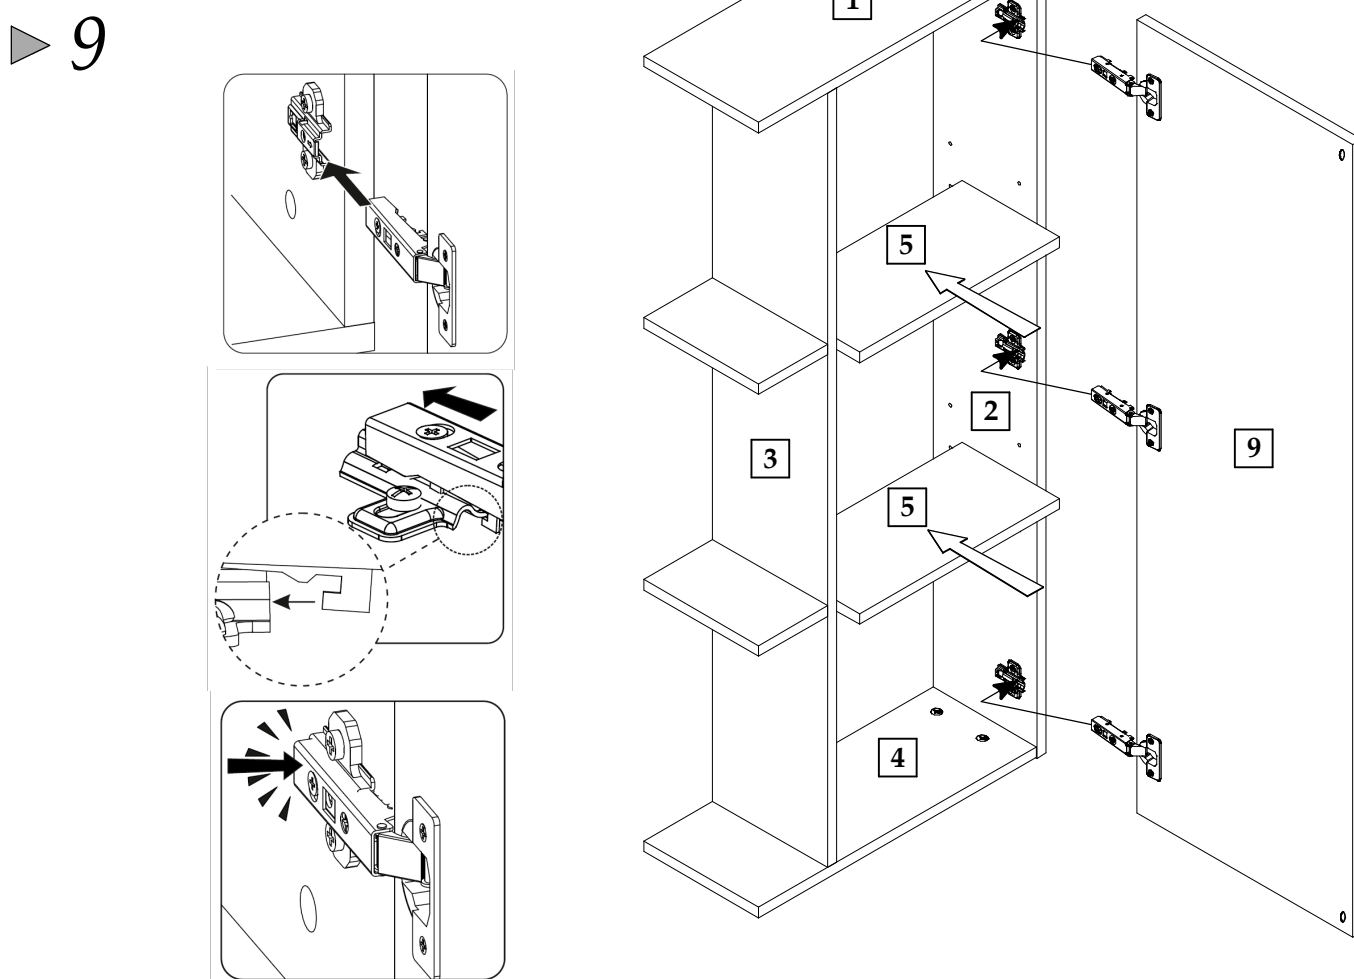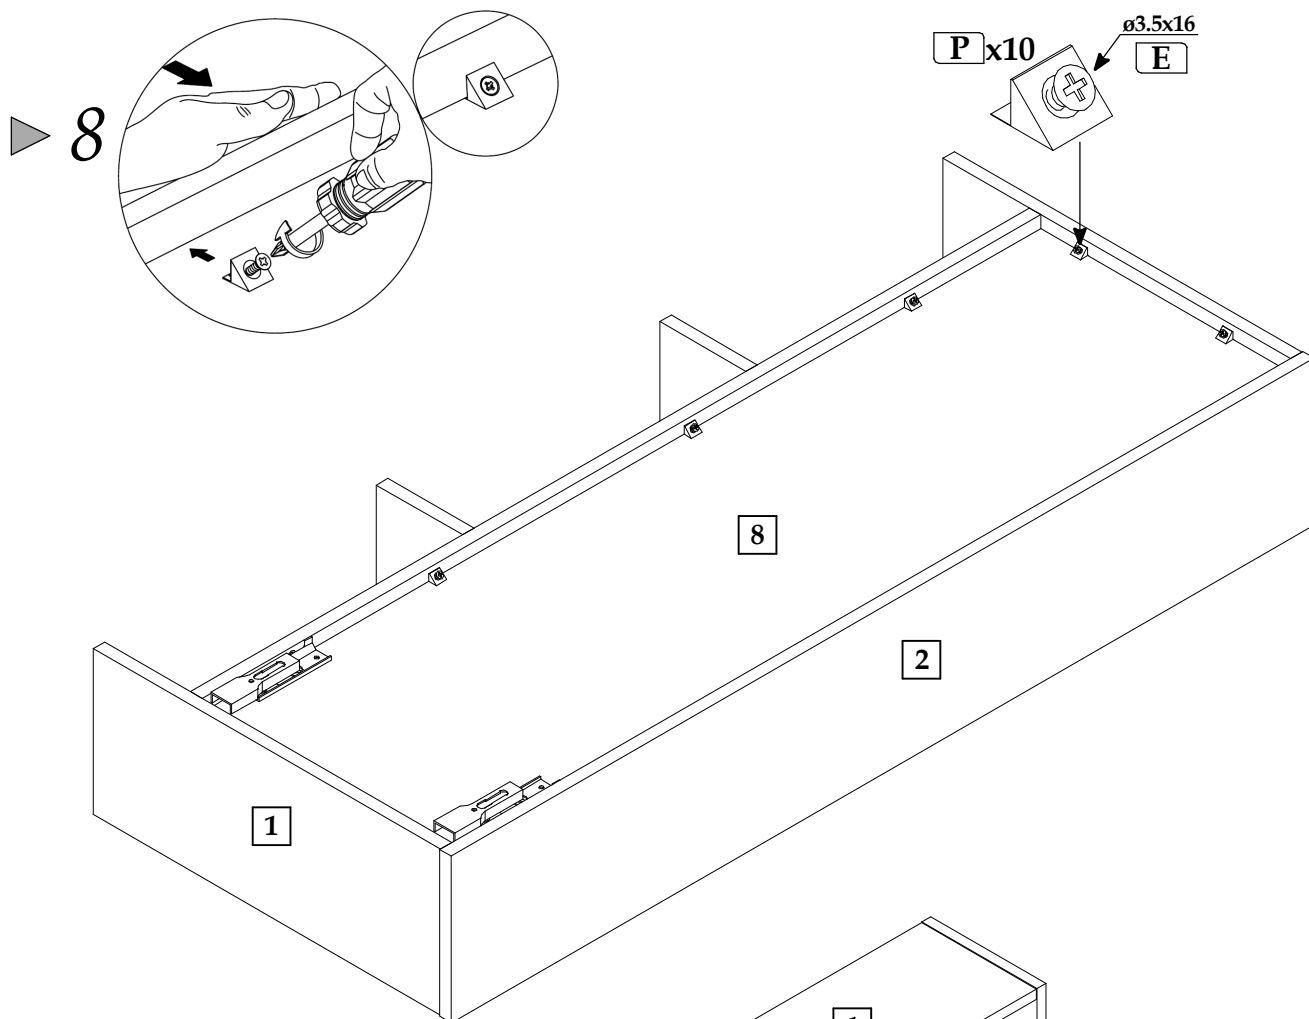

► 10

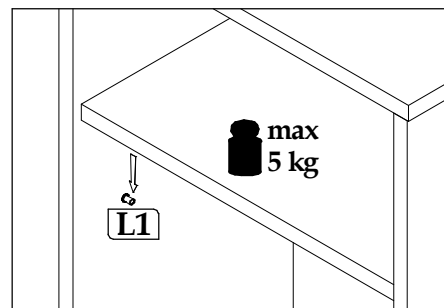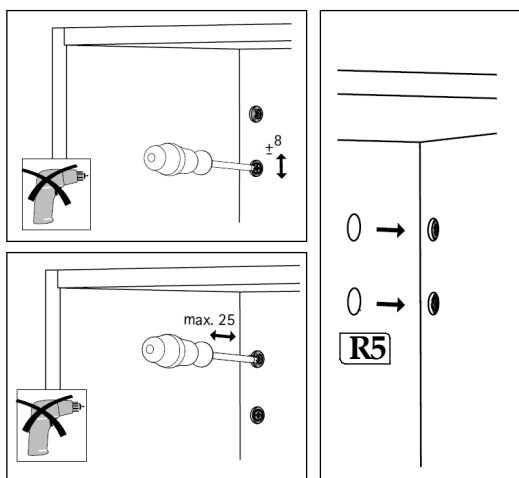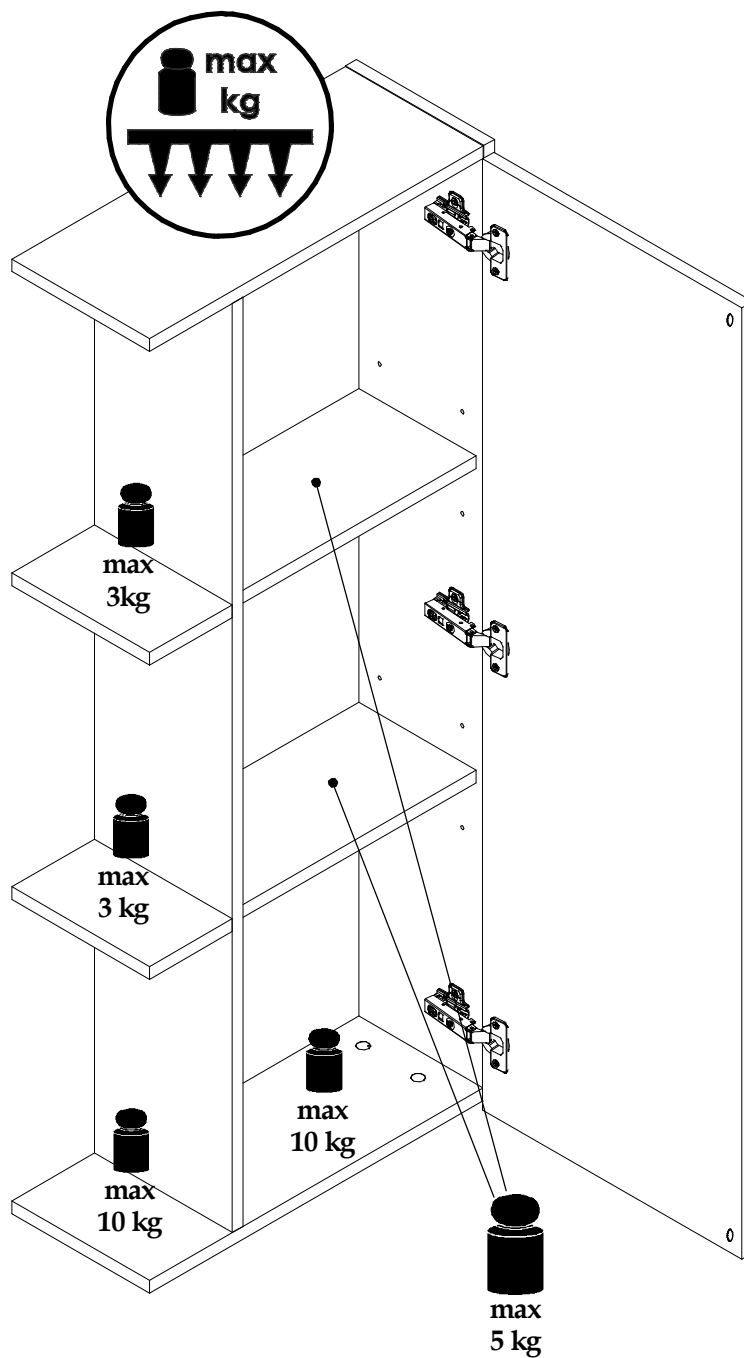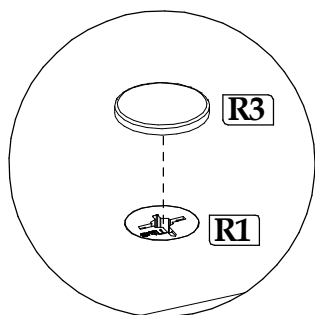

► 11

