


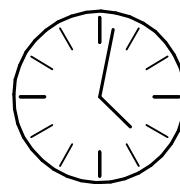
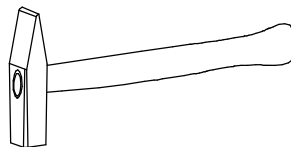
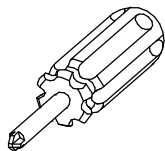
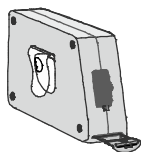
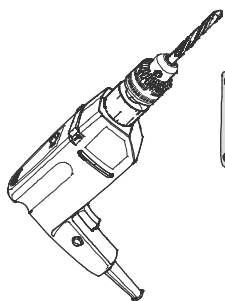
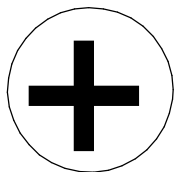
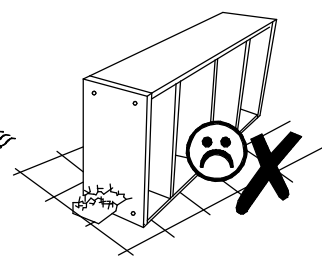
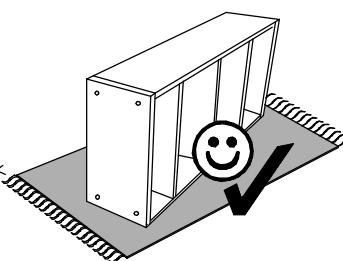
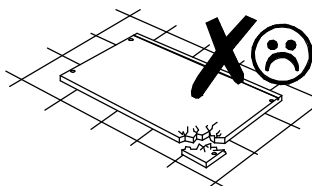
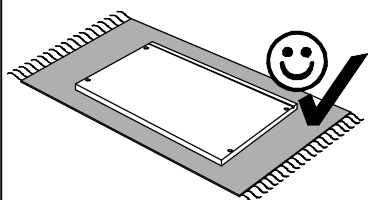
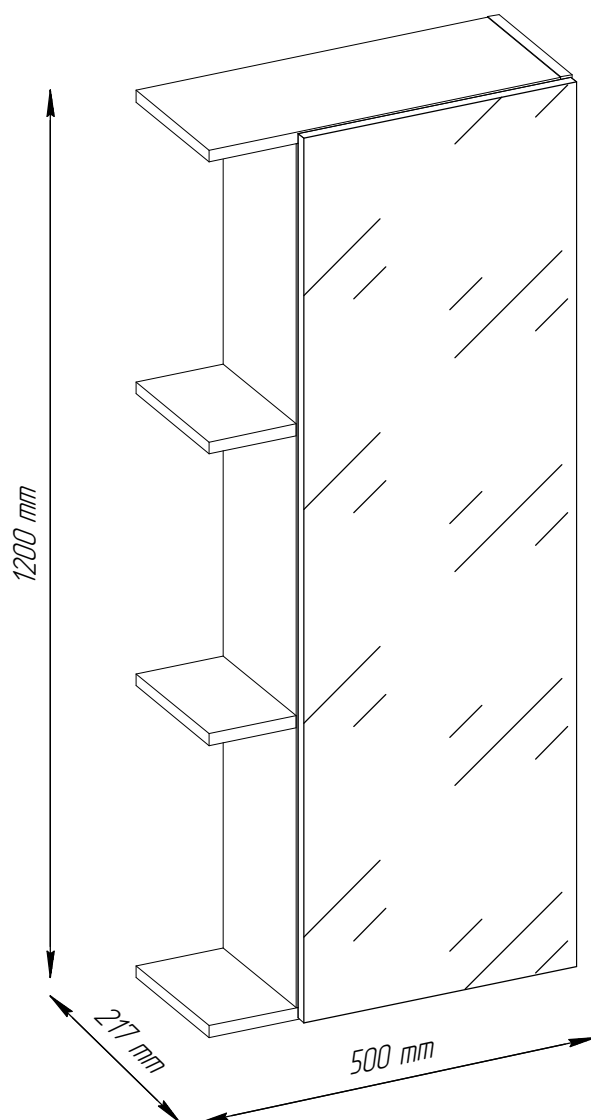
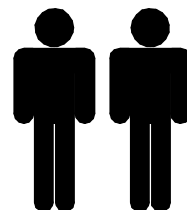
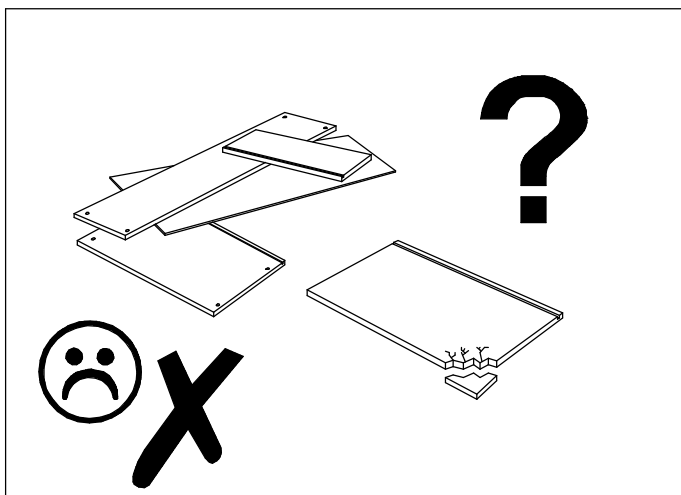
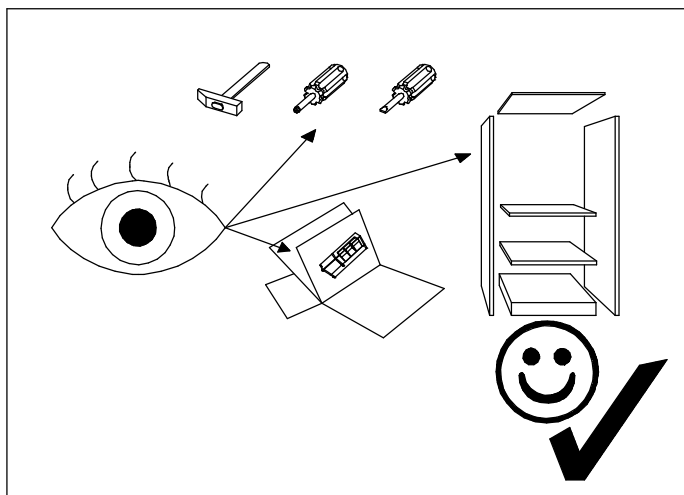
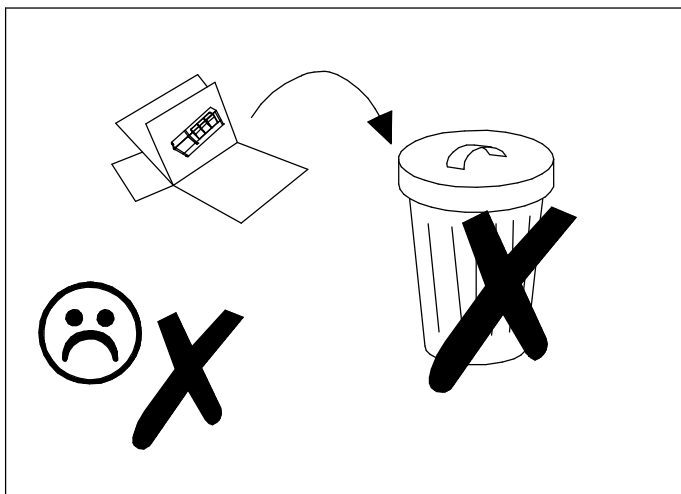



BRUNO L51

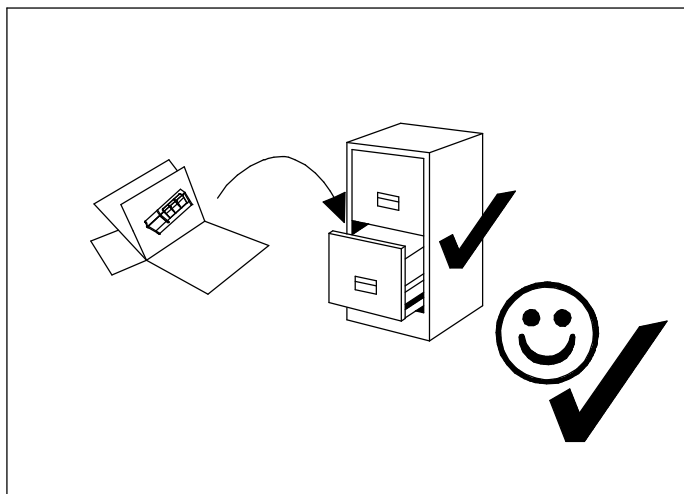

90 min

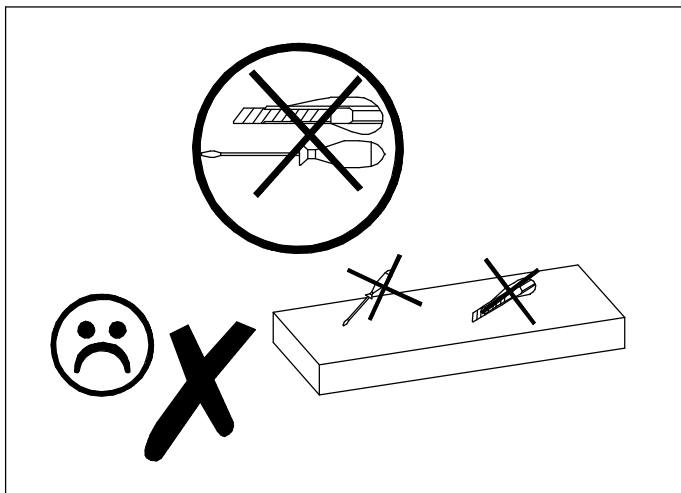

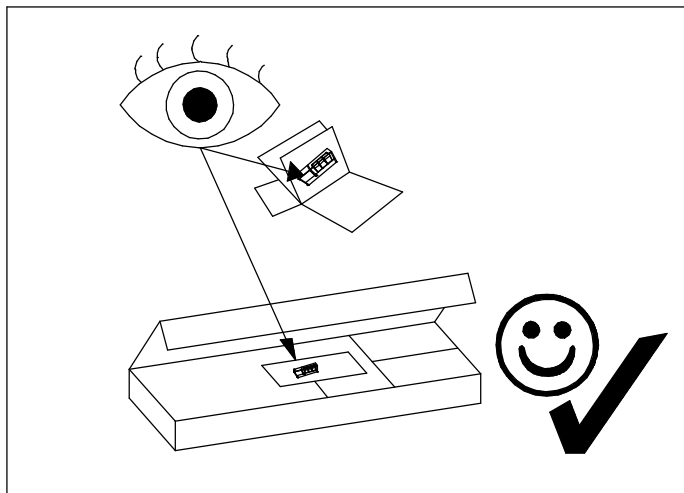


A1
x4

6.4x50


A3
x1


4mm

B
x8

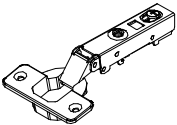8x30


C4
x3



C5
x3



DU
x4


E
x16

3.5x16

E3
x4

3.5x20

L1
x8


P
x10



R1
x8



R2
x8



R3
x8


S1
x2







T
x6

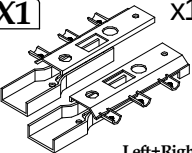6.3x13


X1
x1

Left+Right

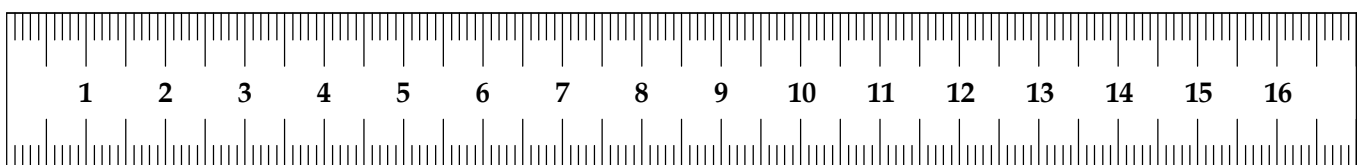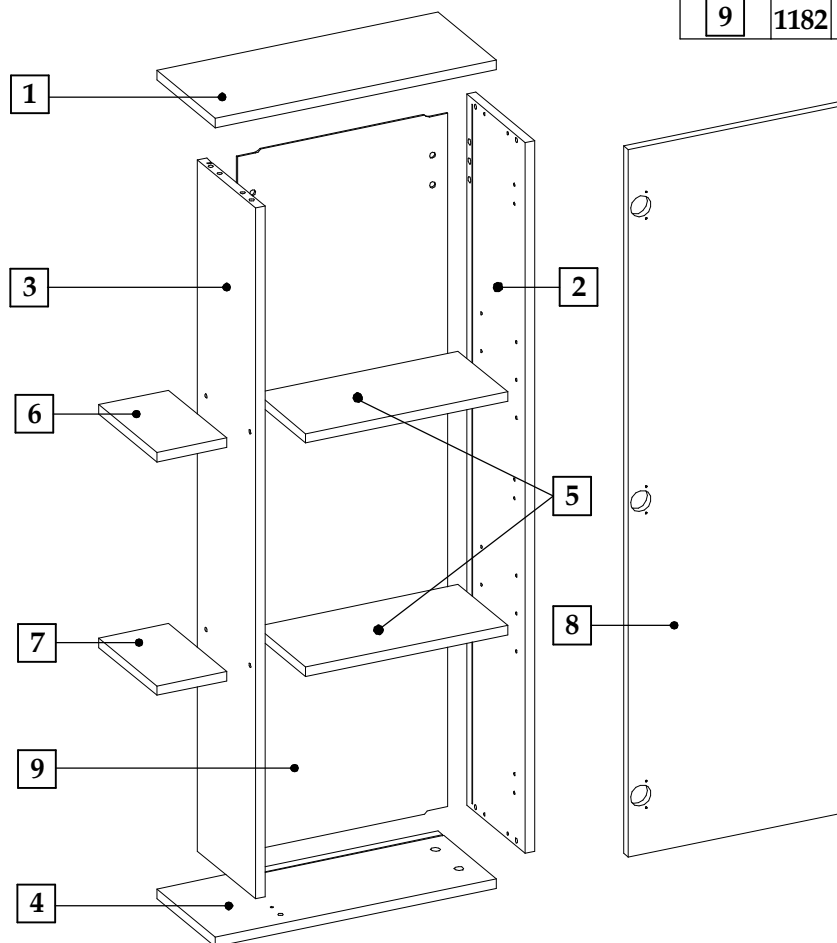X2
x2


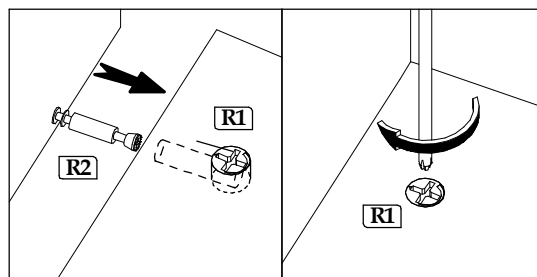
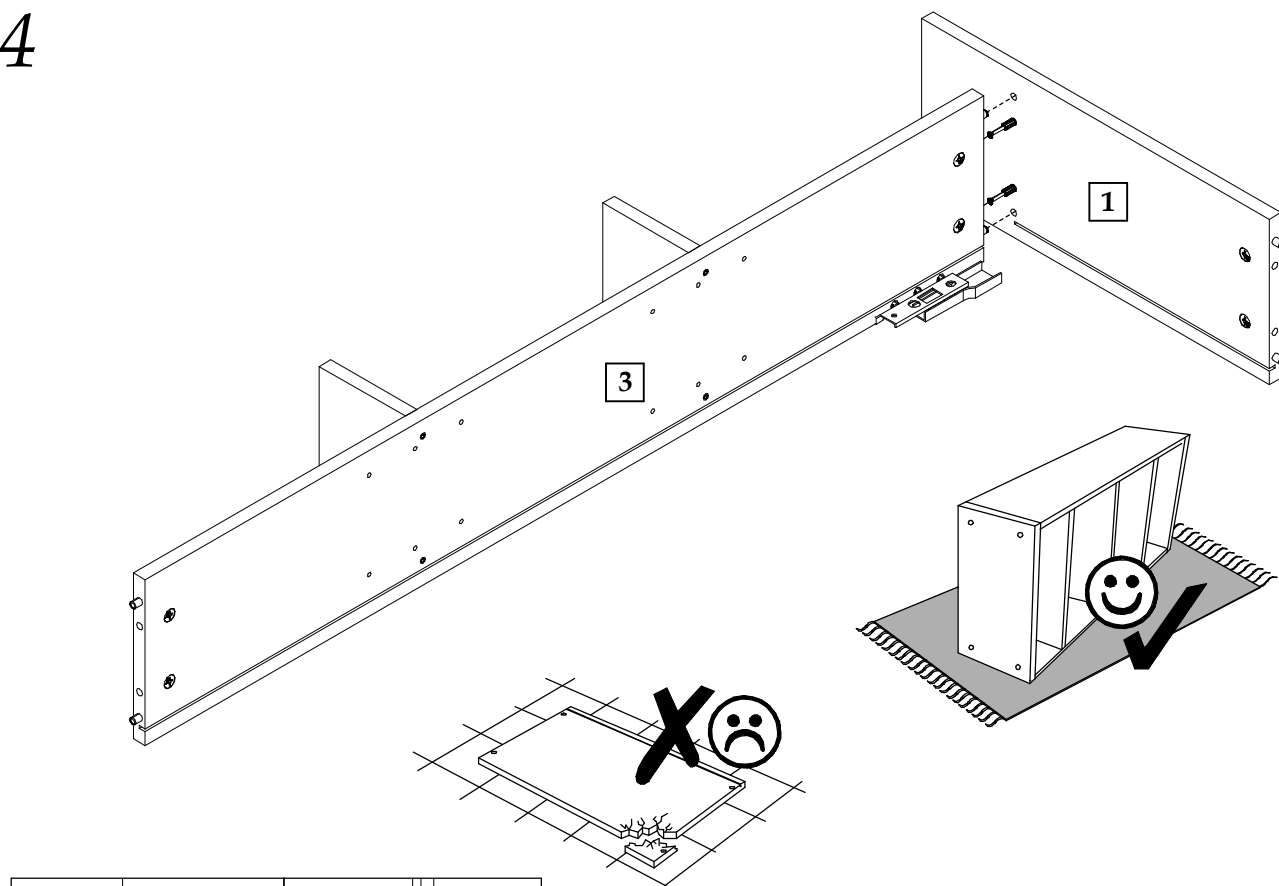
Element symbol	Measurements					Code	Pack
1	484	200	16	1		1003	1/ 2
2	1202	201	16	1		1001	1/ 2
3	1168	200	16	1		1004	1/ 2
4	484	200	16	1		1002	1/ 2
5	348	170	16	2		N/ A	1/ 2
6	120	200	16	1		1005	1/ 2
7	120	200	16	1		1006	1/ 2
8	1196	390	19	1		1009	2/ 2
9	1182	362	3	1		1081_v	2/ 2



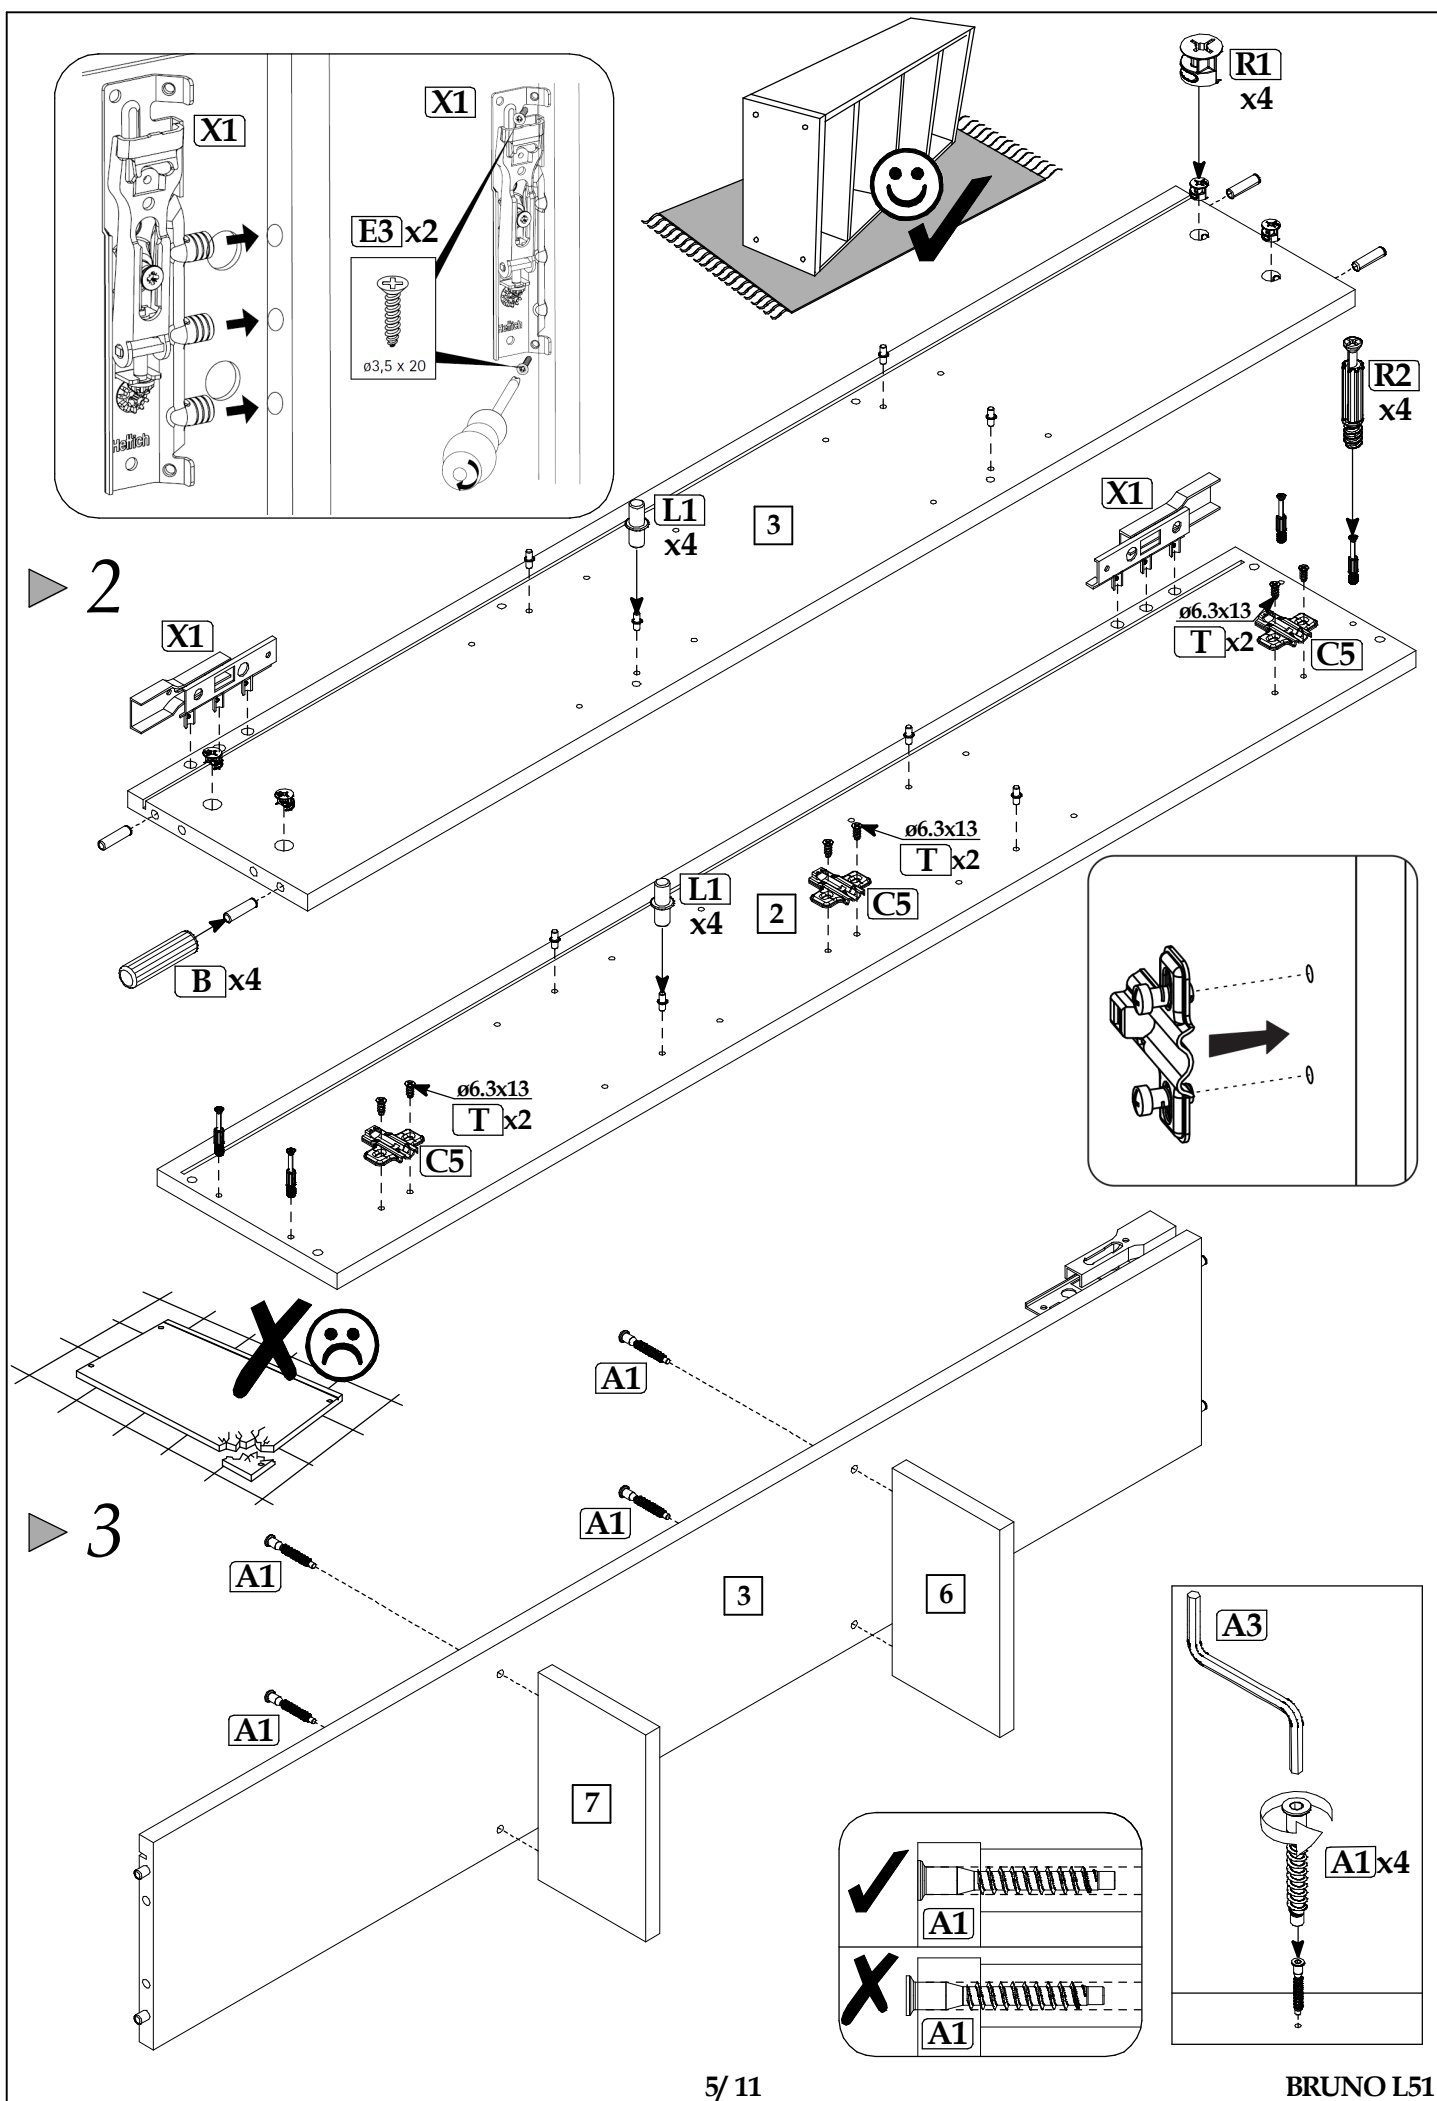





► 4





► 5

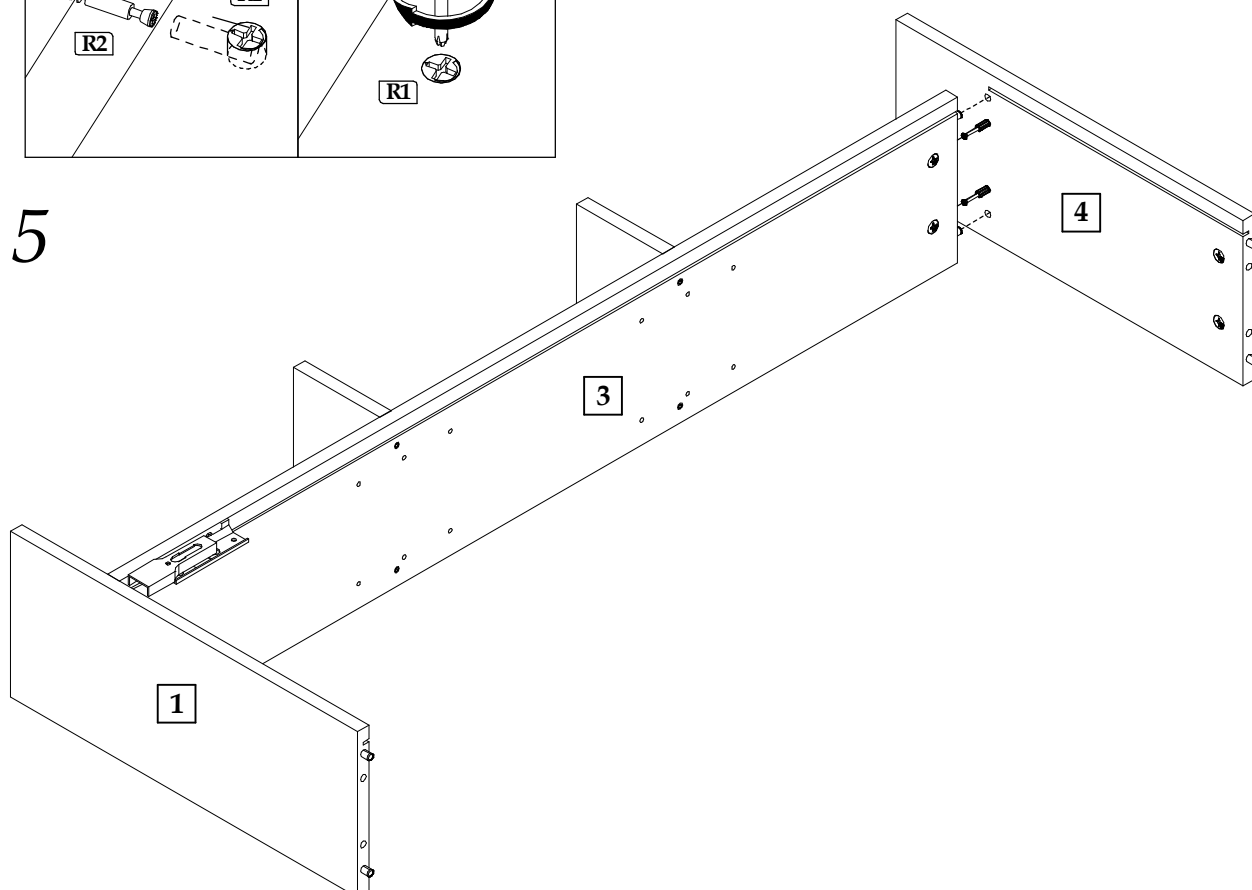


► 6


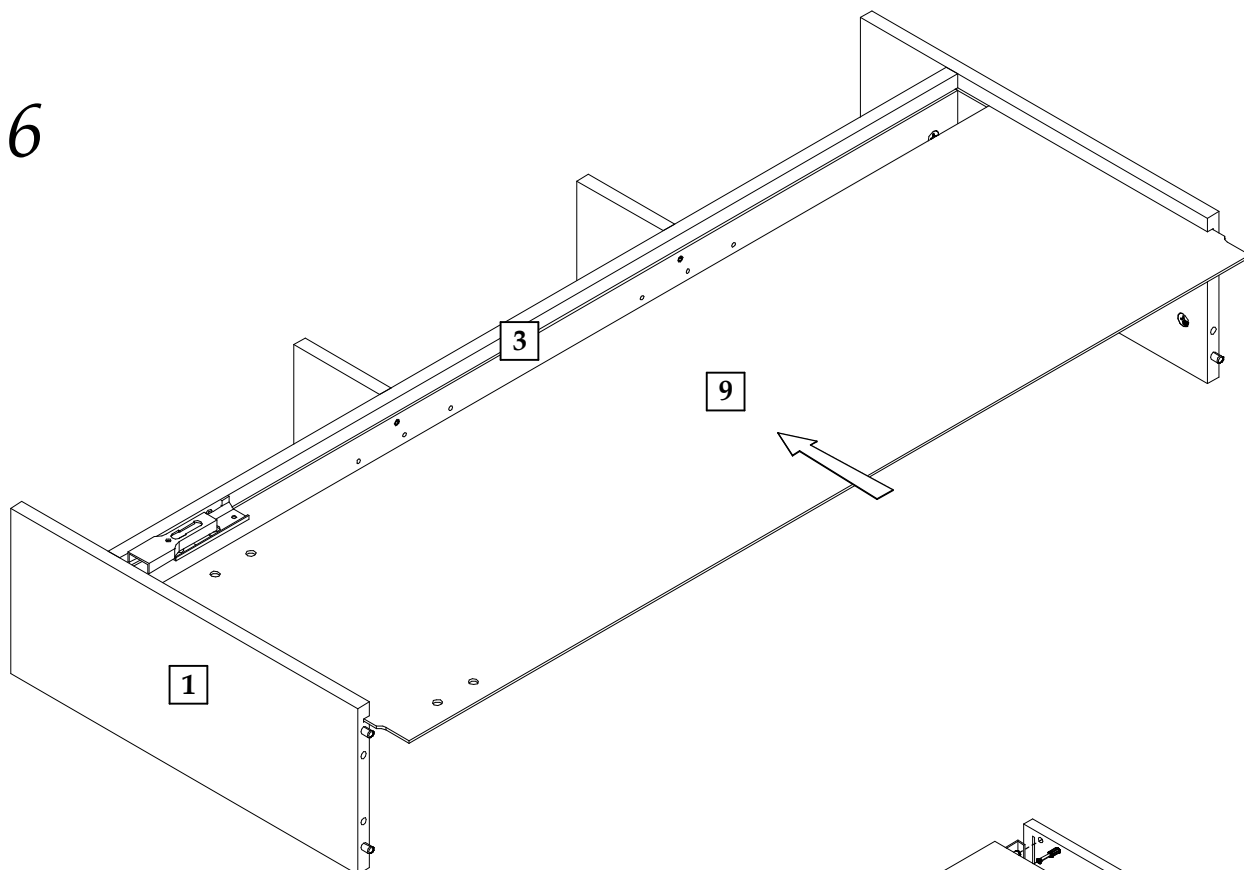


► 7

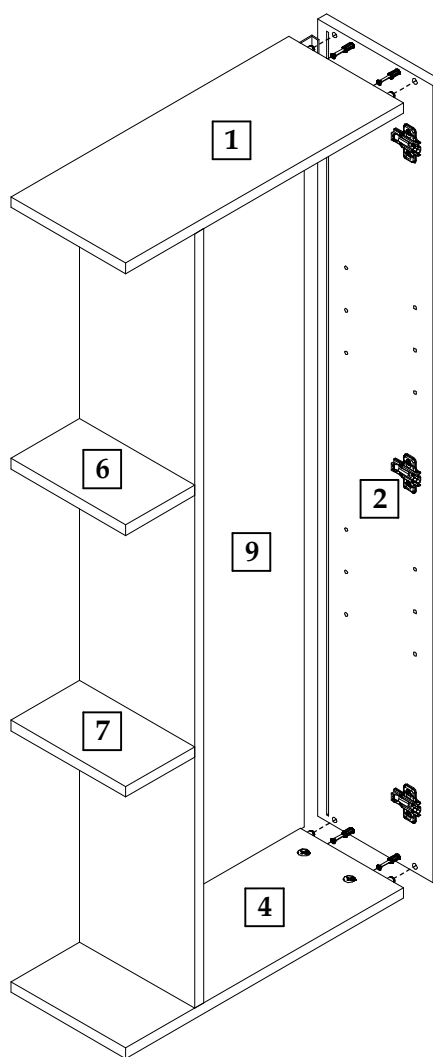
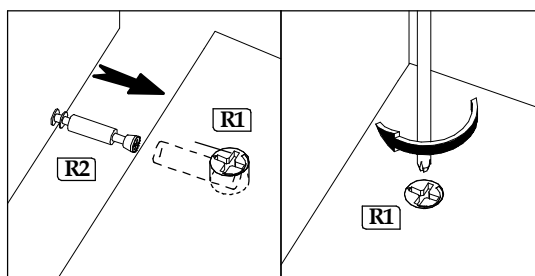


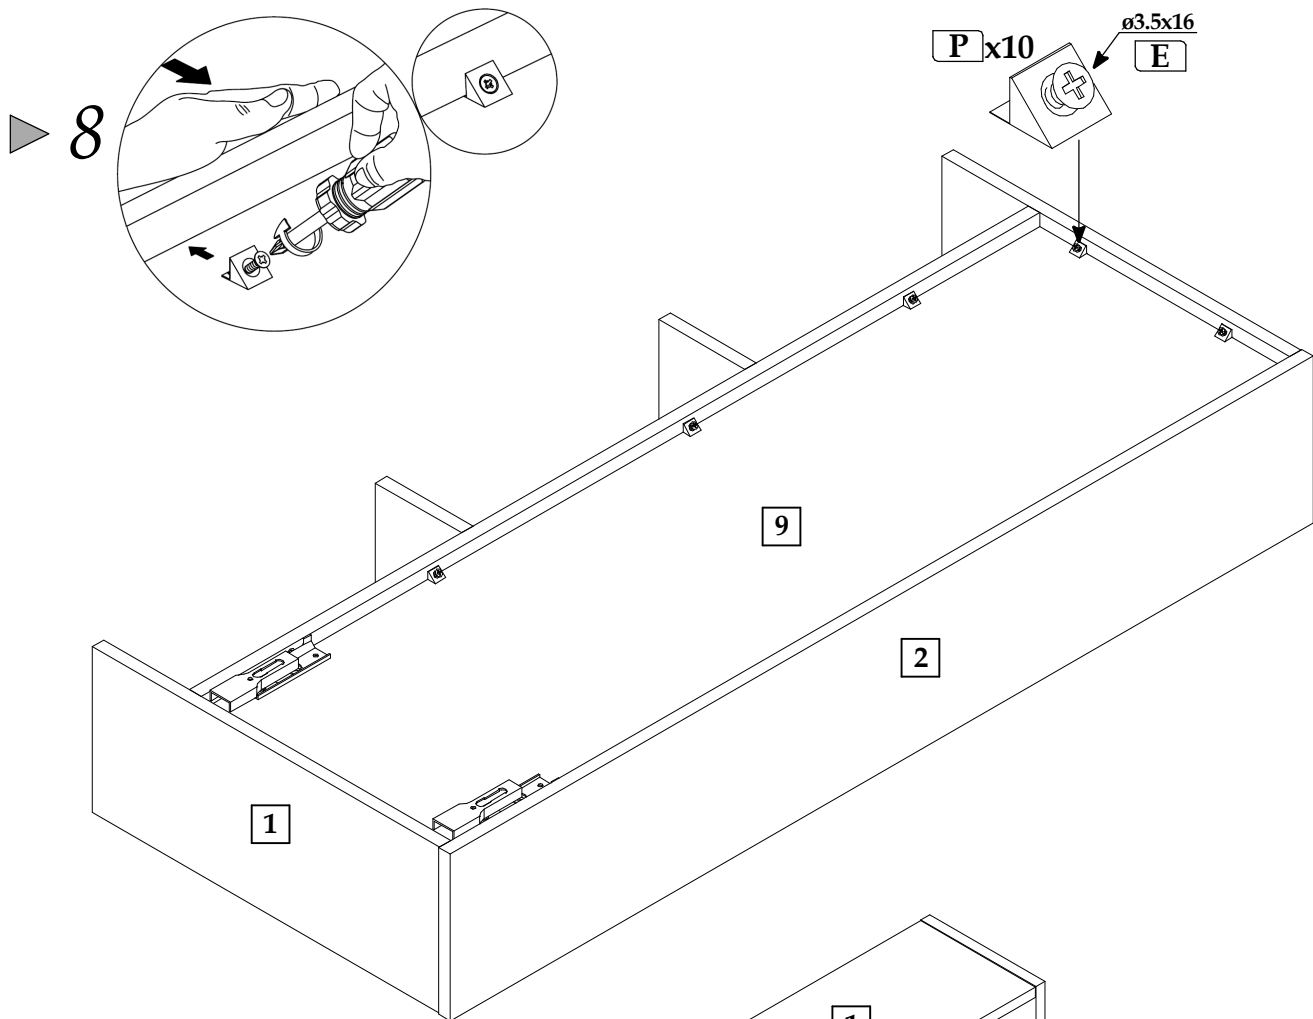

► 9

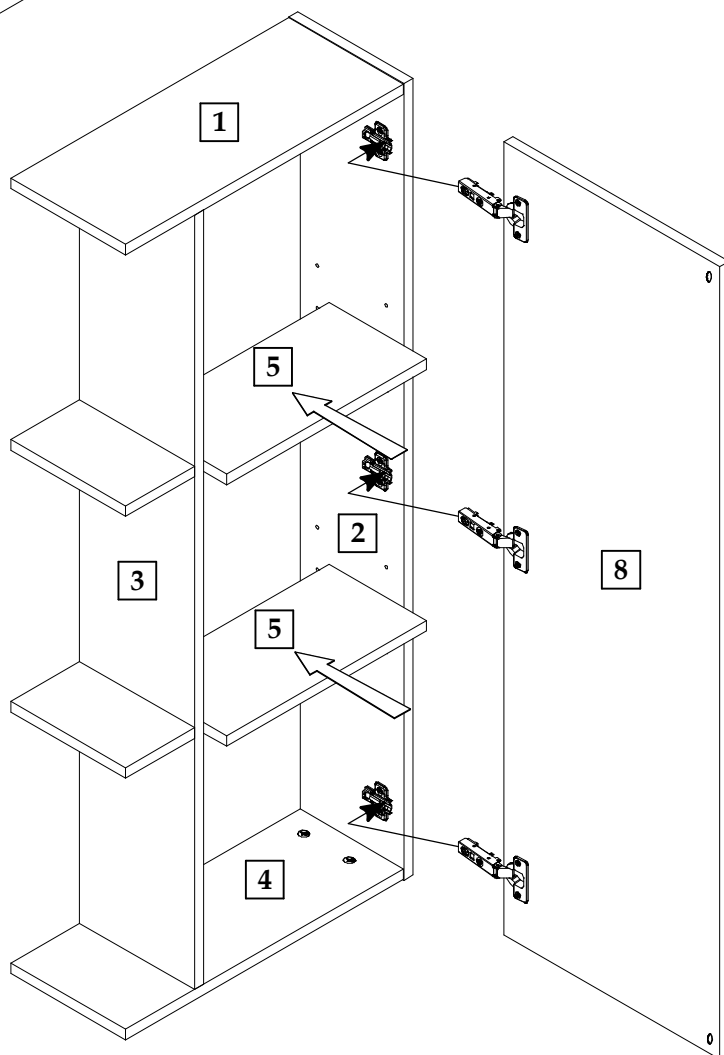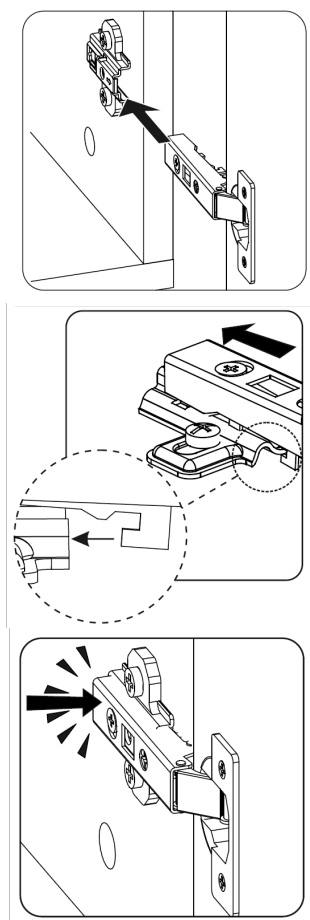

► 10

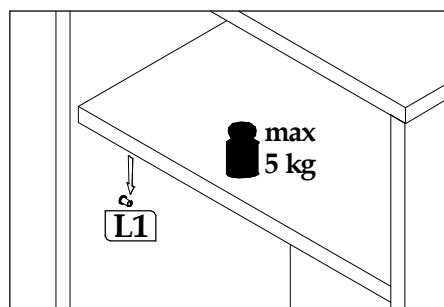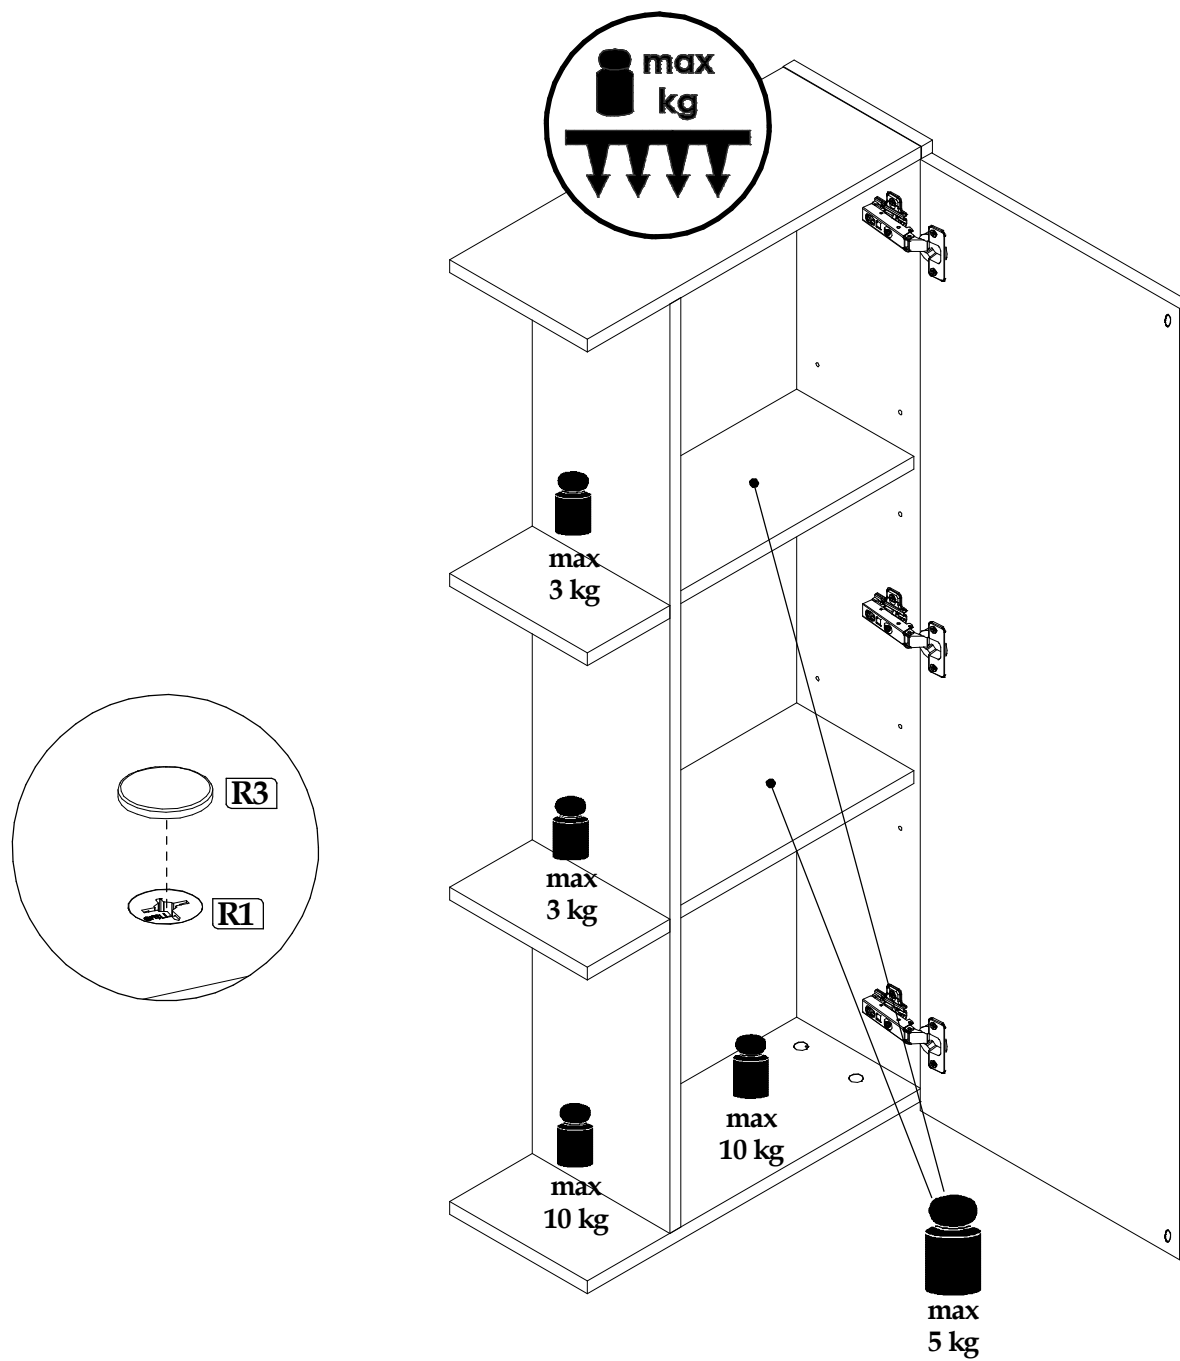

► 11

