


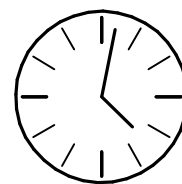
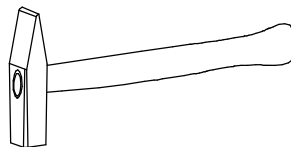
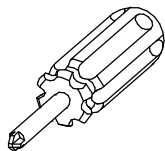
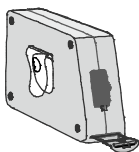
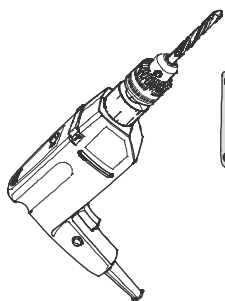
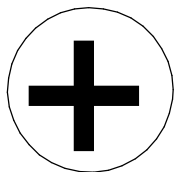
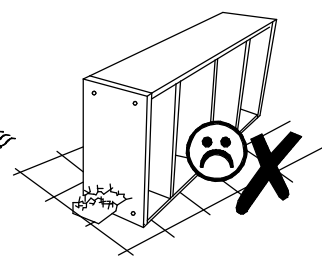
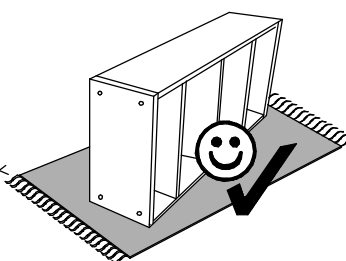
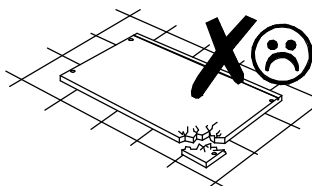
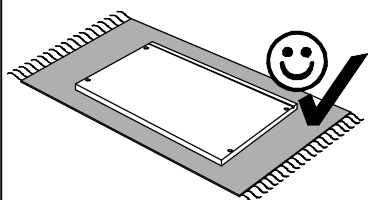
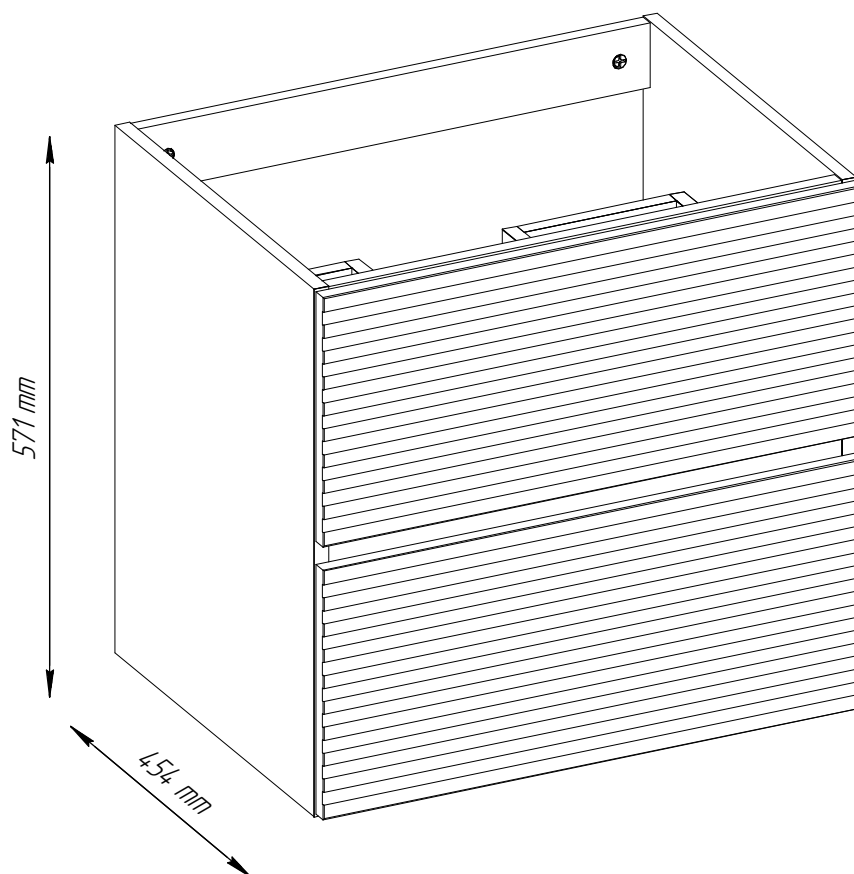
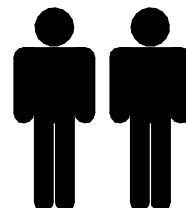
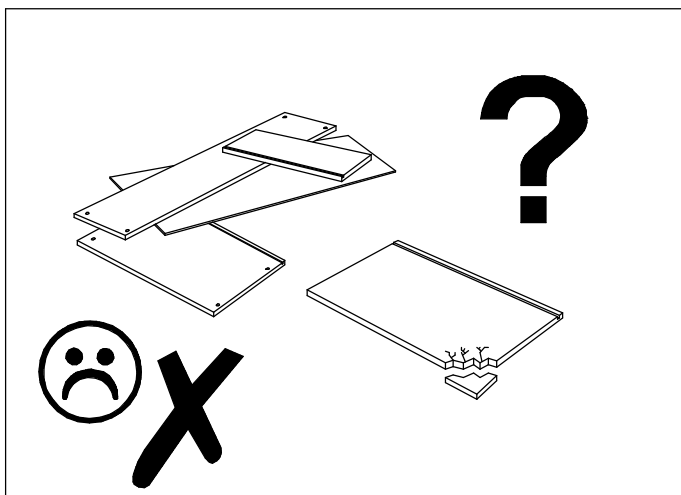
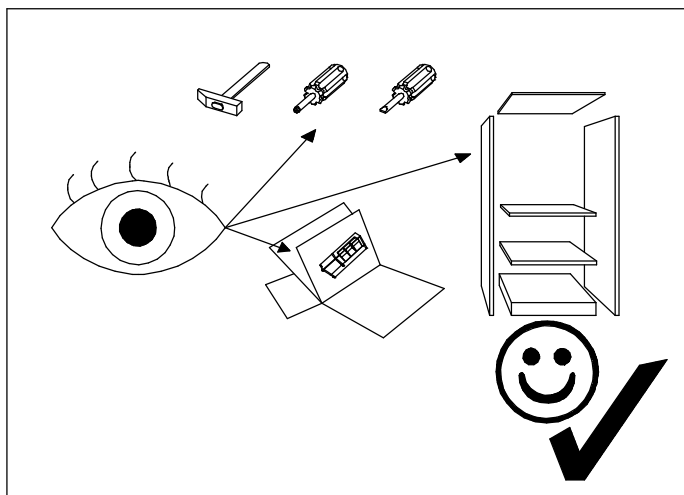
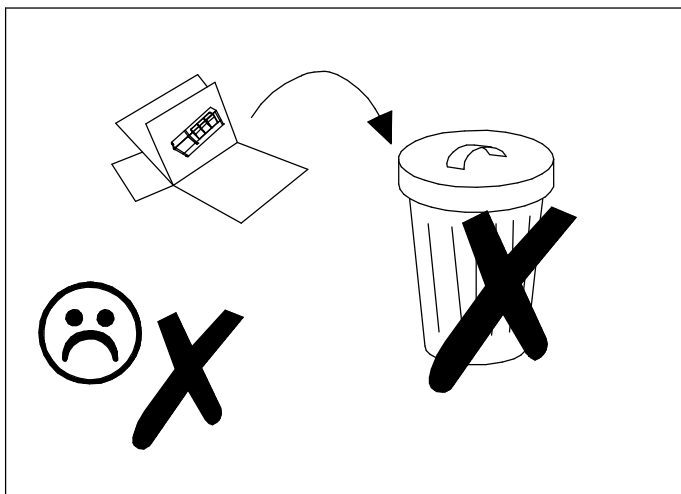



BRUNO T60

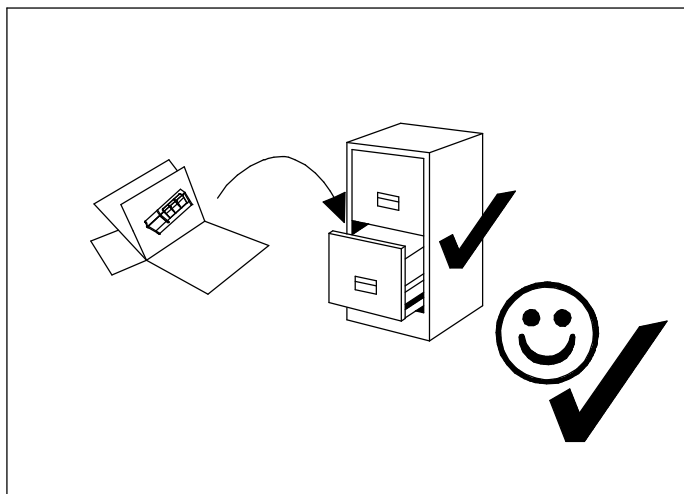





90 min











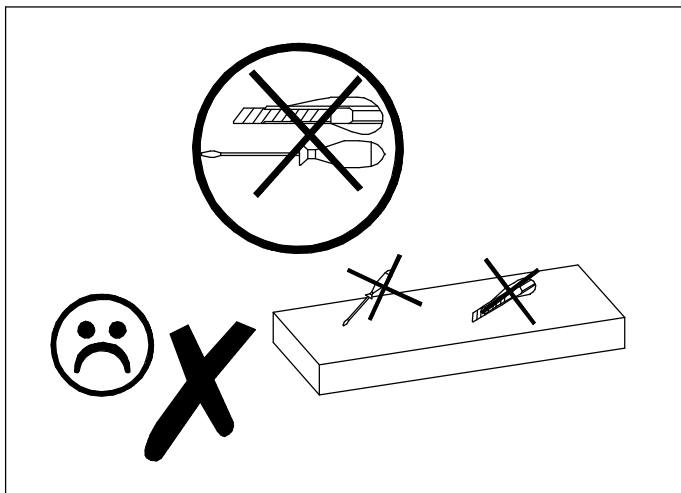


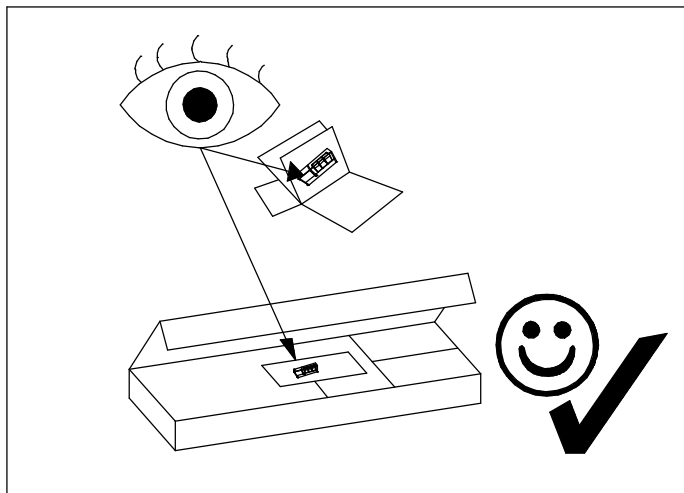

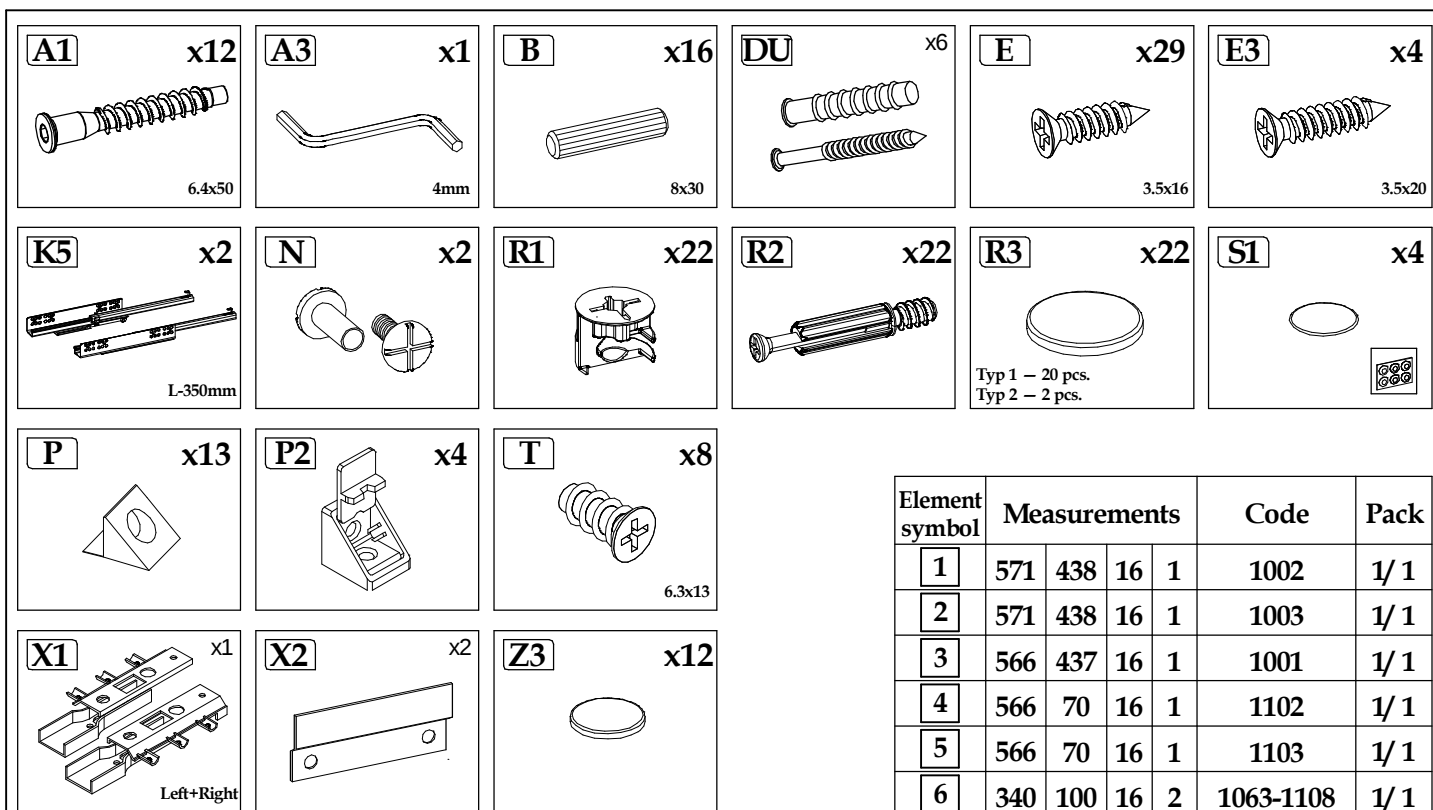


Element symbol	Measurements				Code	Pack
1	571	438	16	1	1002	1/ 1
2	571	438	16	1	1003	1/ 1
3	566	437	16	1	1001	1/ 1
4	566	70	16	1	1102	1/ 1
5	566	70	16	1	1103	1/ 1
6	340	100	16	2	1063-1108	1/ 1
7	168	86.5	16	2	1064-1069	1/ 1
8	340	100	16	2	1107-1070	1/ 1
9	340	150	16	1	1024	1/ 1
10	526	136	16	1	1022_v	1/ 1
11	340	150	16	1	1025	1/ 1
12	566	60	16	1	1076	1/ 1
13	178	345	3	2	N/ A	1/ 1
14	536	345	3	1	N/ A	1/ 1
15	596	272	16	1	1004_3001	1/ 1
16	596	272	16	1	1004_3002	1/ 1

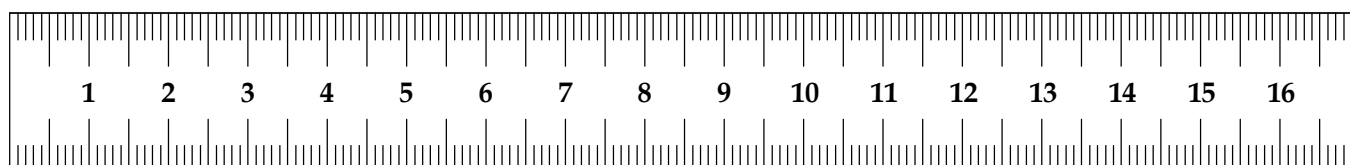

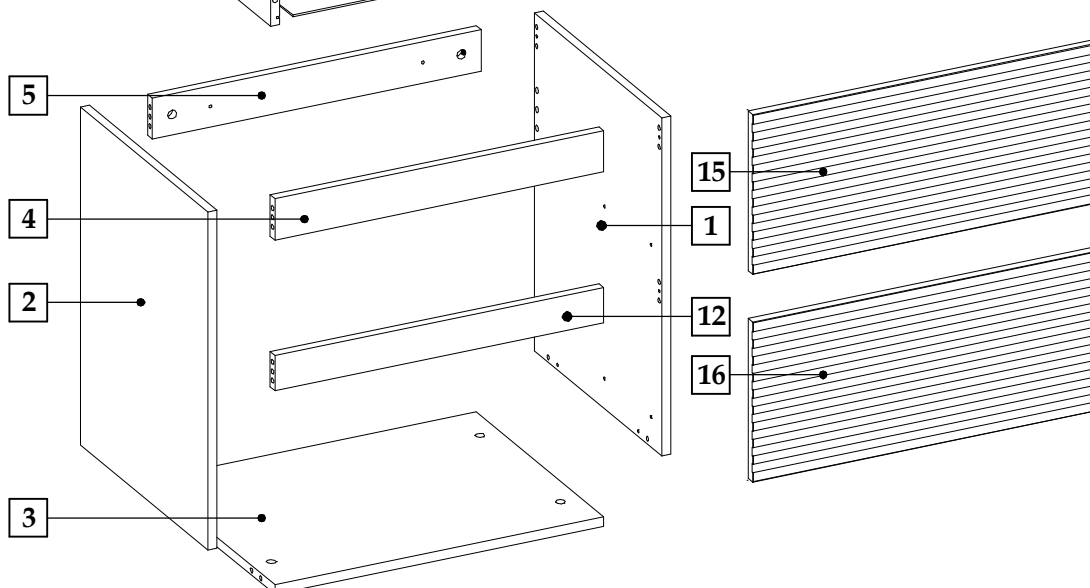
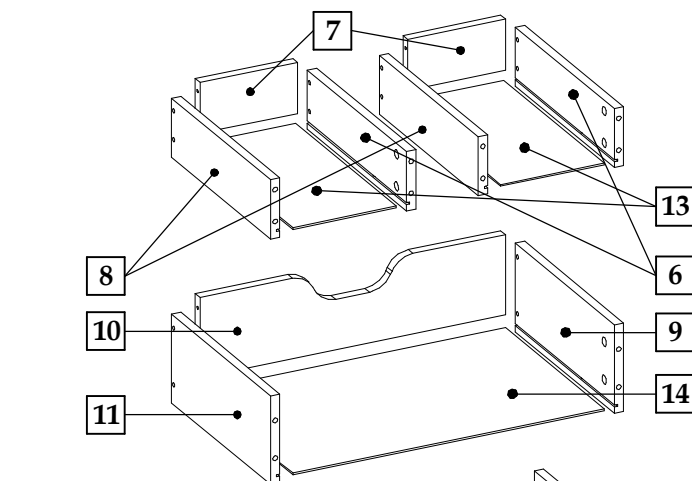


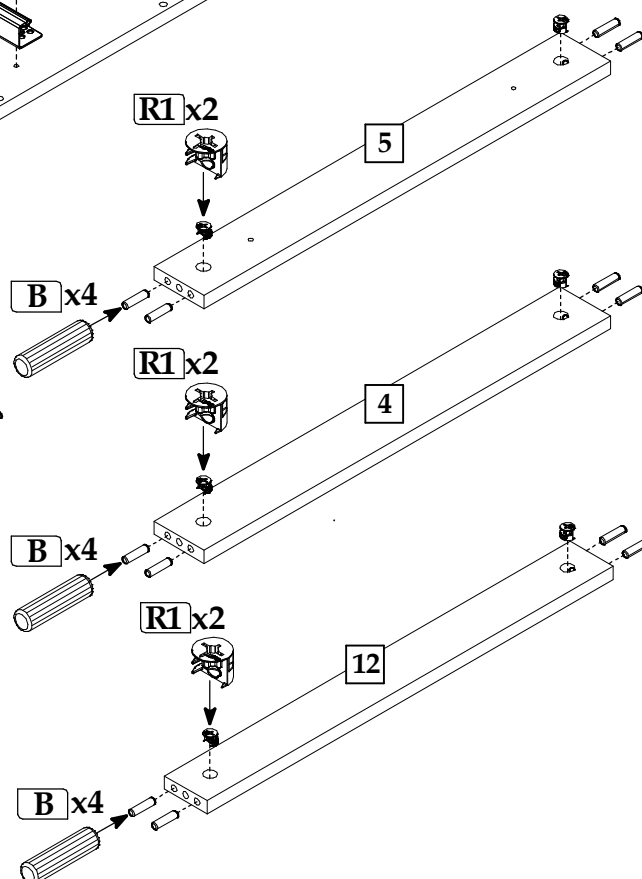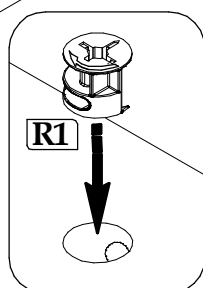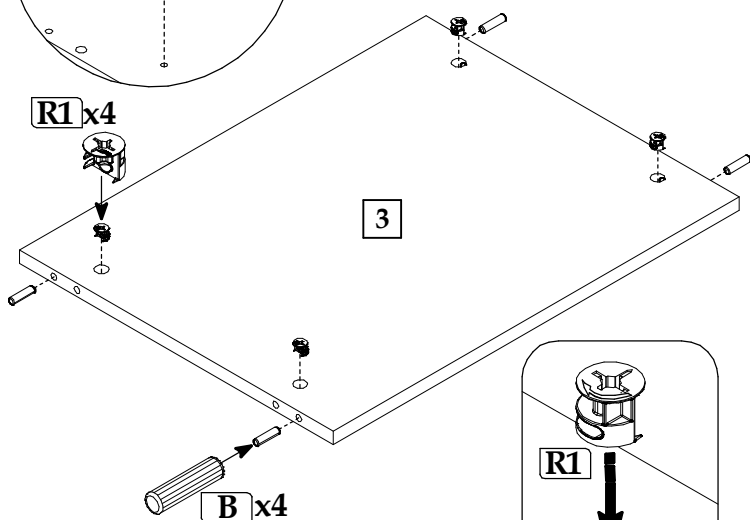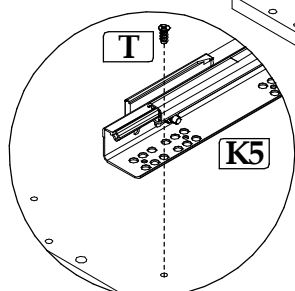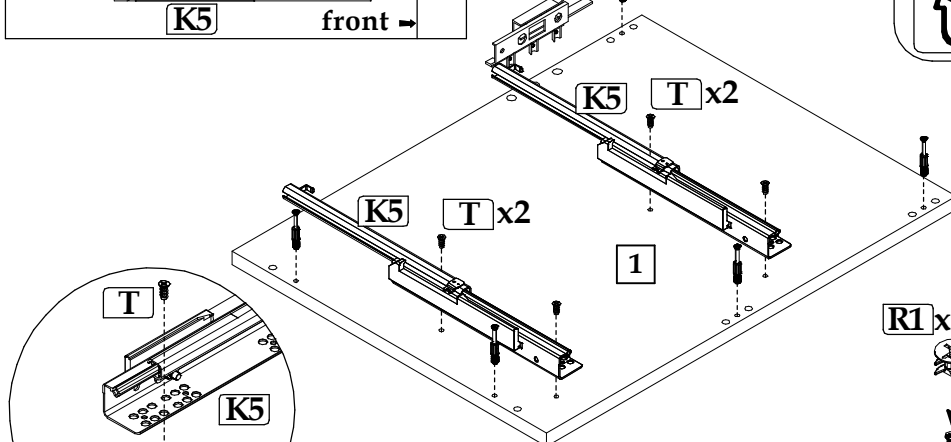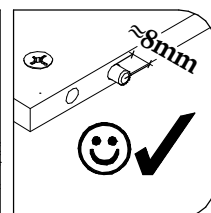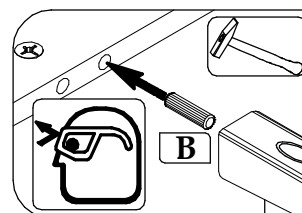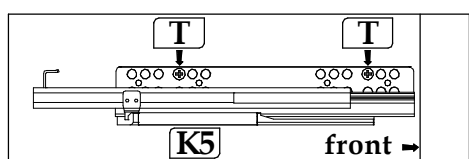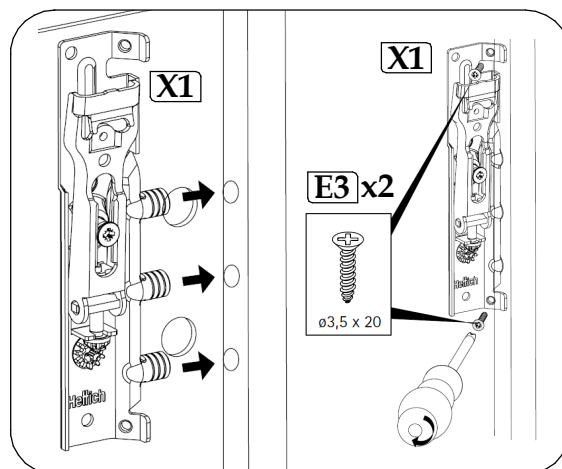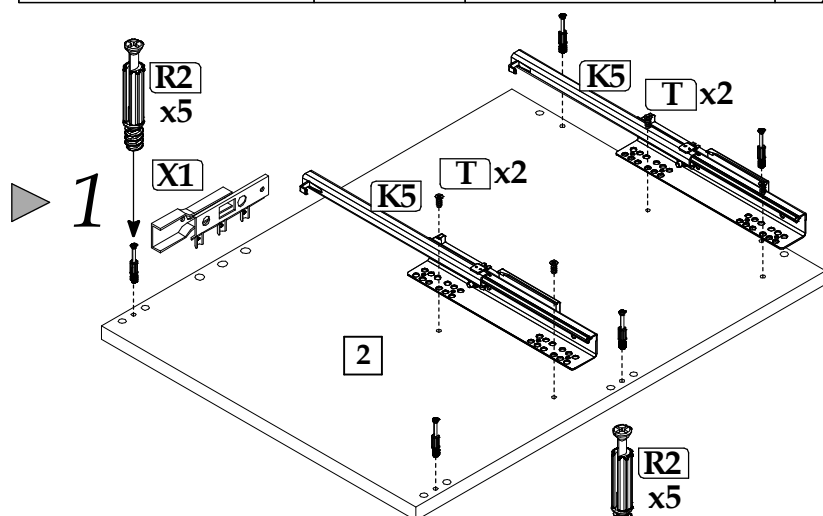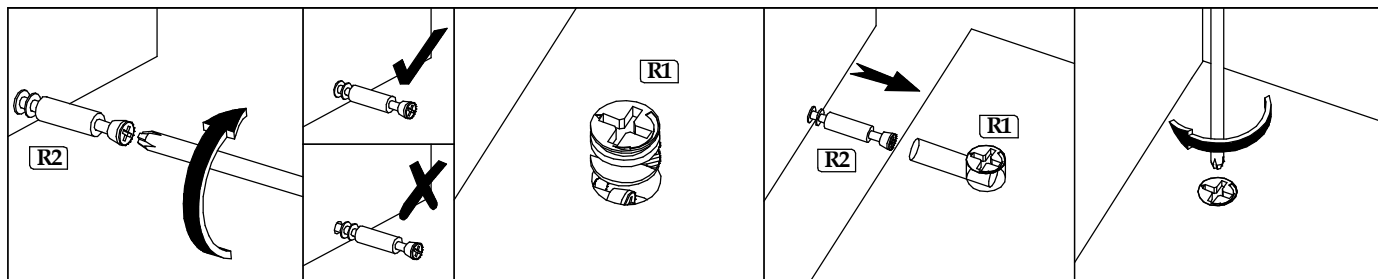










► 2

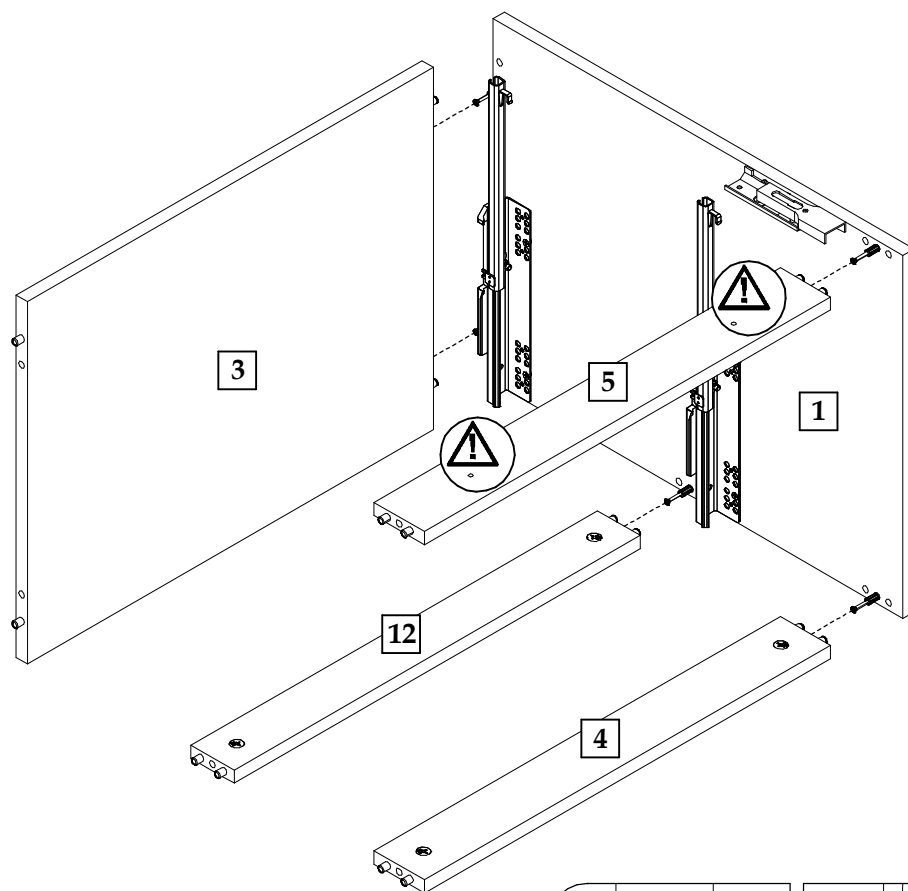

















► 3

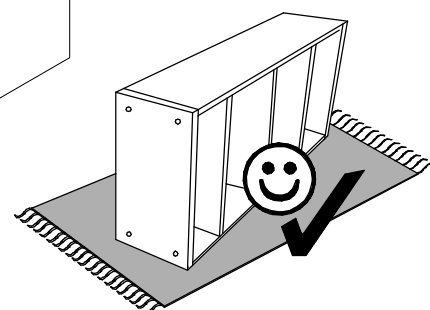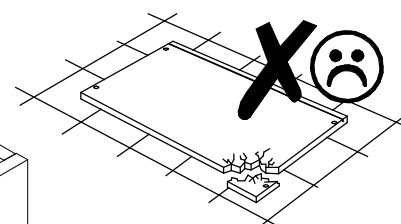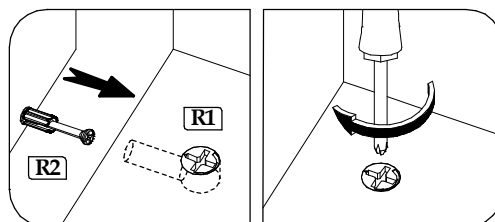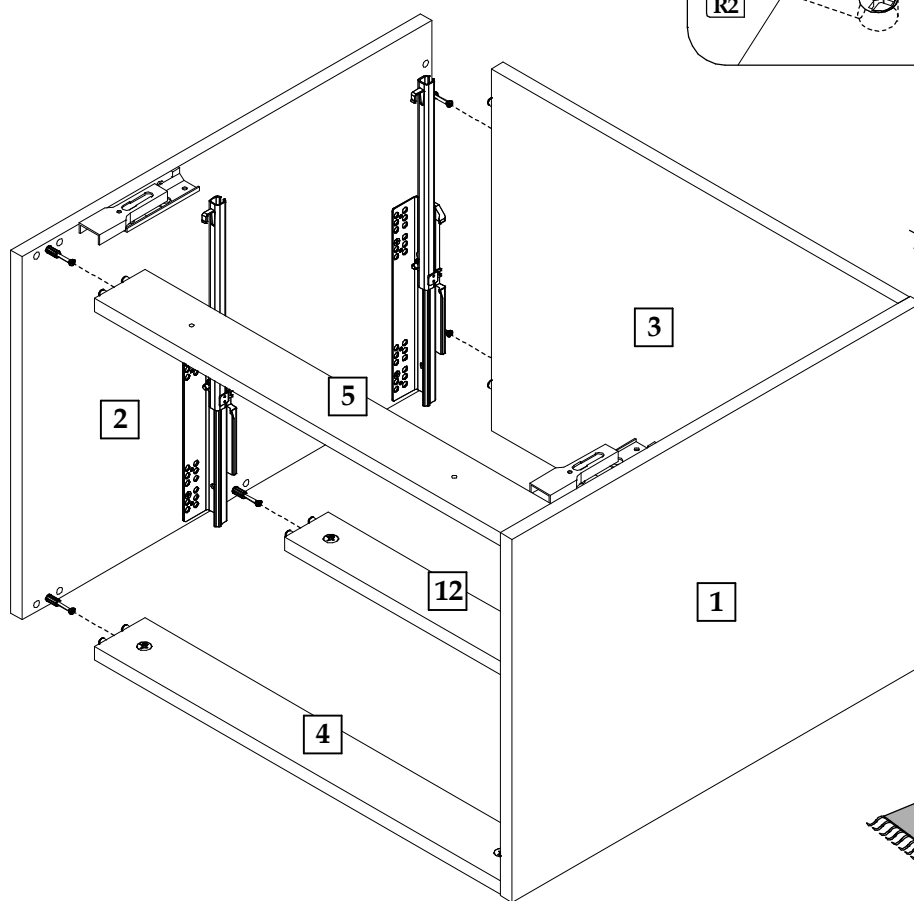

► 4

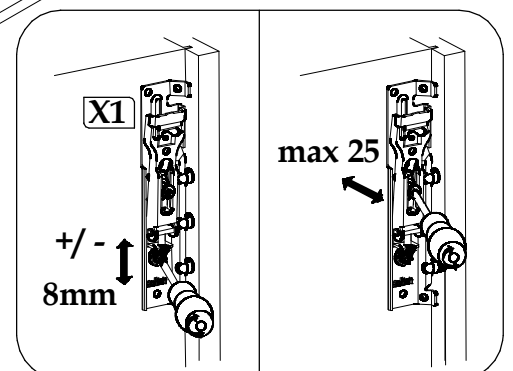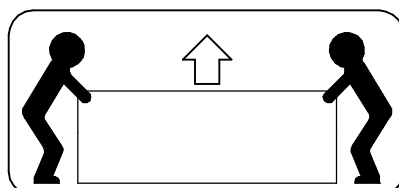
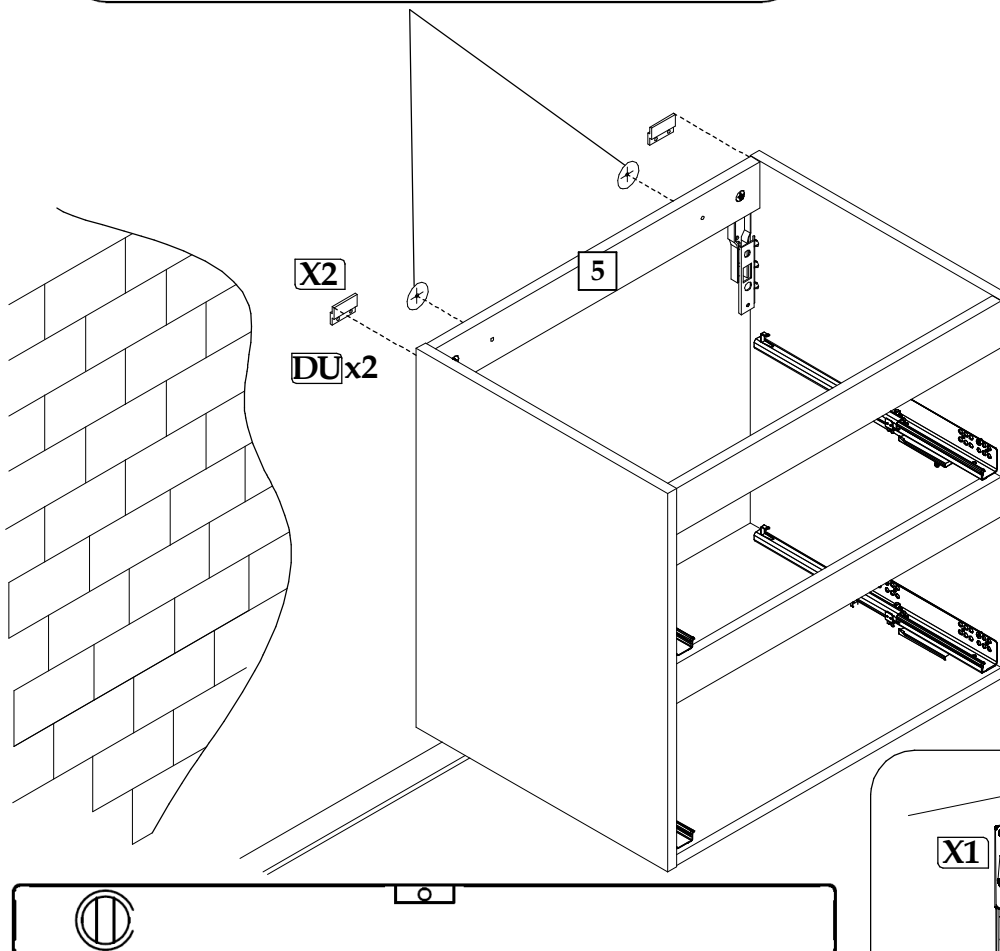
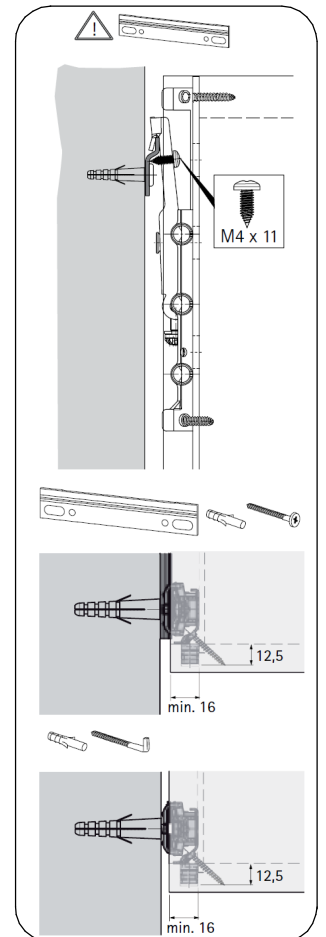
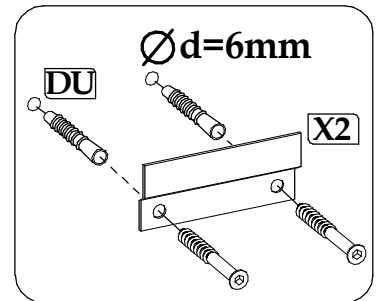
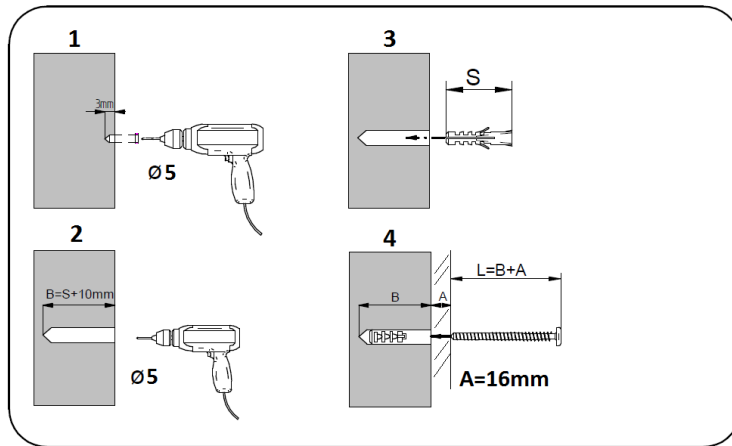
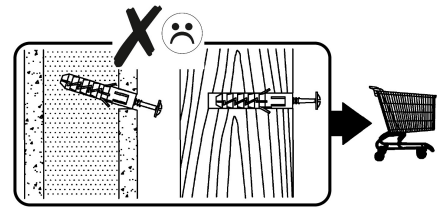
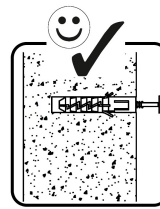
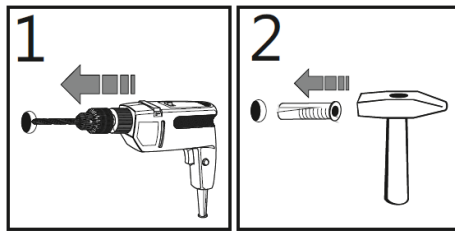


► 5

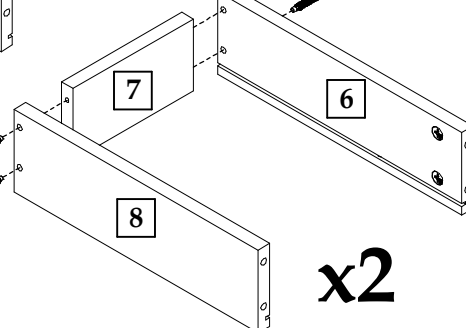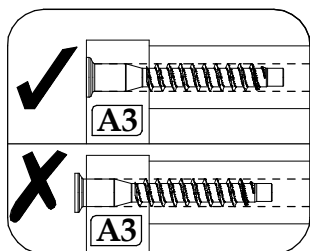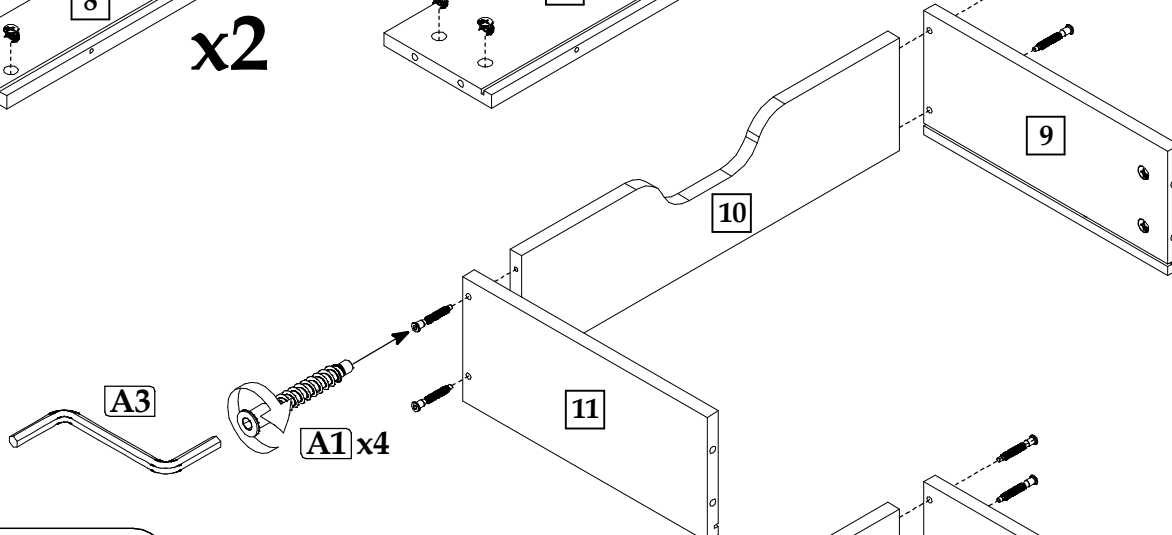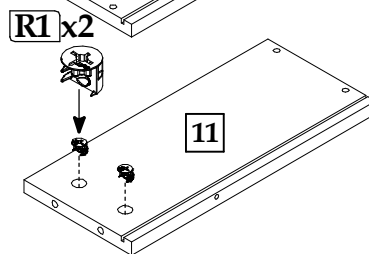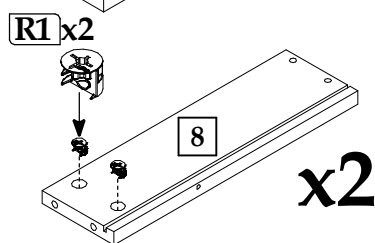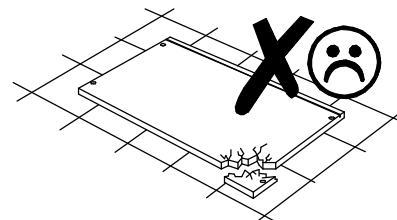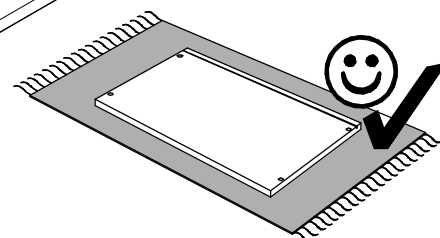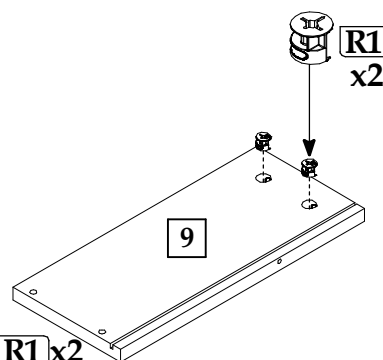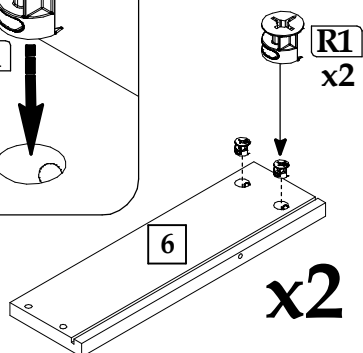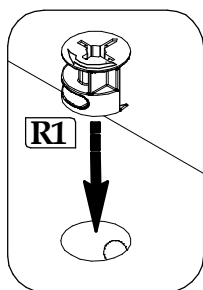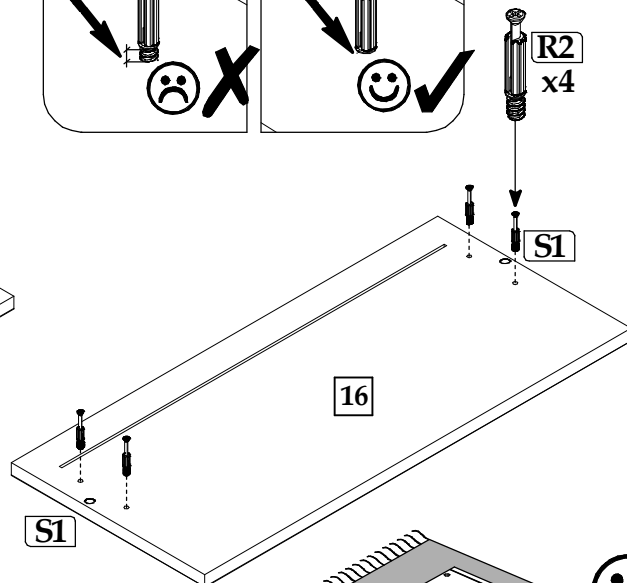
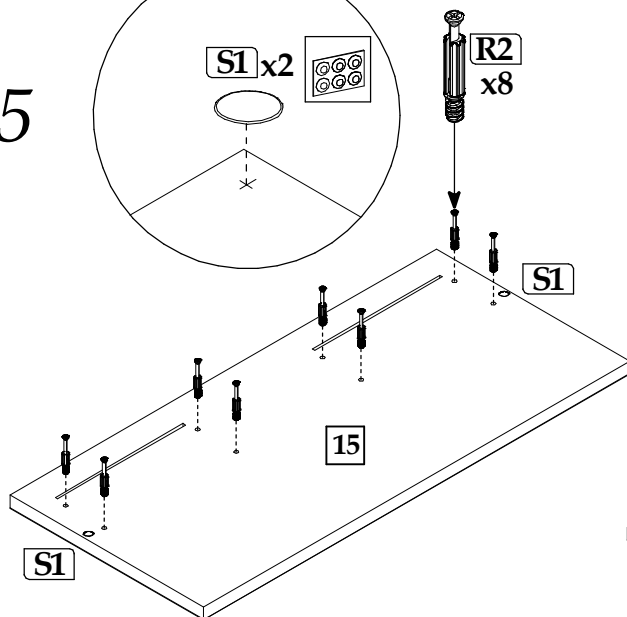
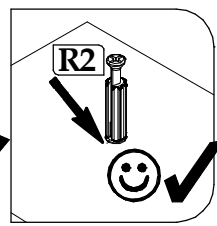
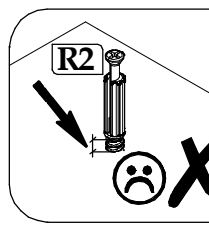
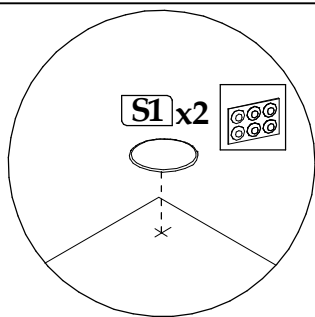


x2

► 6

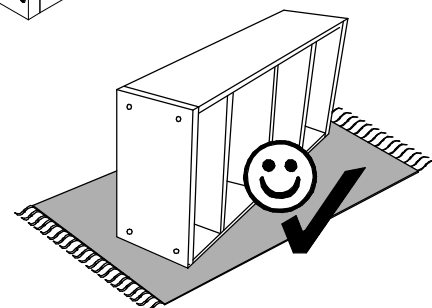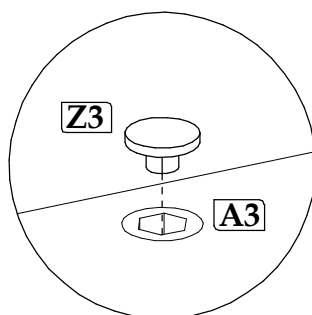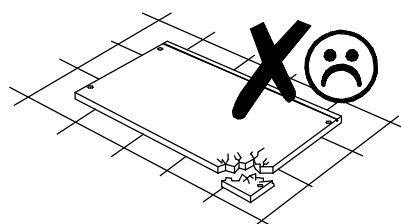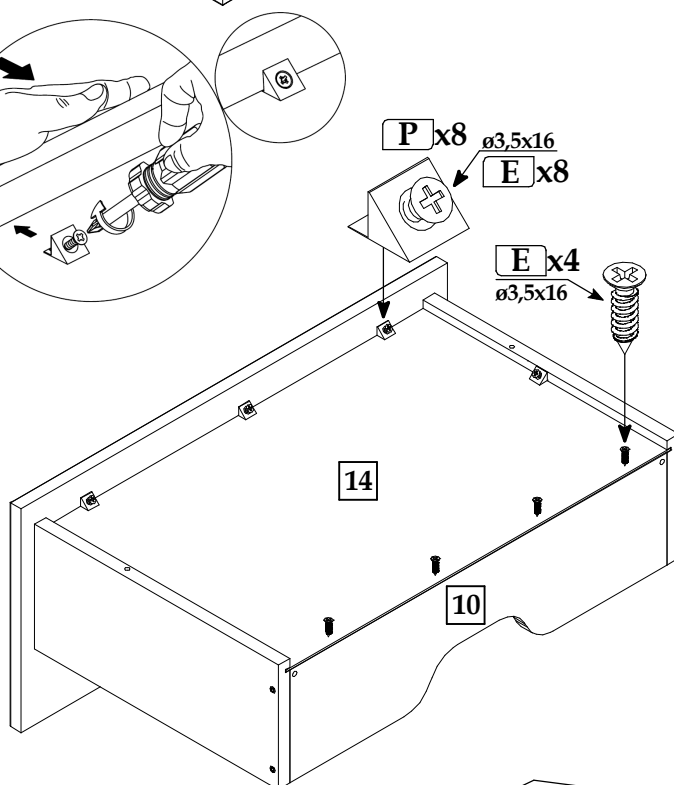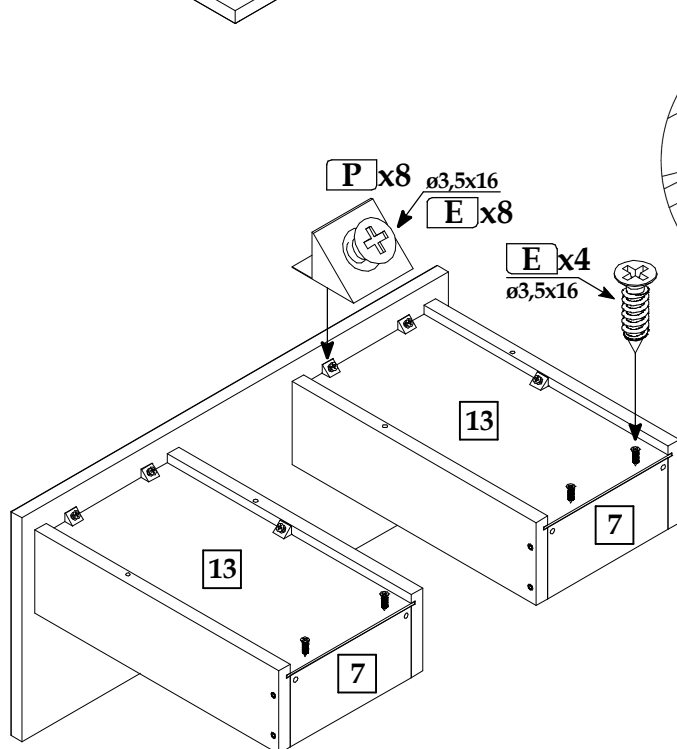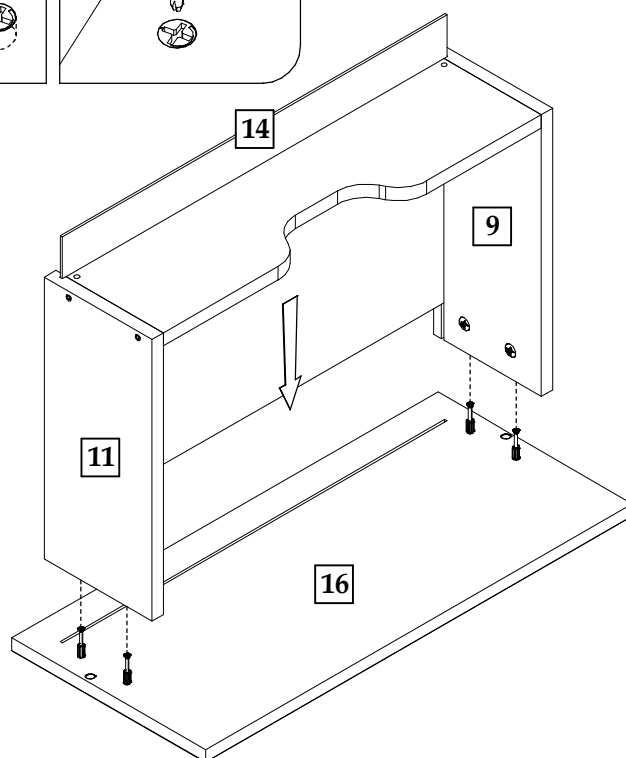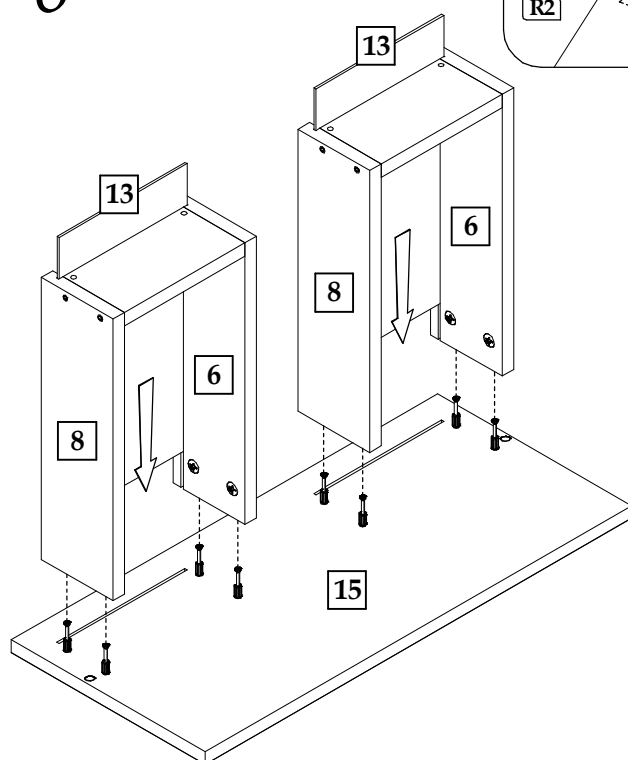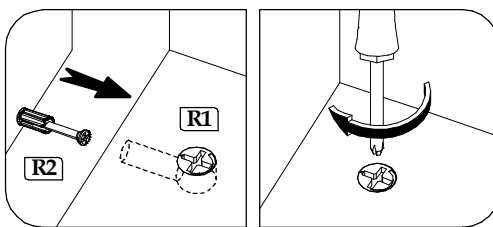

► 7

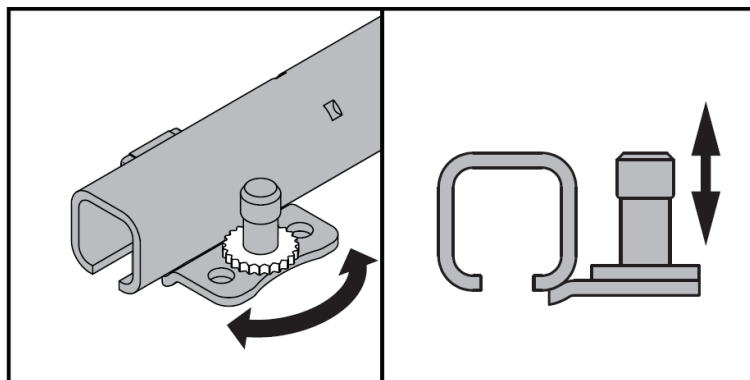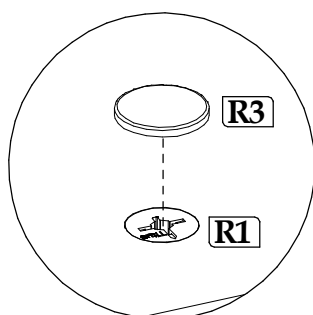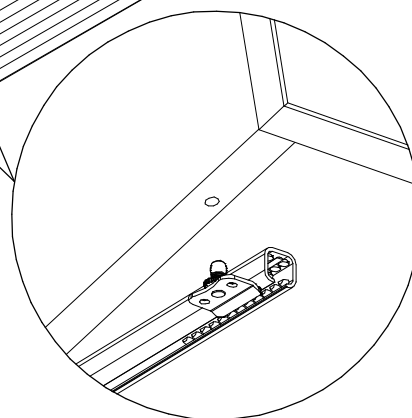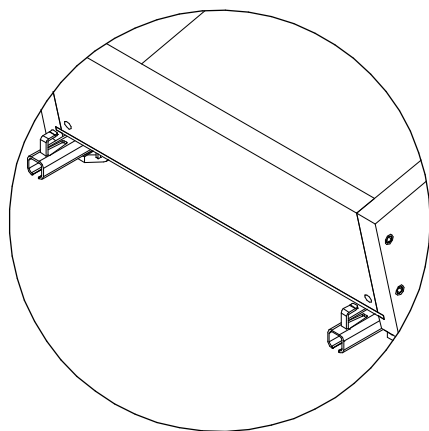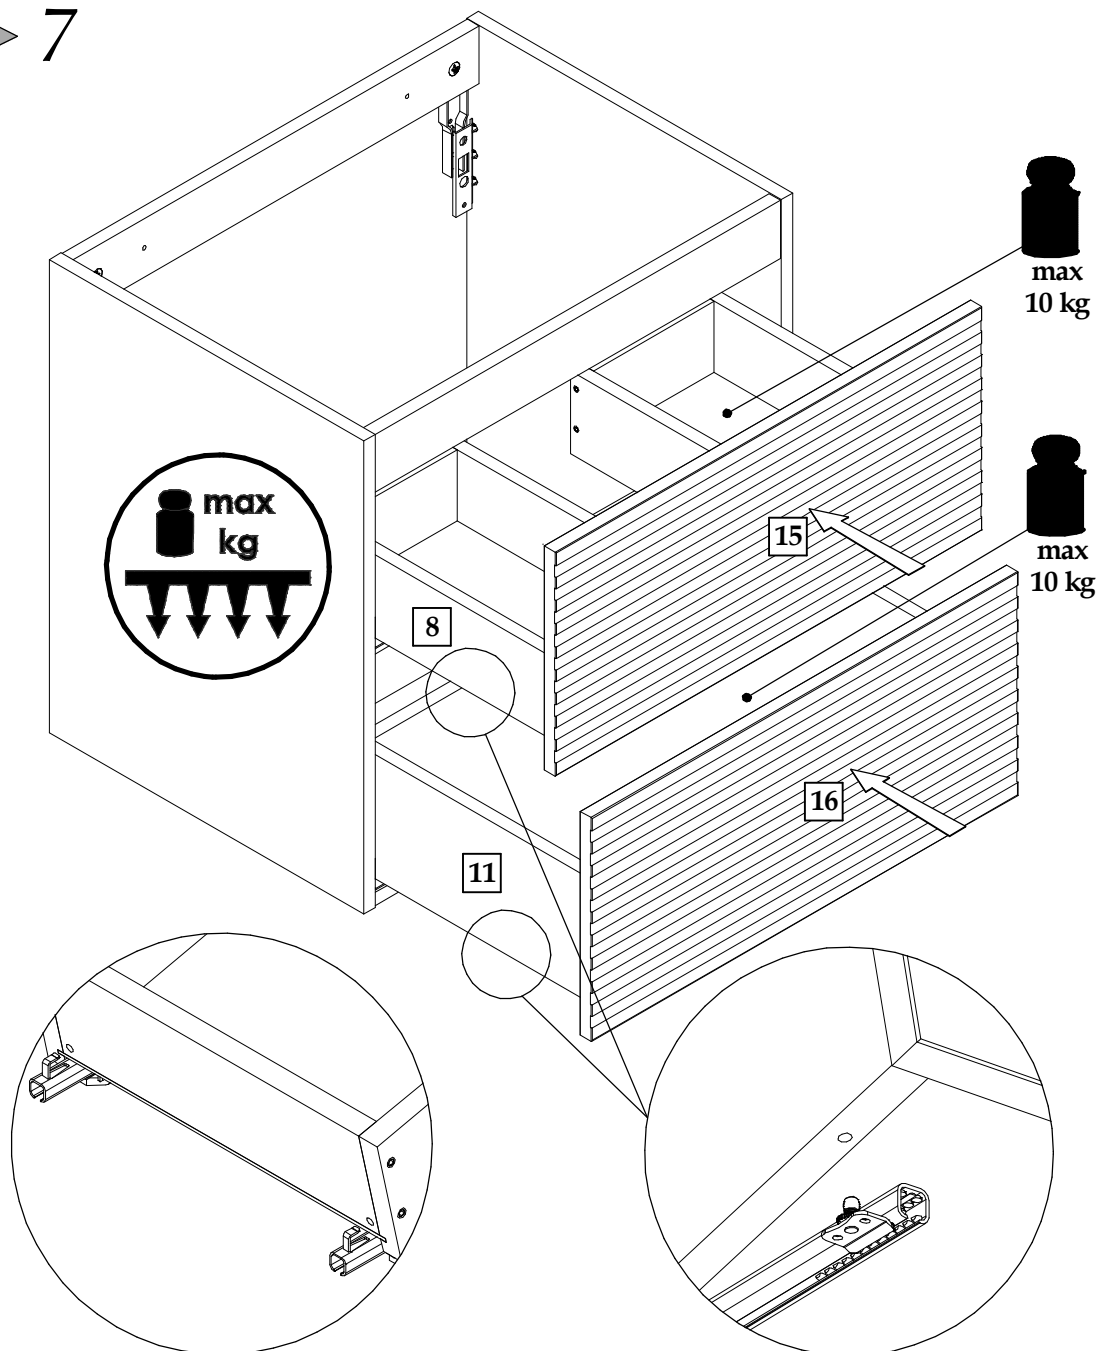

► 8

