


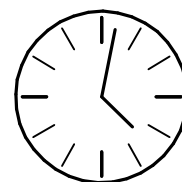
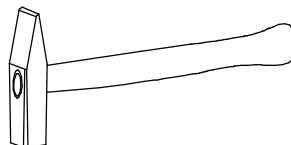
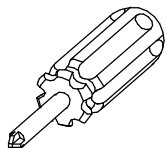
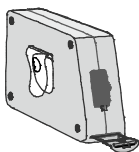
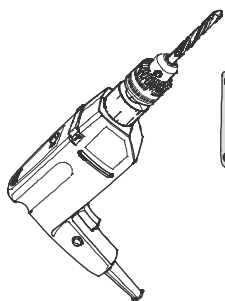
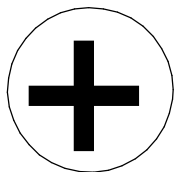
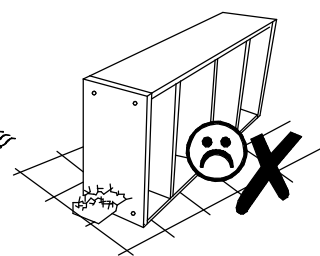
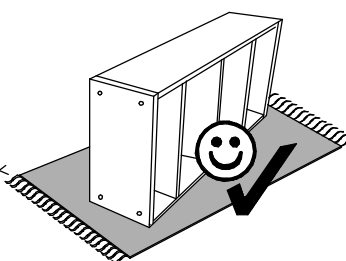
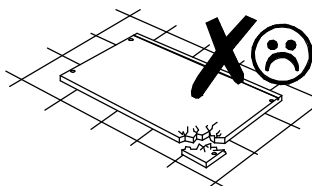
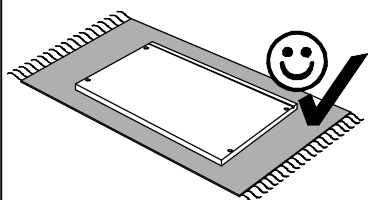
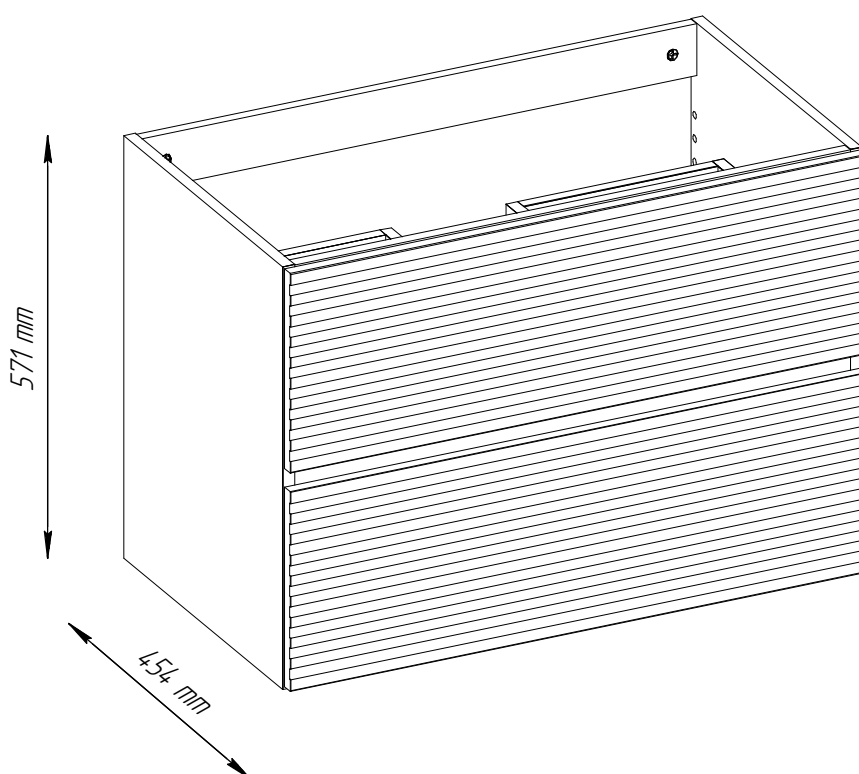
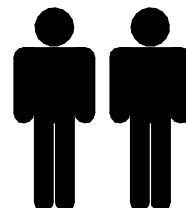
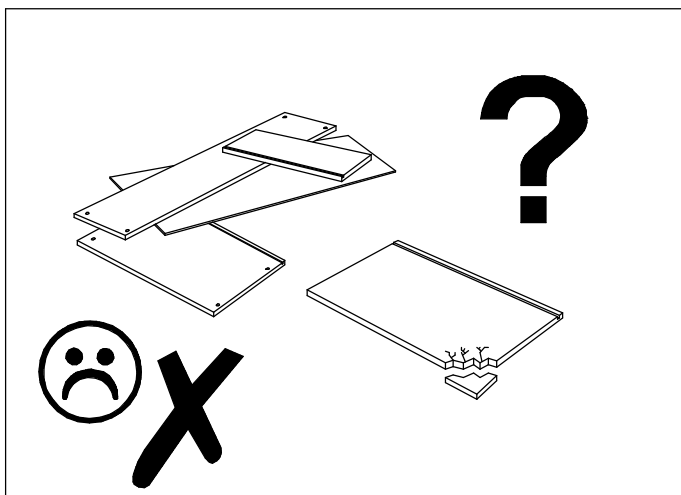
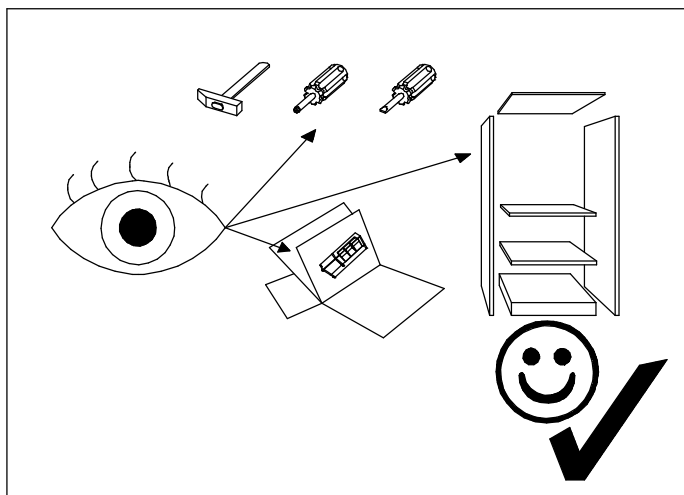
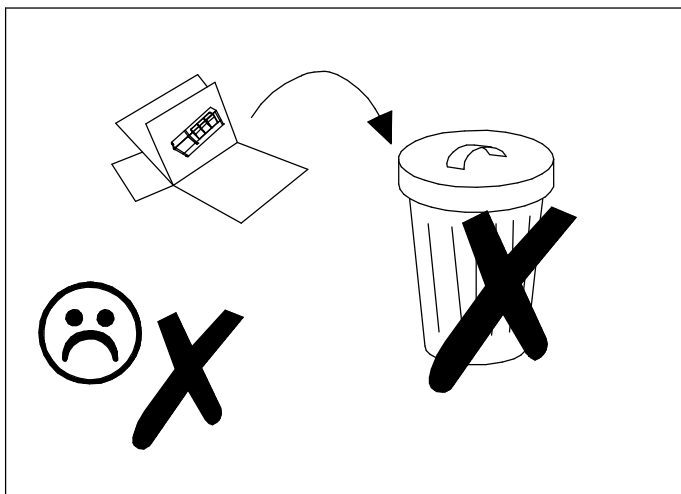



BRUNO T80

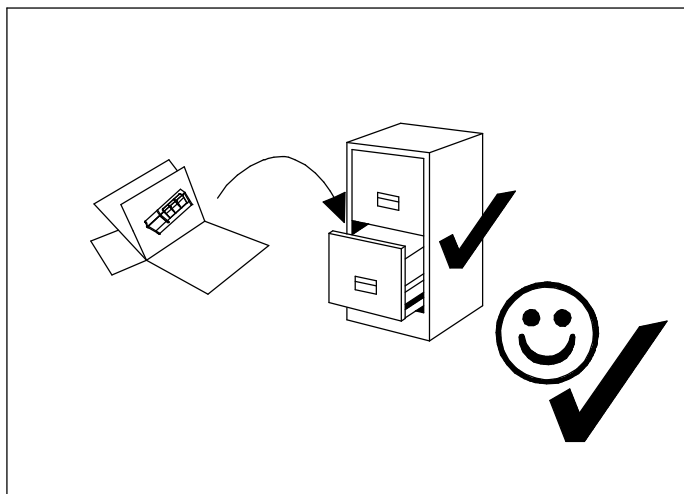





90 min

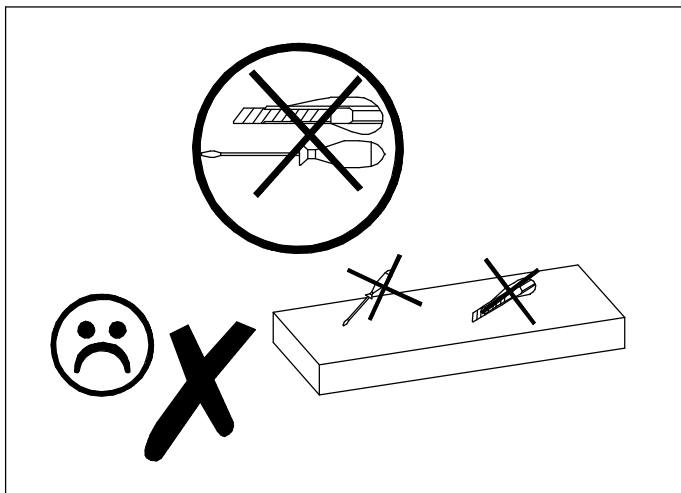


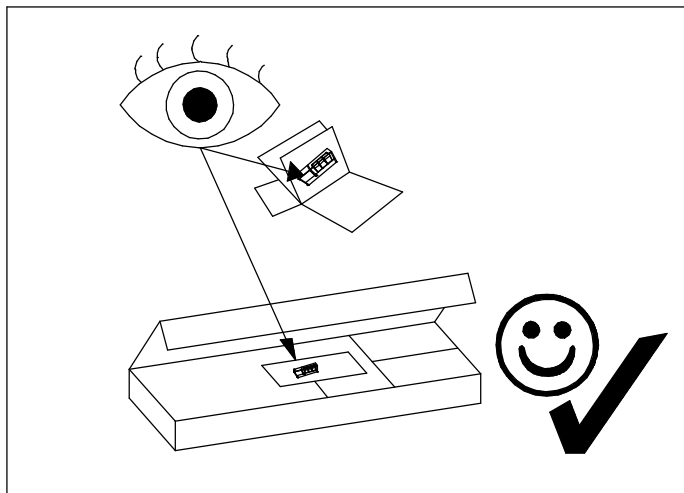










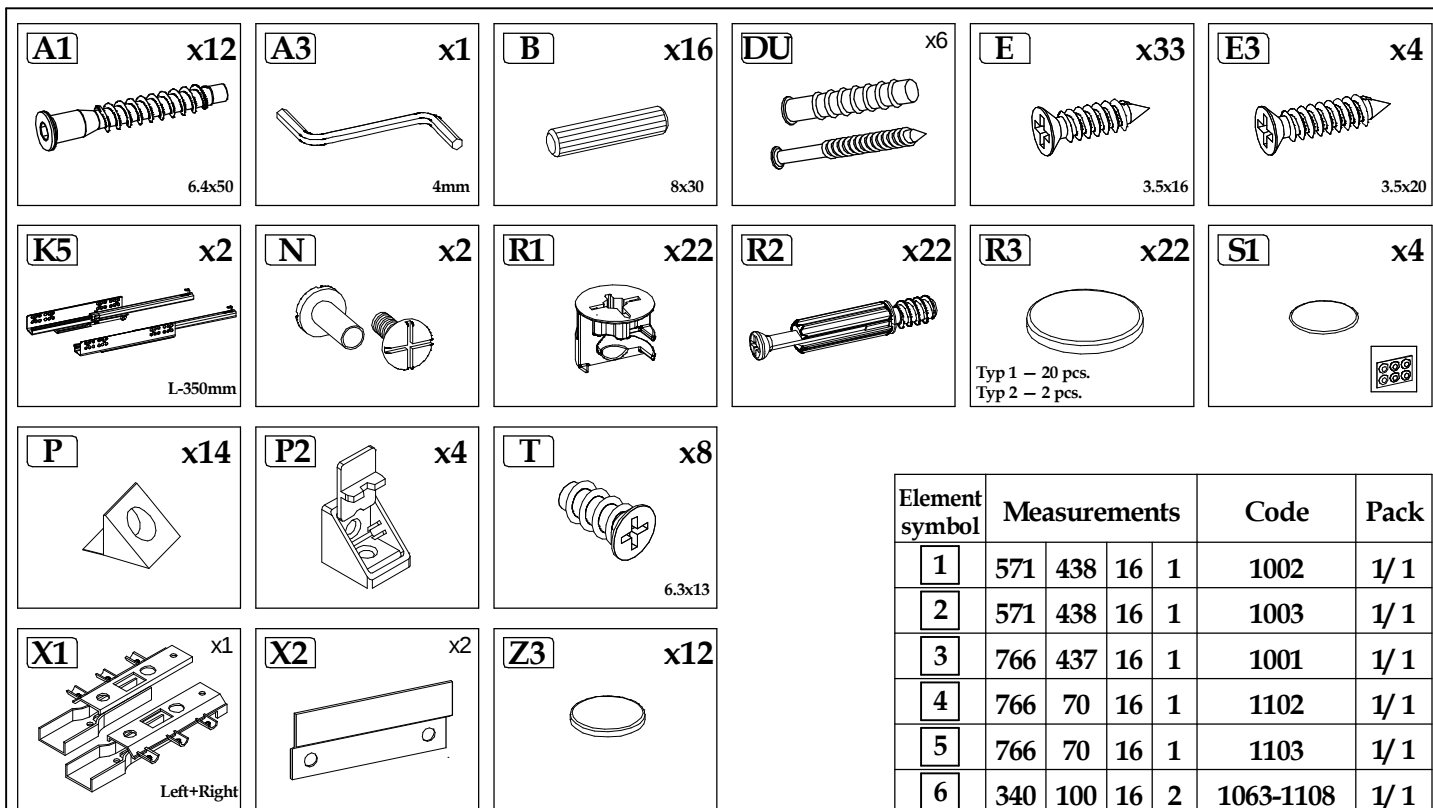


Element symbol	Measurements				Code	Pack
1	571	438	16	1	1002	1/ 1
2	571	438	16	1	1003	1/ 1
3	766	437	16	1	1001	1/ 1
4	766	70	16	1	1102	1/ 1
5	766	70	16	1	1103	1/ 1
6	340	100	16	2	1063-1108	1/ 1
7	268	86.5	16	2	1064-1069	1/ 1
8	340	100	16	2	1107-1070	1/ 1
9	340	150	16	1	1024	1/ 1
10	726	136.5	16	1	1022_v	1/ 1
11	340	150	16	1	1025	1/ 1
12	766	60	16	1	1076	1/ 1
13	278	345	3	2	N/ A	1/ 1
14	736	345	3	1	N/ A	1/ 1
15	796	272	16	1	1006_3001	1/ 1
16	796	272	16	1	1006_3002	1/ 1

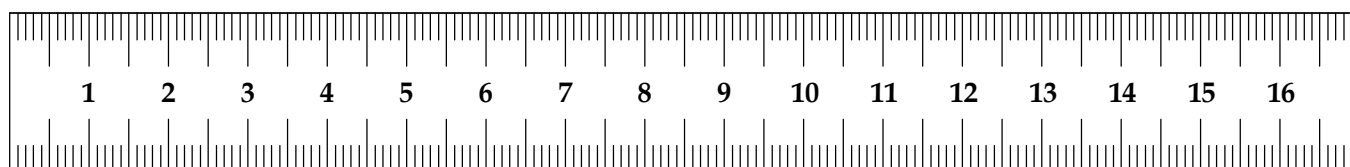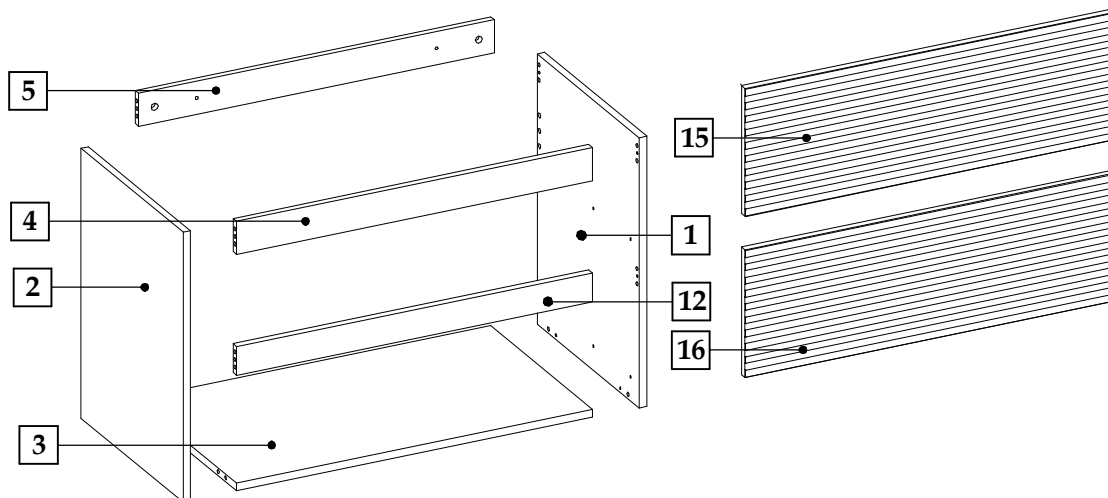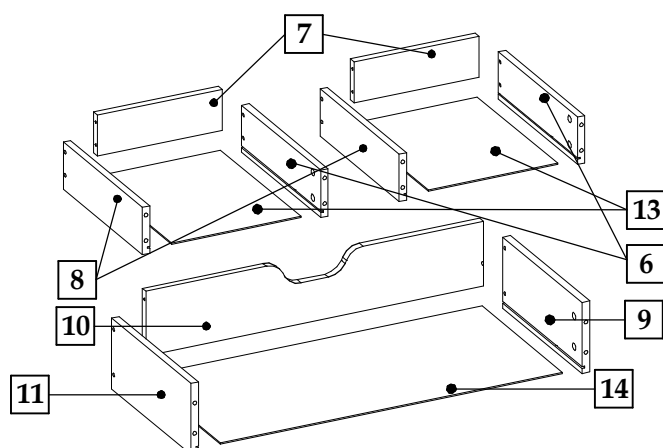


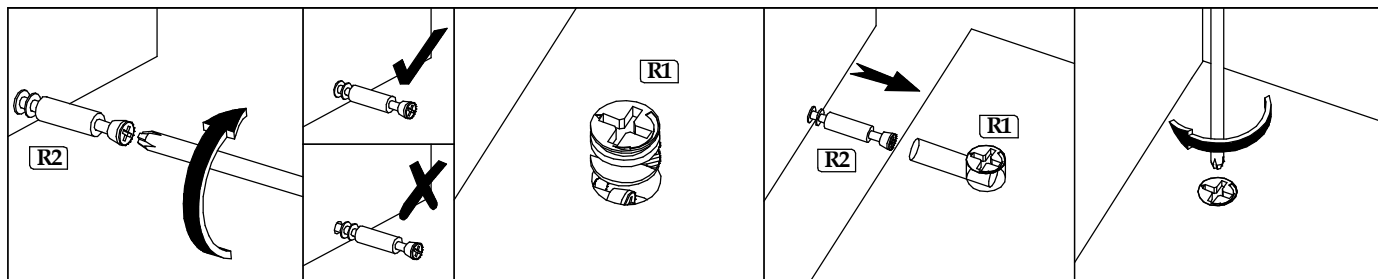





► 1

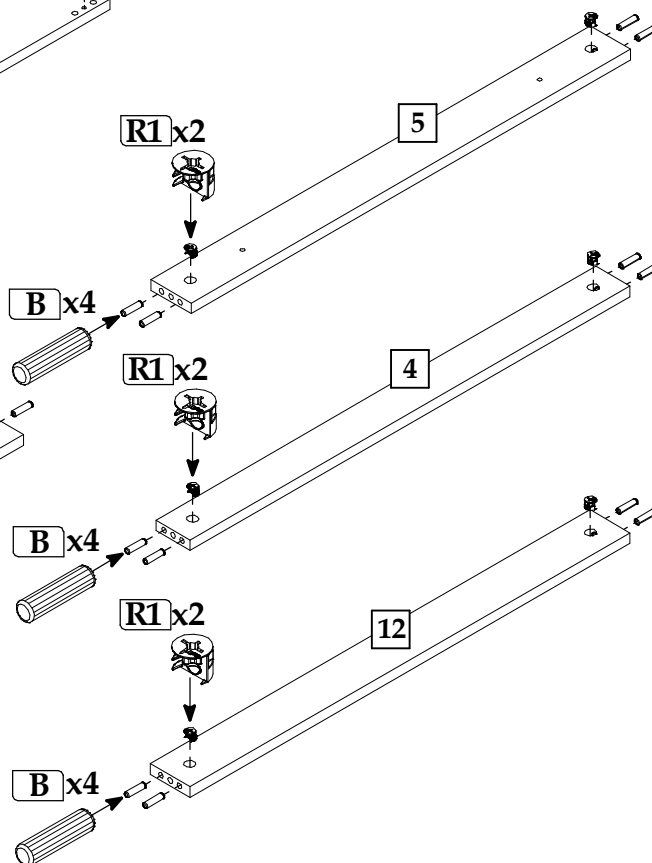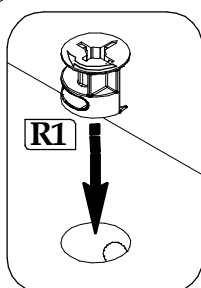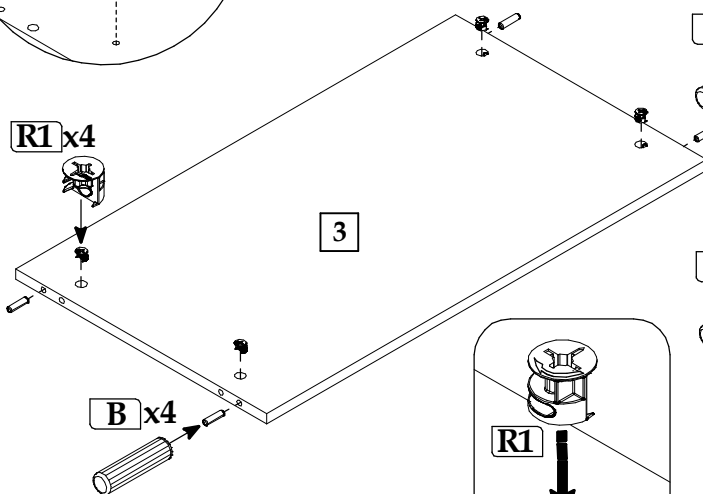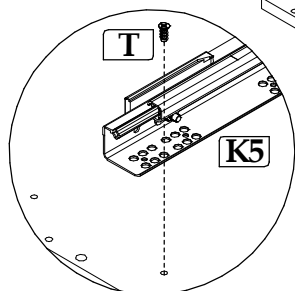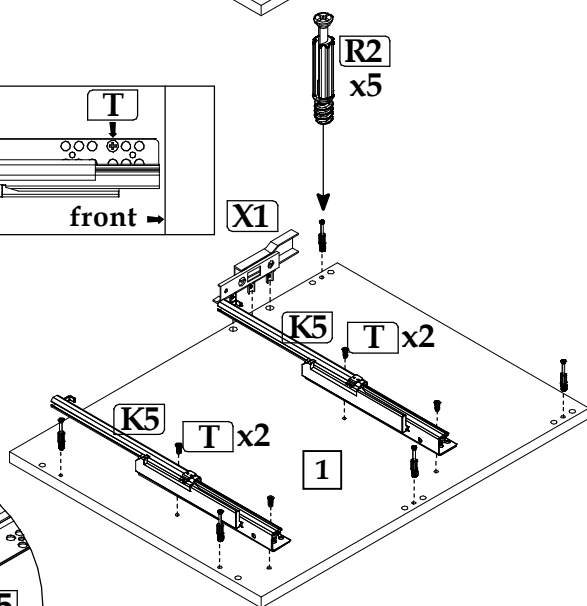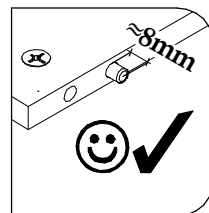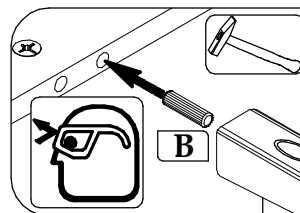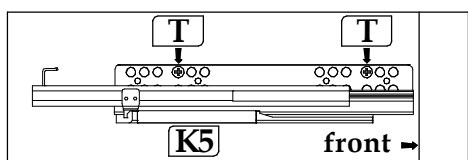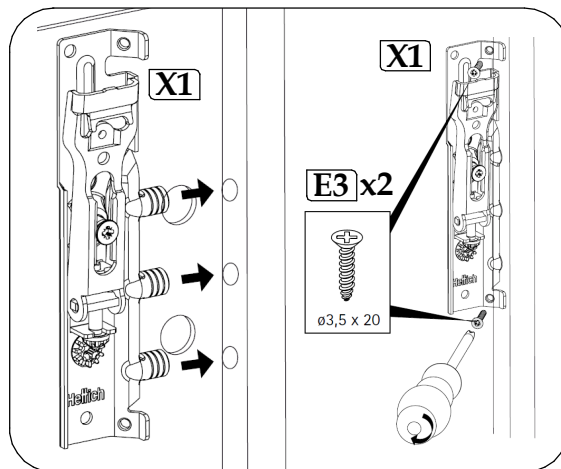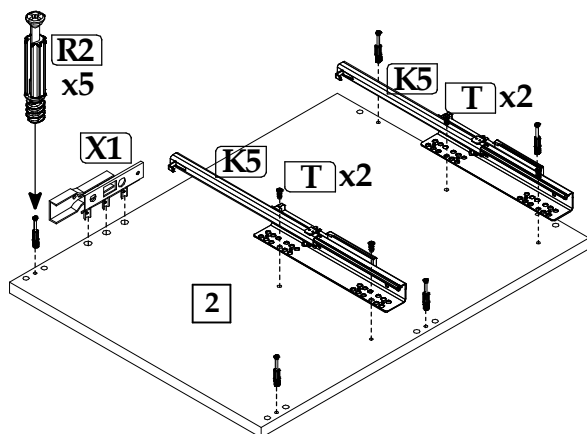











► 2

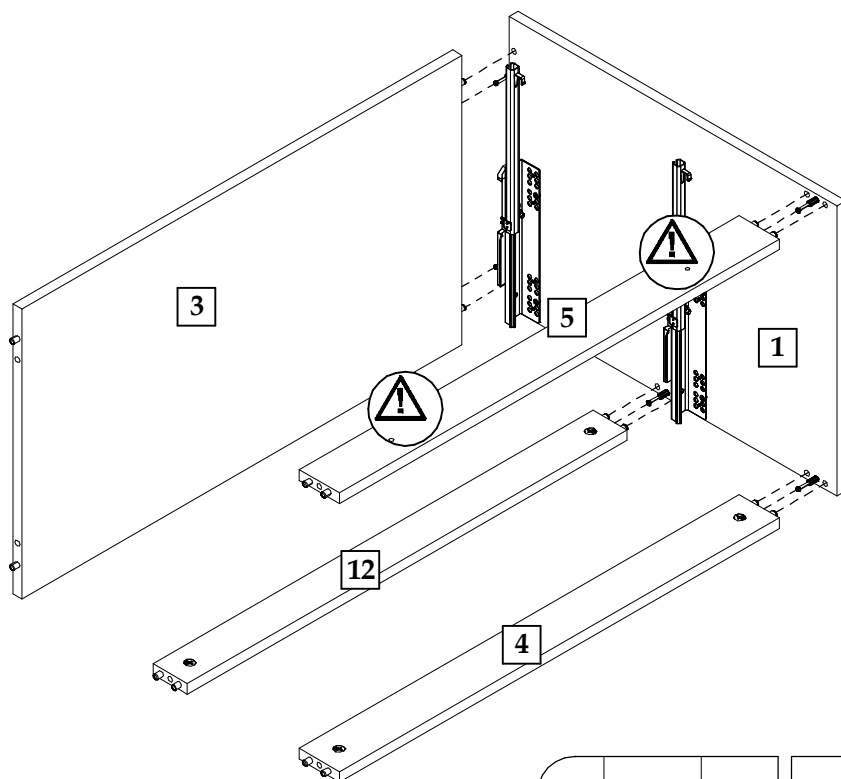












► 3

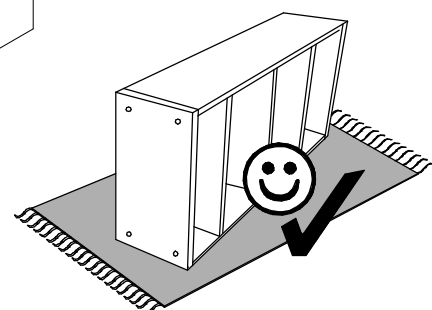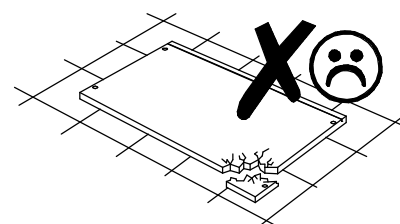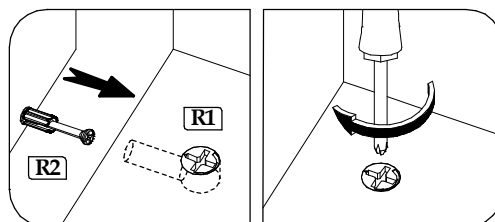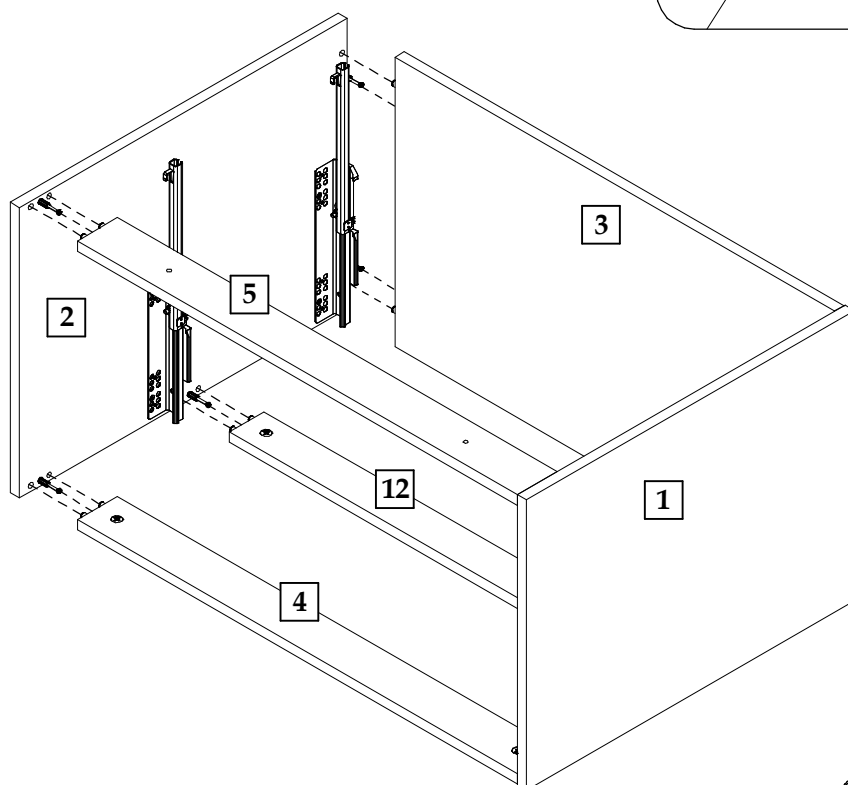










► 4

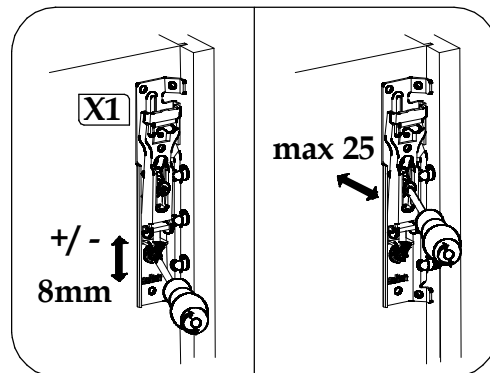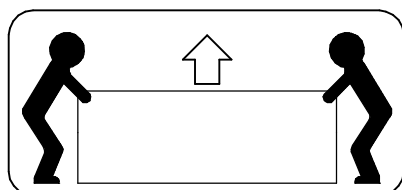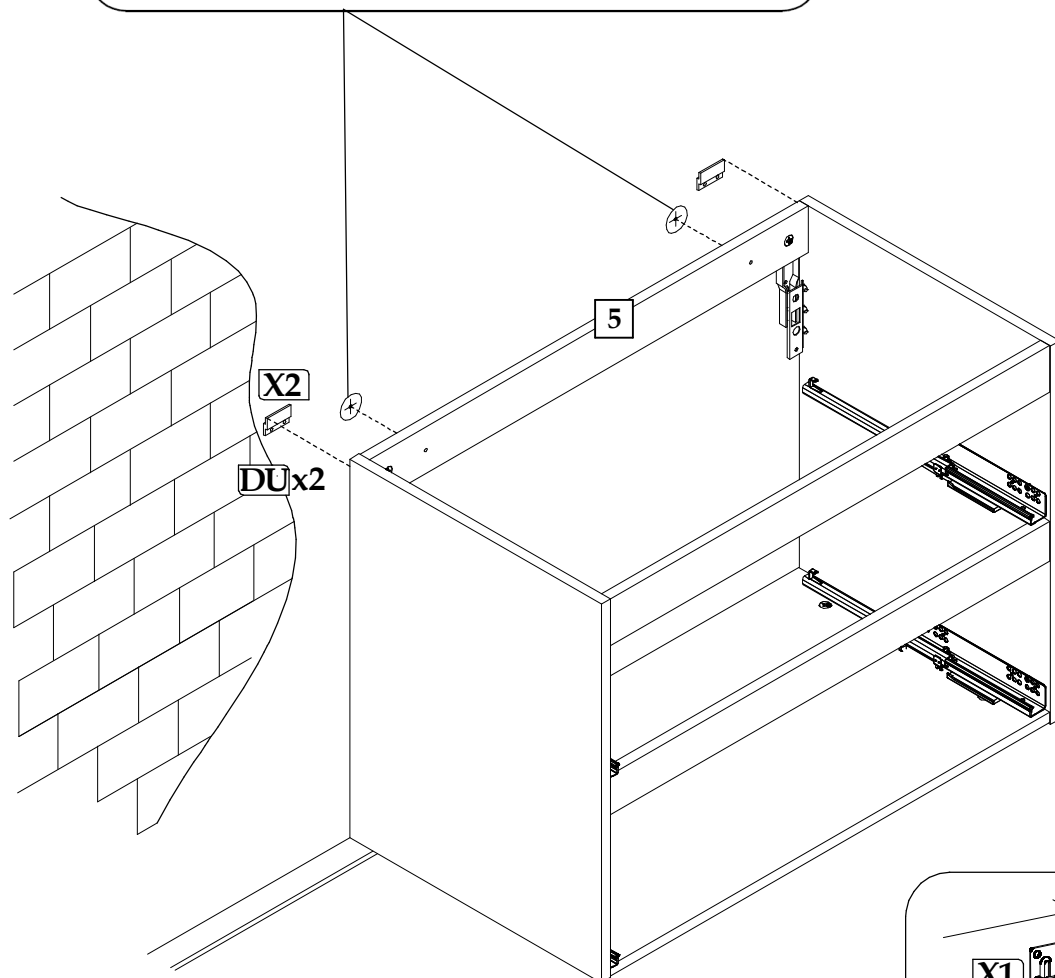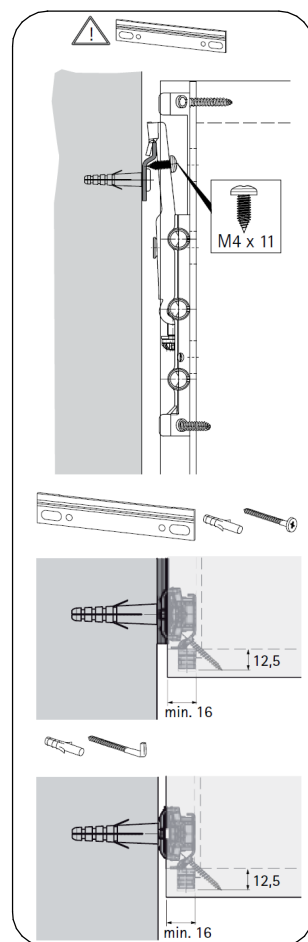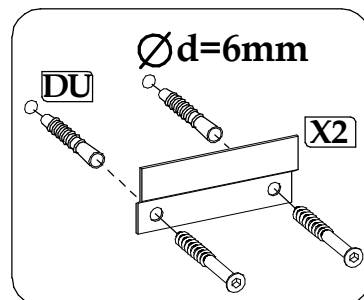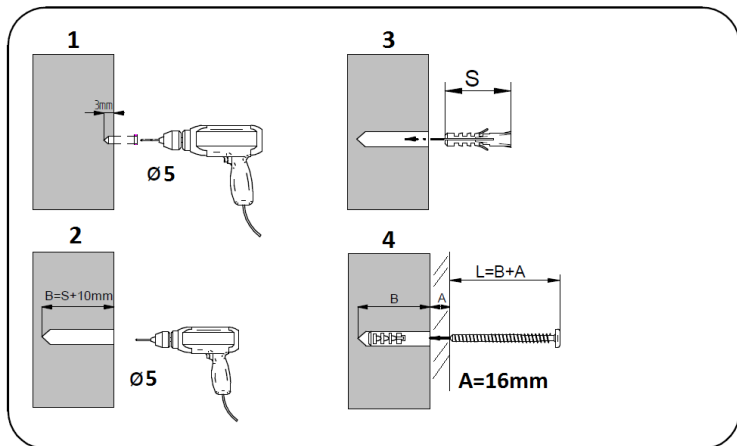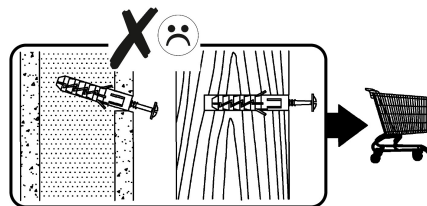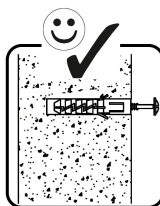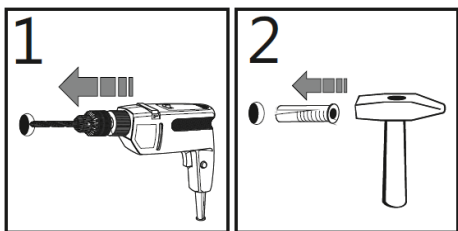






► 5

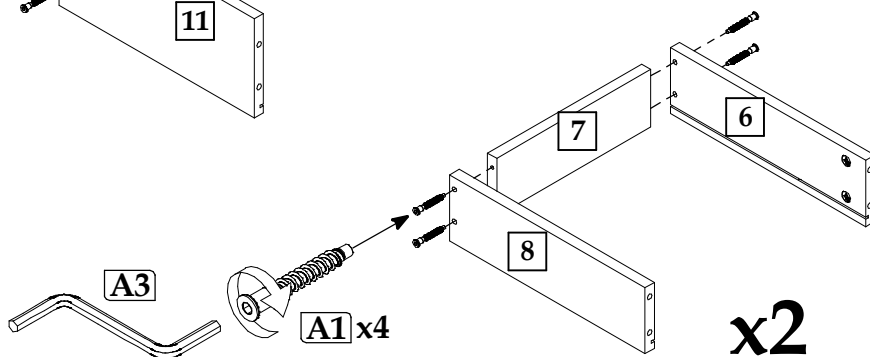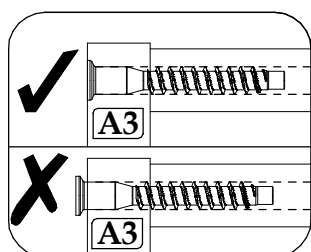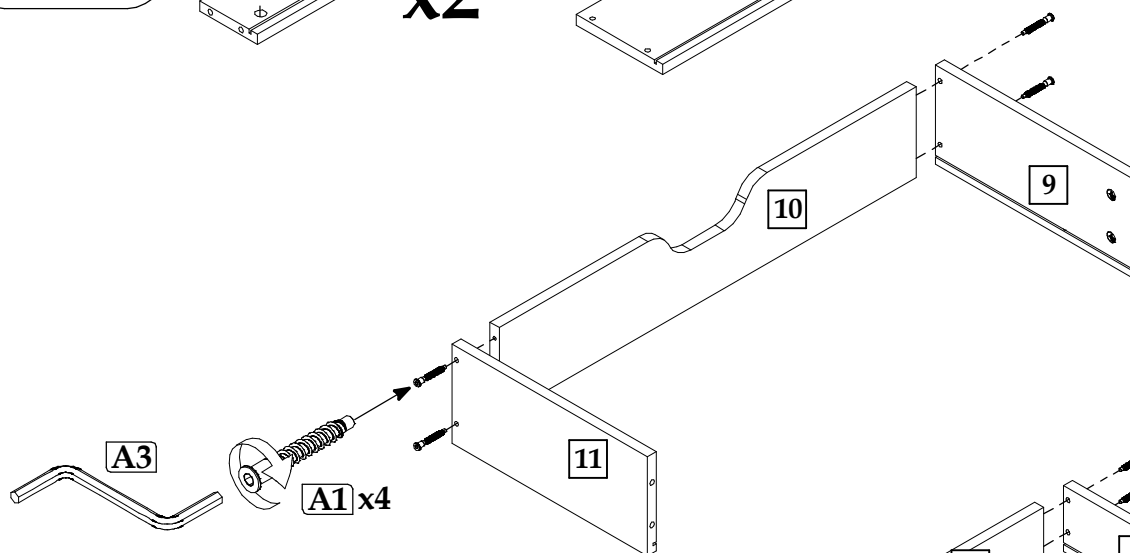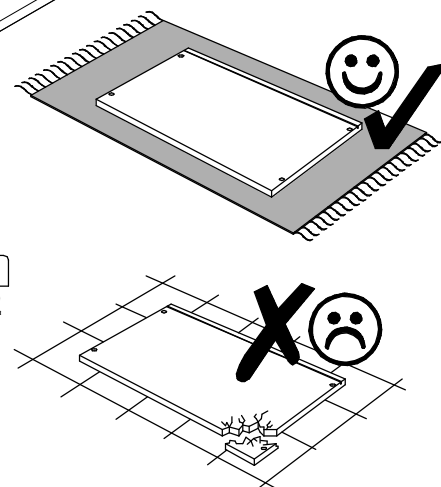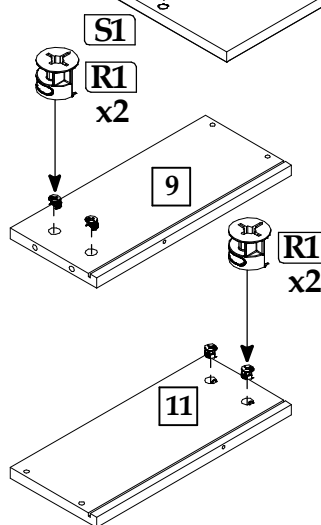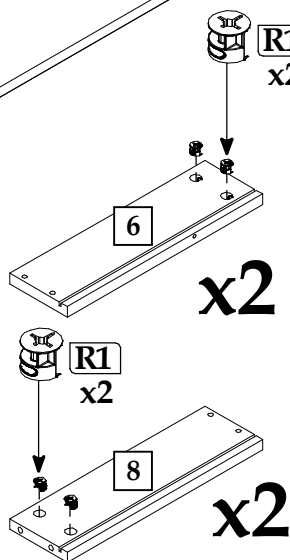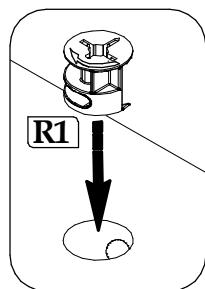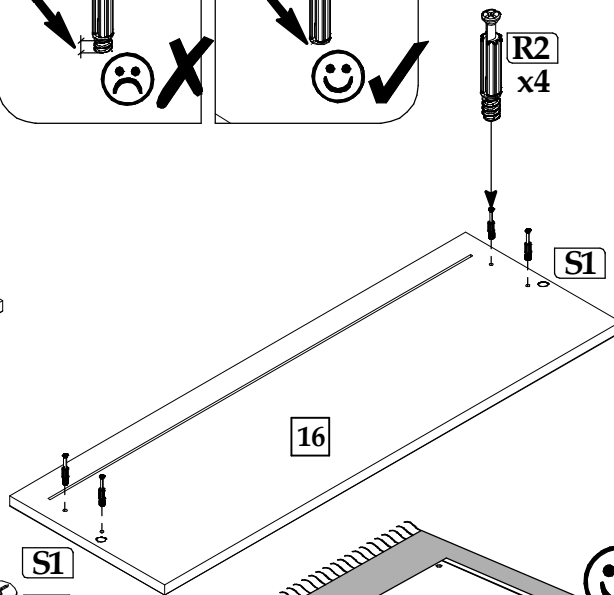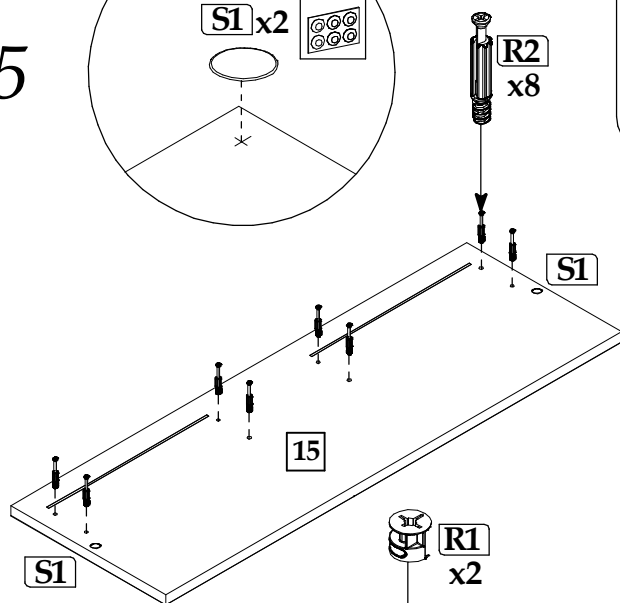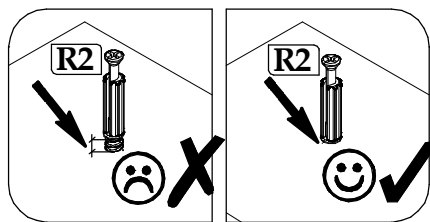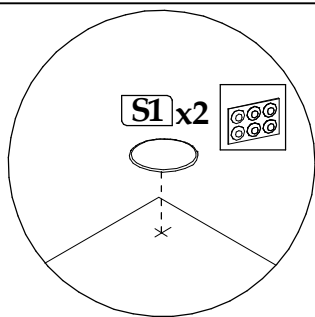

► 6

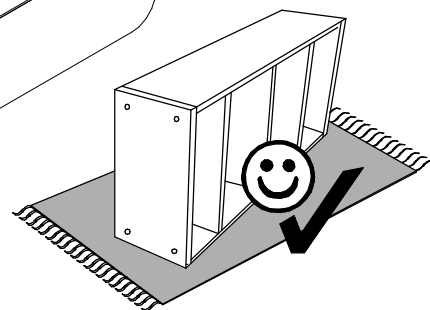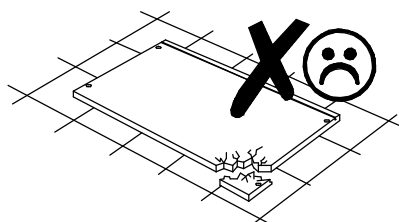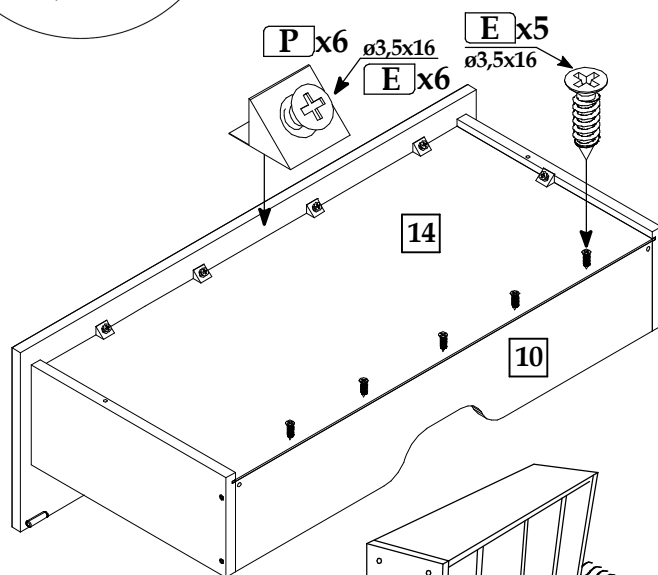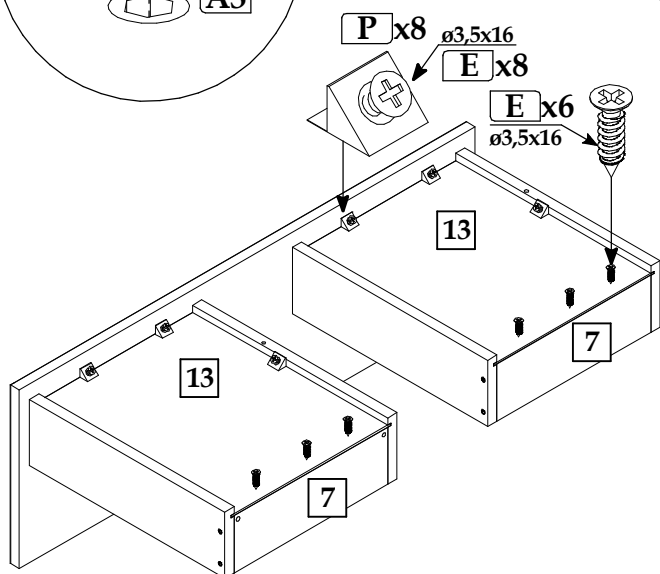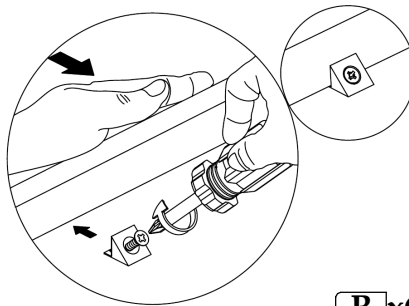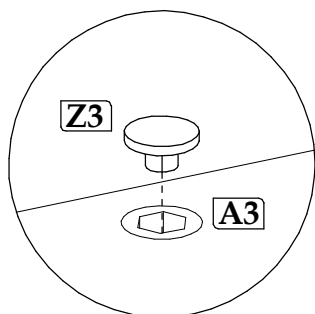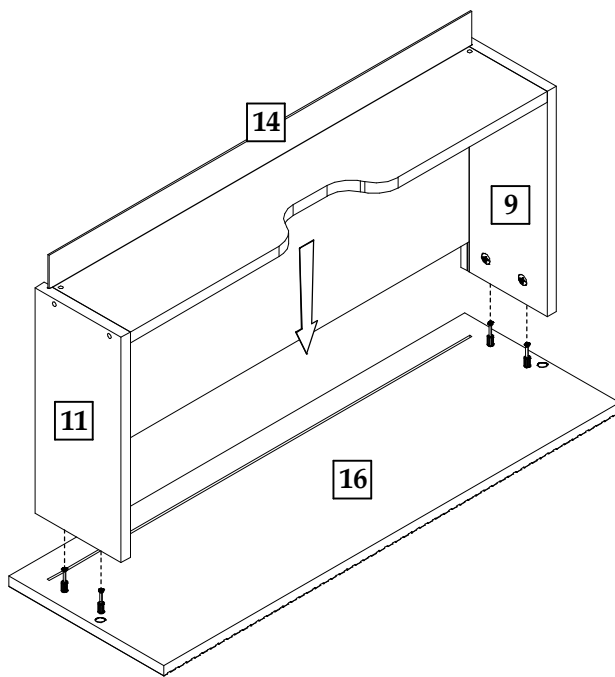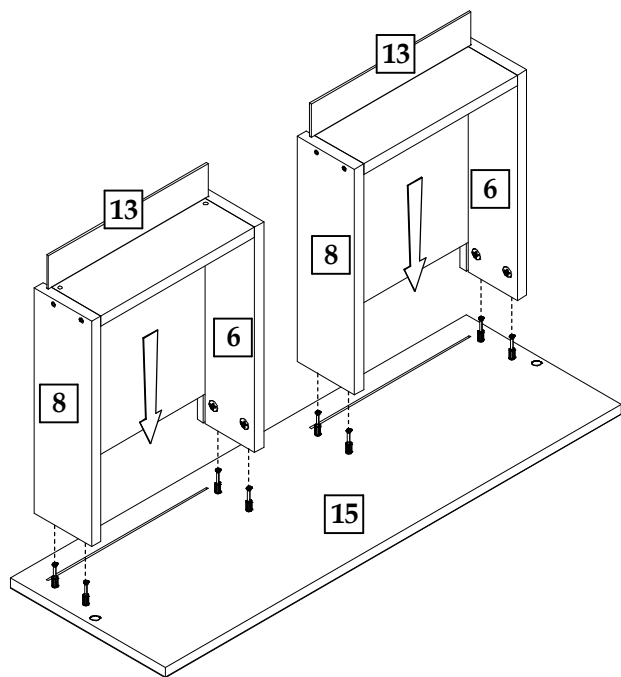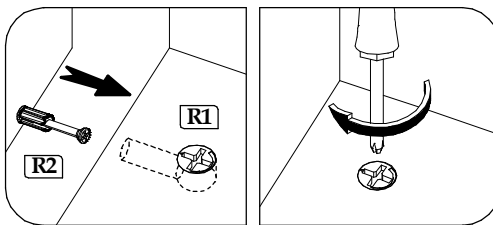

► 7

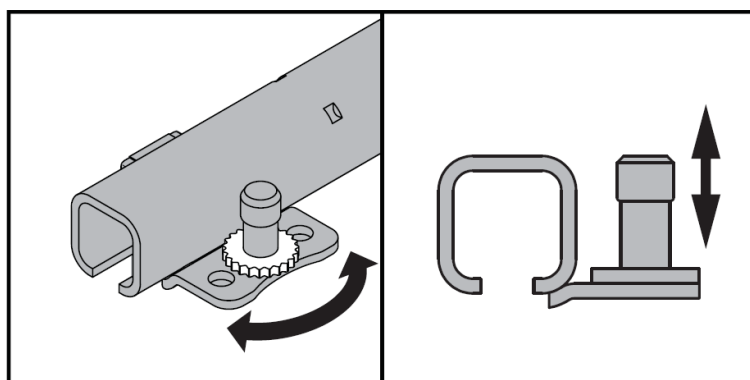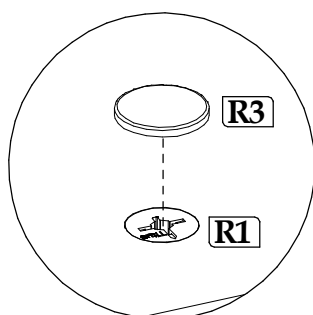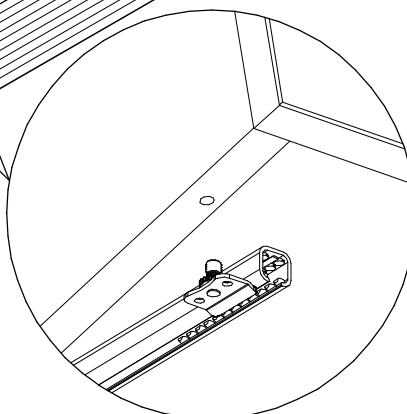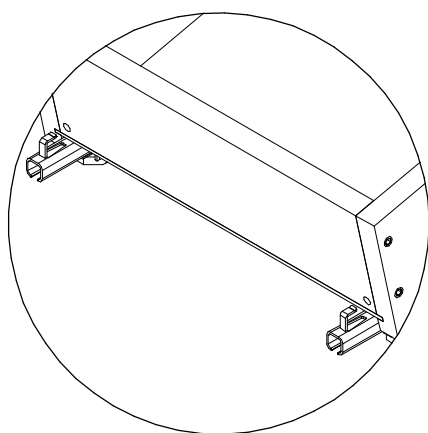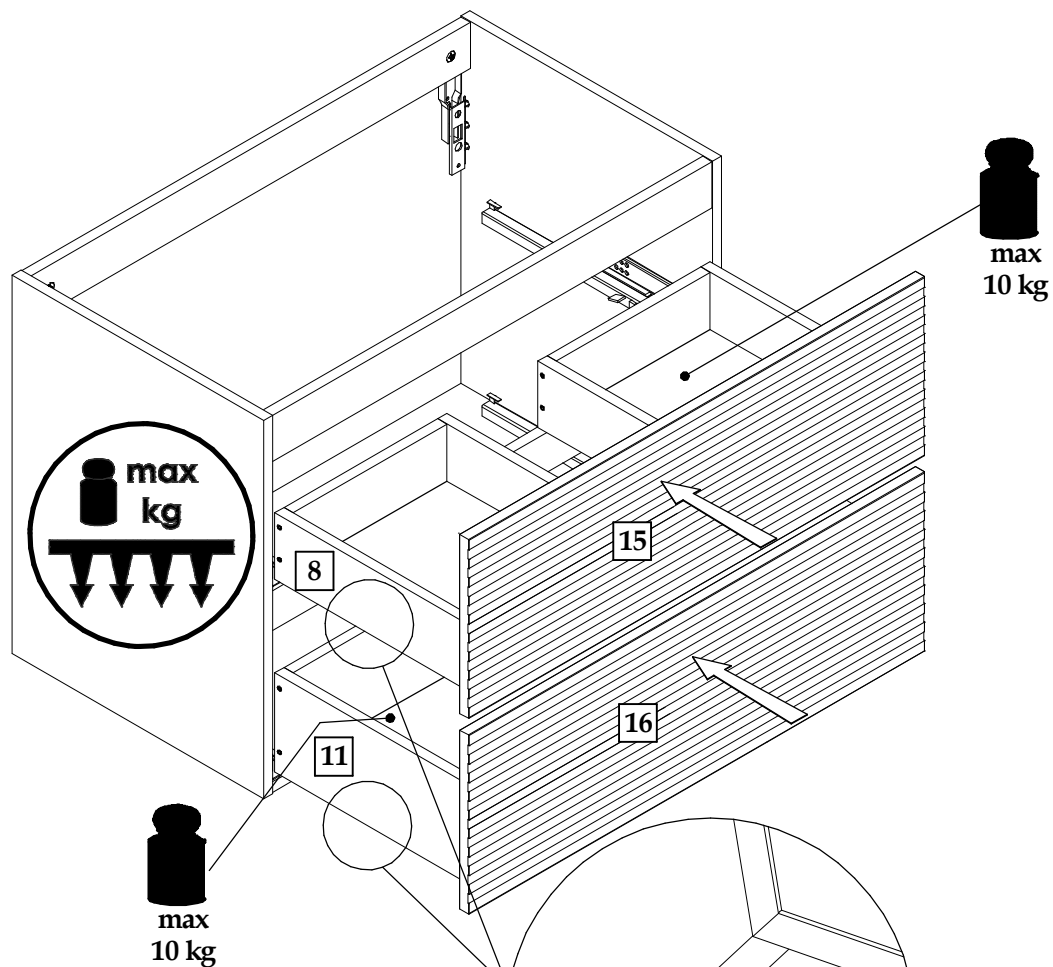

► 8

