


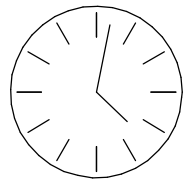
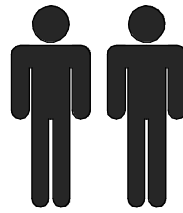
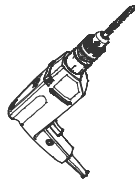
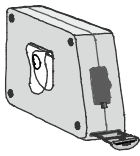
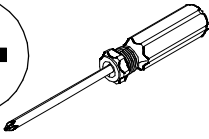
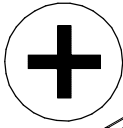
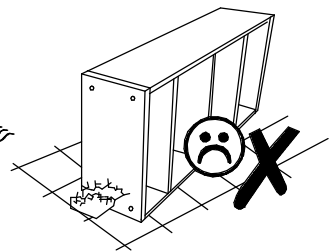
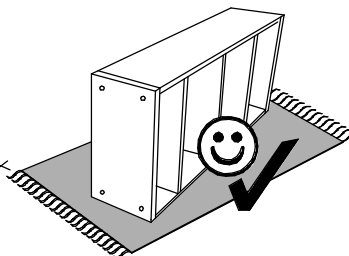
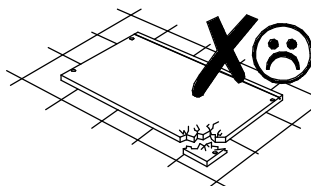
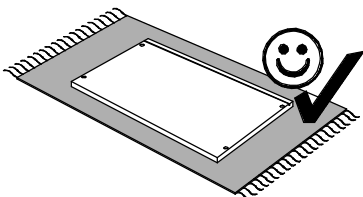
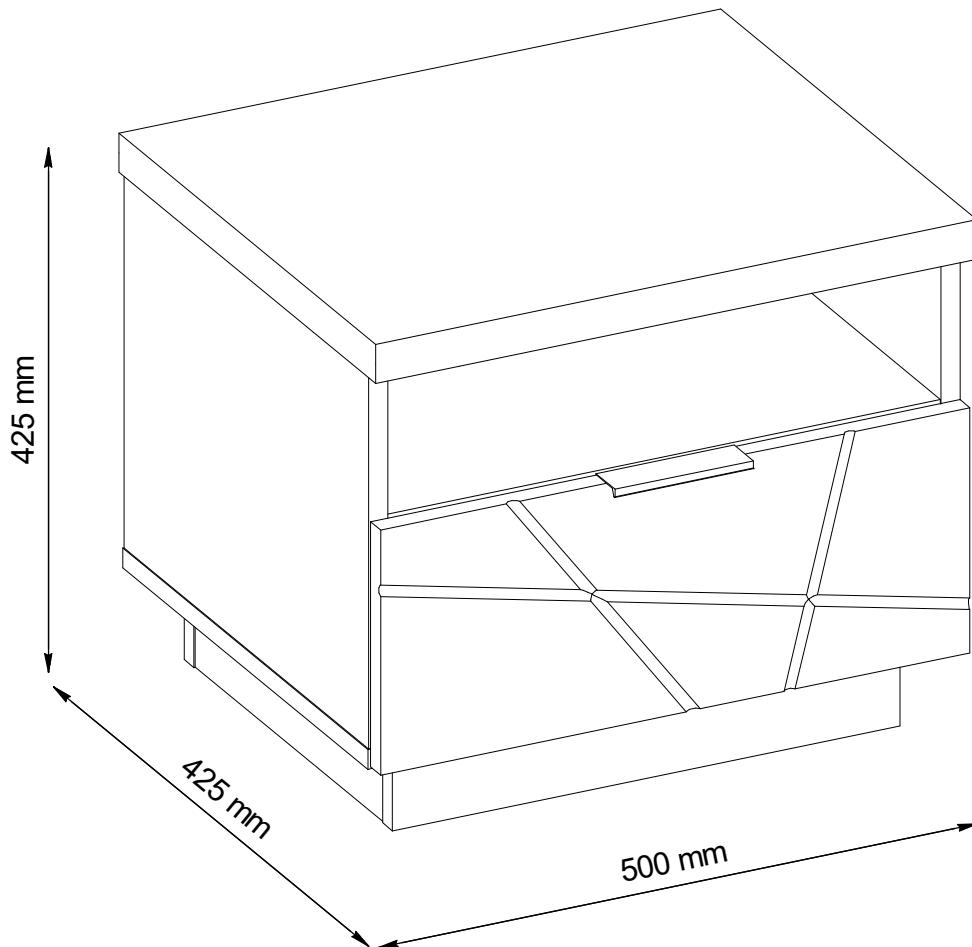
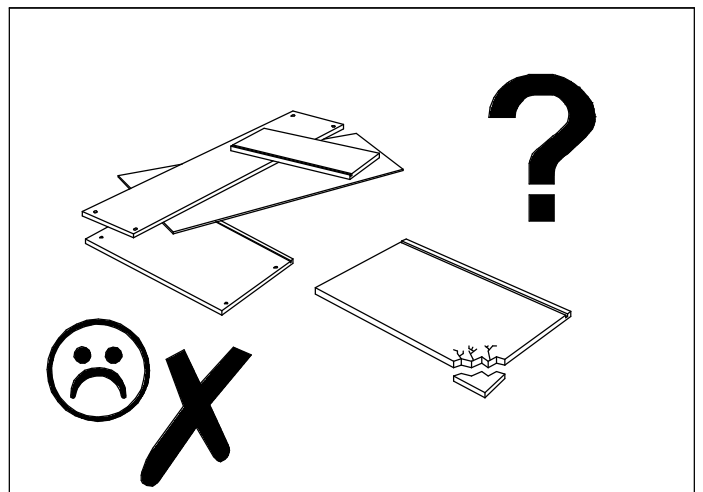
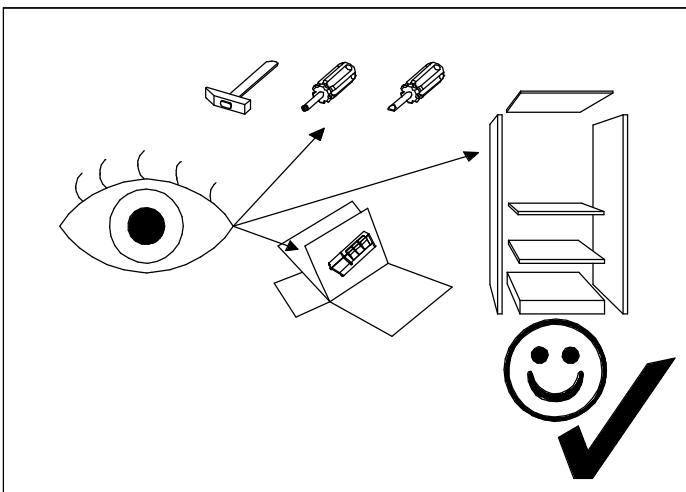
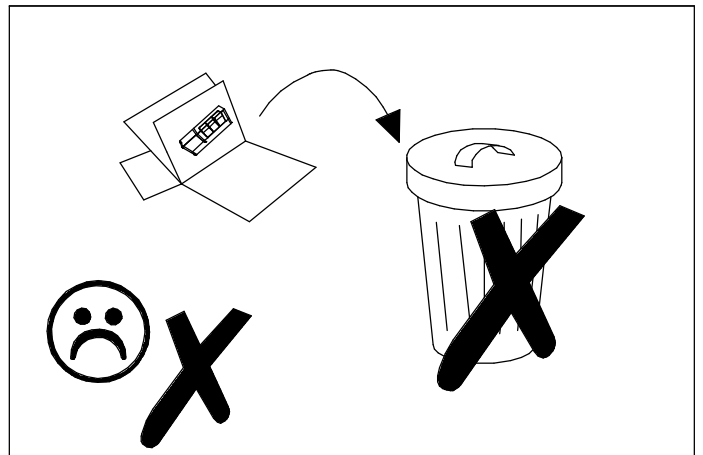

















ORIENT X

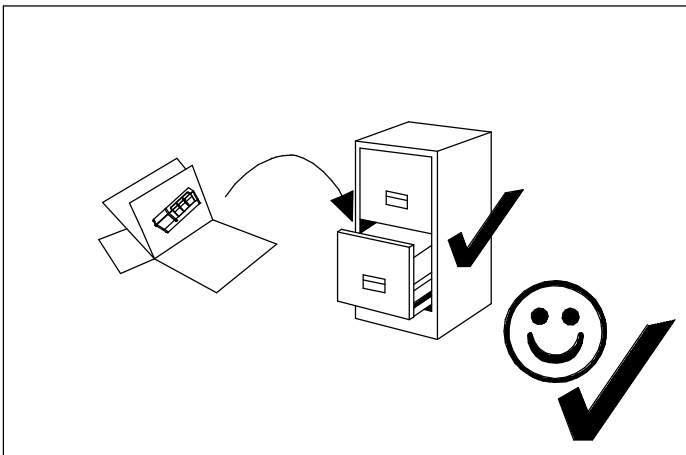

50 min

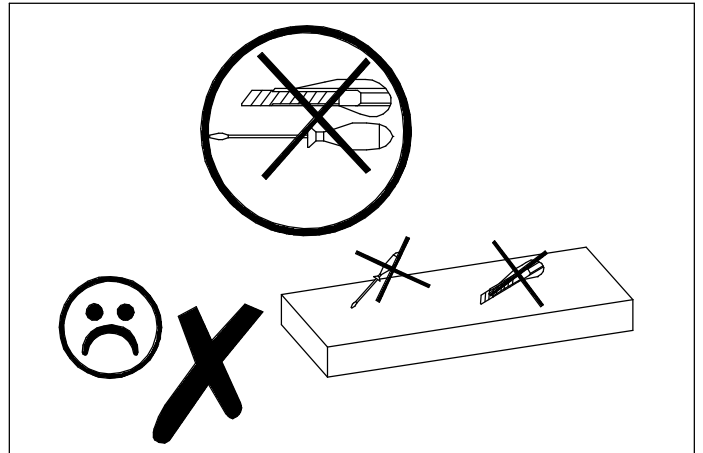

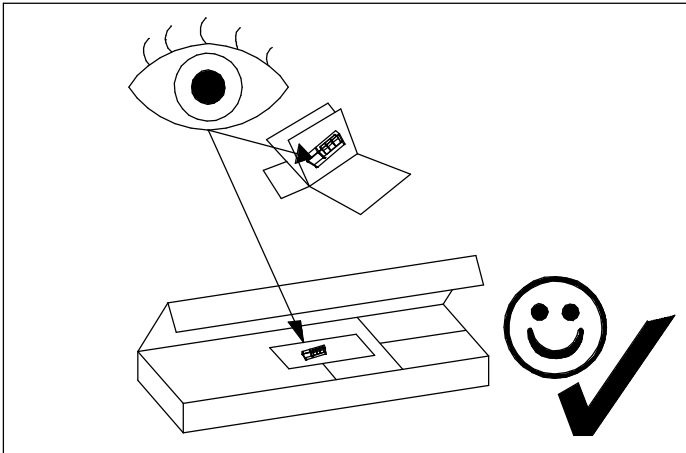


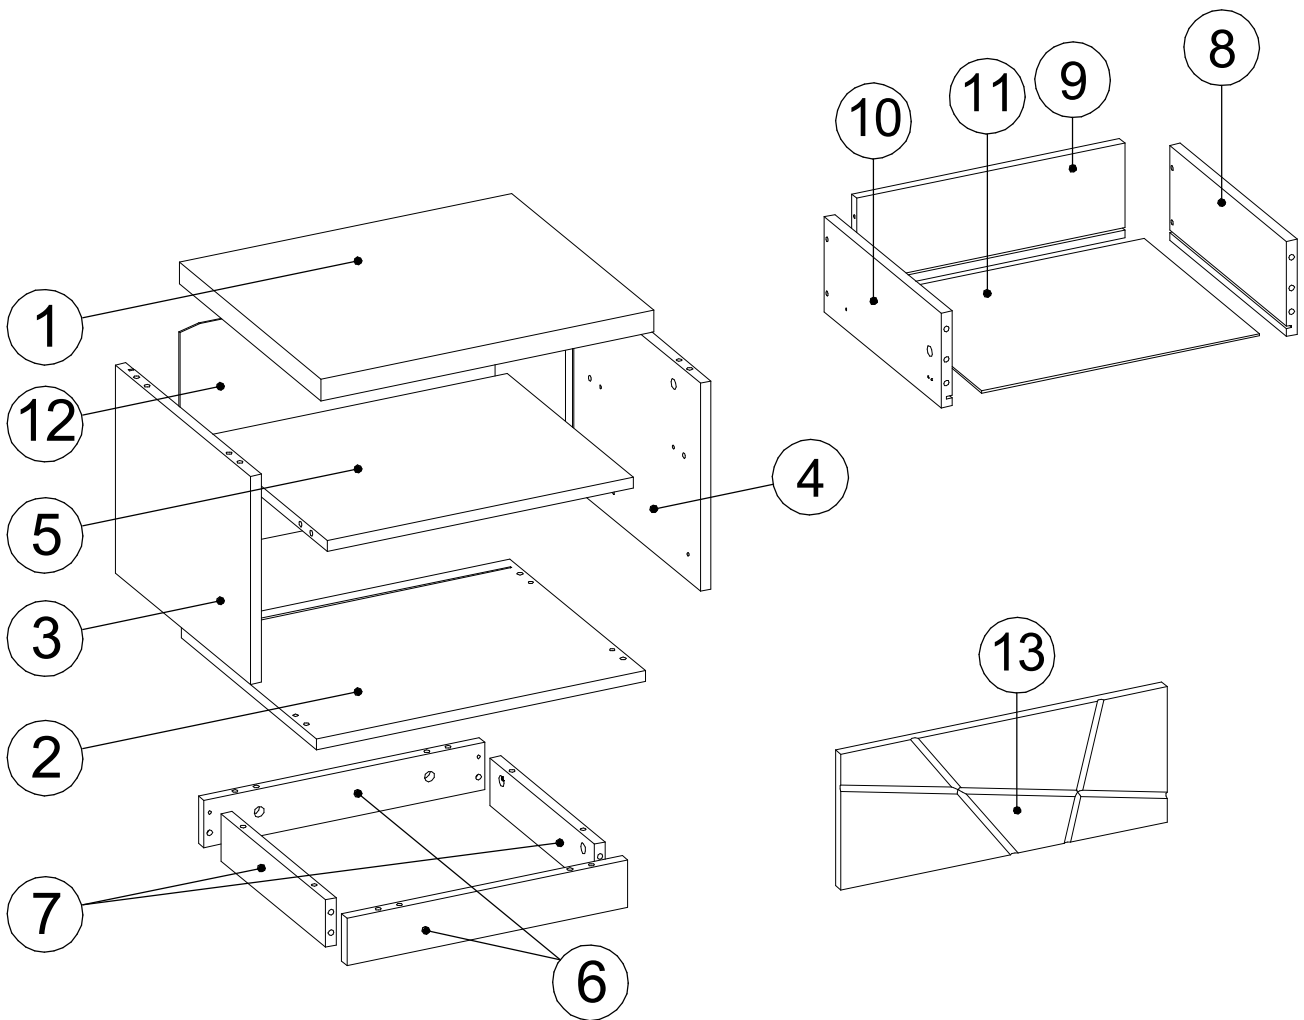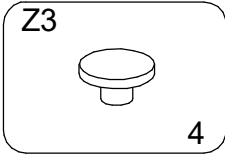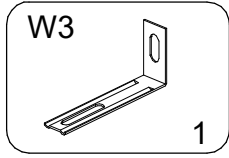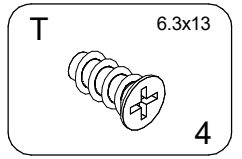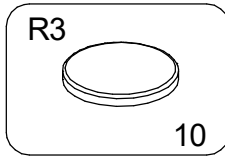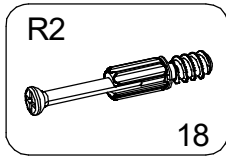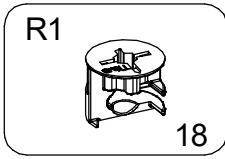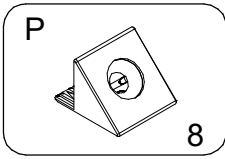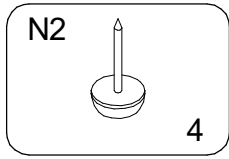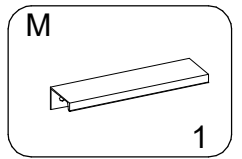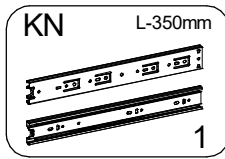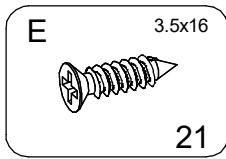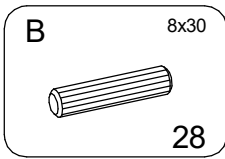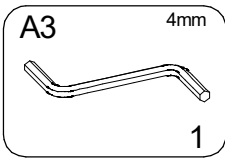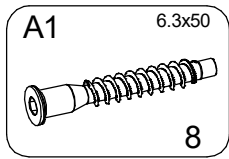

Element symbol	Measurements					Code	Paket
1	500	425	16	1	1018	1/1	
2	494	406	16	1	1007	1/1	
3	405	307	16	1	1005	1/1	
4	405	307	16	1	1006	1/1	

5	460	375	16	1	1008	1/1
6	422	70	16	2	1002	1/1
7	313	70	16	2	1001	1/1
8	350	140	16	1	1011	1/1
9	402.5	140	16	1	1012	1/1

10	350	140	16	1	1012	1/1
11	417.5	346.5	3	1		1/1
12	474	337	3	1	1009	1/1
13	492	202	16	1	1026	1/1

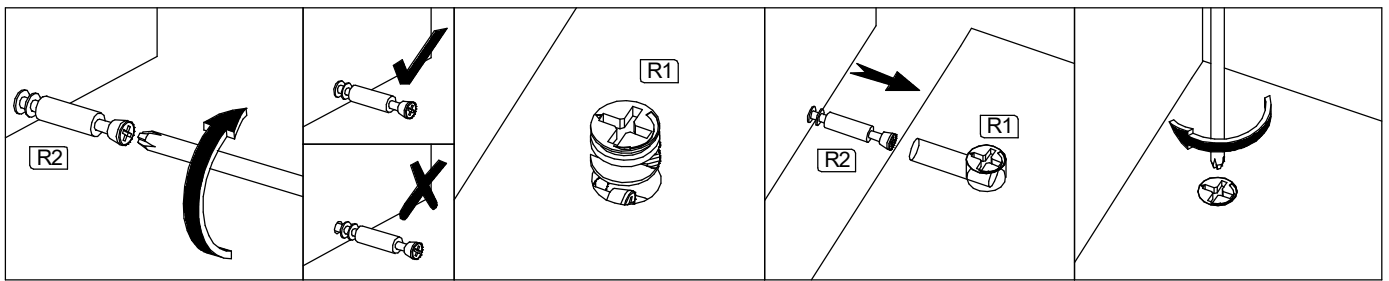

► 1










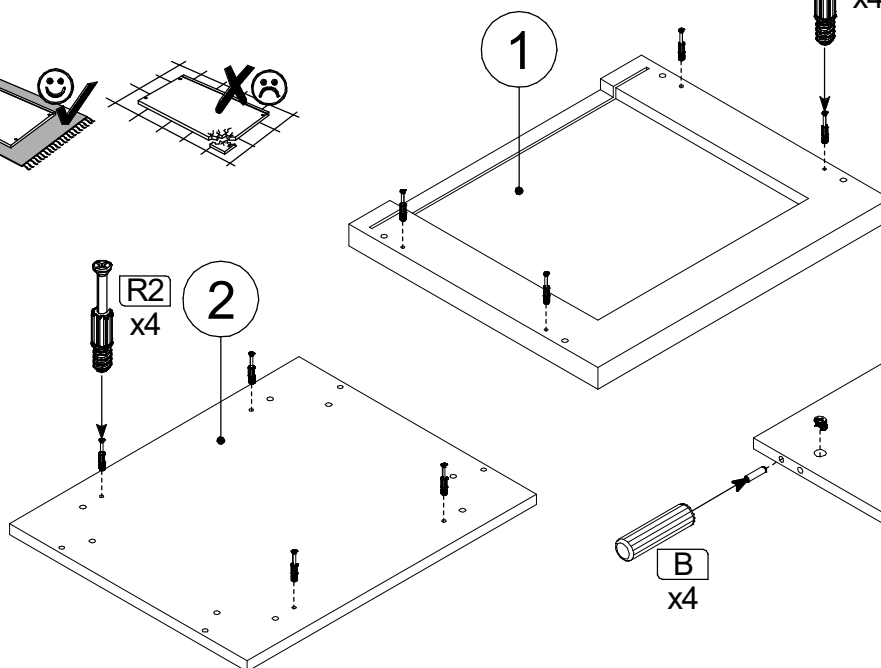



Diagram 2 illustrates the second step of the assembly process. It shows the second panel (5) being attached to the first panel (4). The panel (5) is positioned against the side of panel (4). Dashed lines indicate the alignment of the panels. Screws (3) are shown being inserted into the pre-drilled holes along the edge of panel (5) to secure it to panel (4). A callout box in the bottom right corner shows a warning symbol (a triangle with an exclamation mark) and a screw icon, indicating that the screws should be tightened.

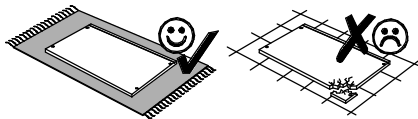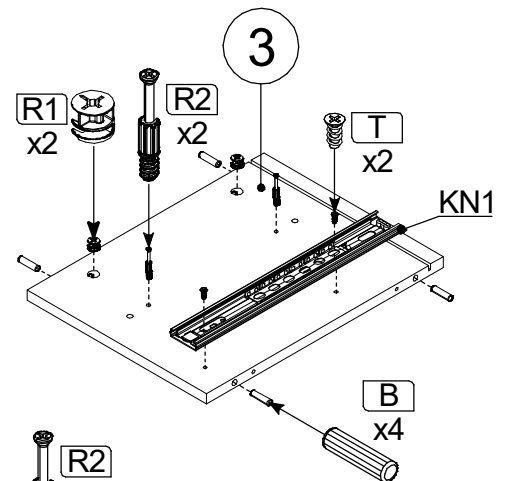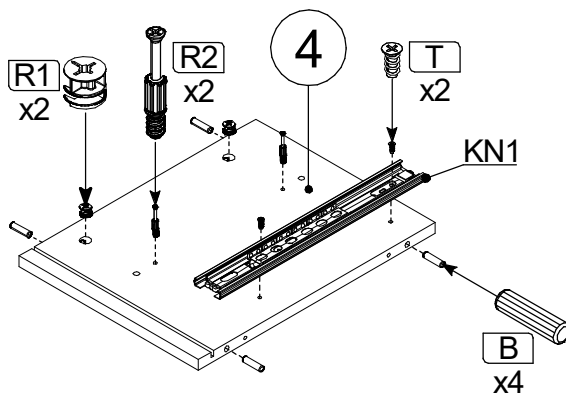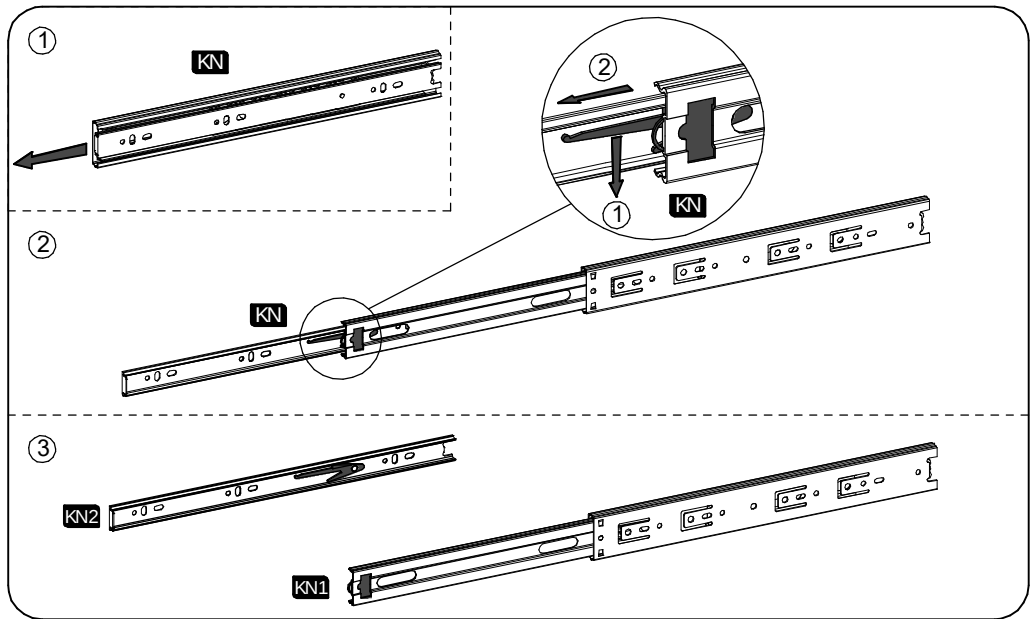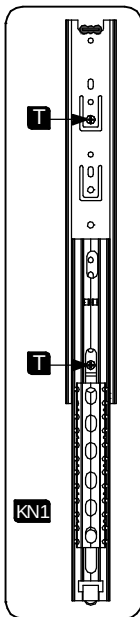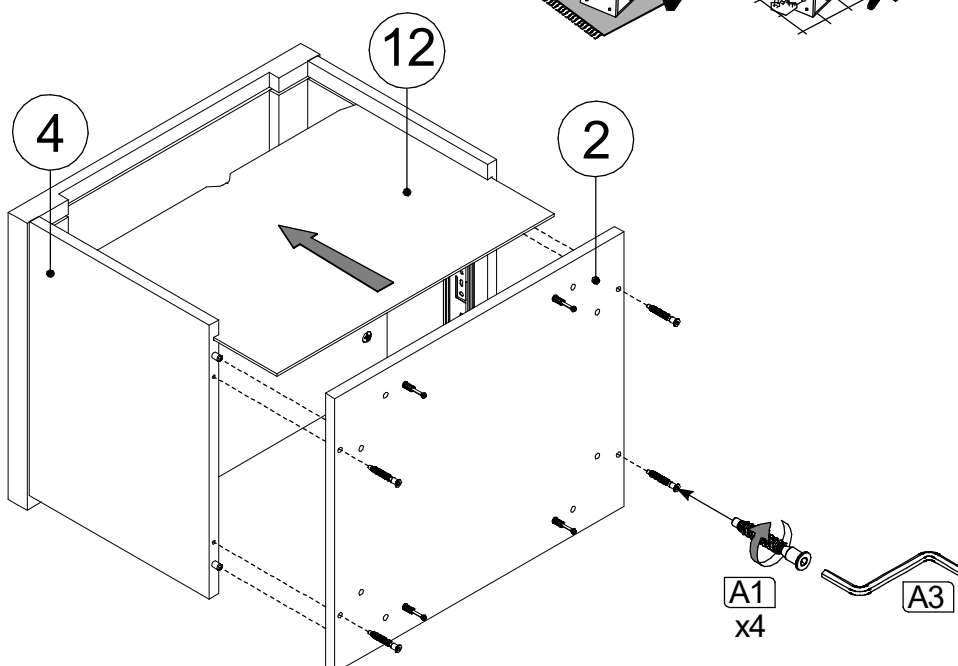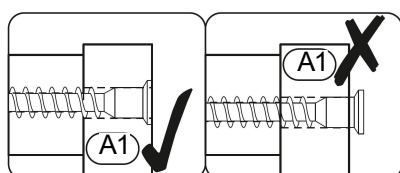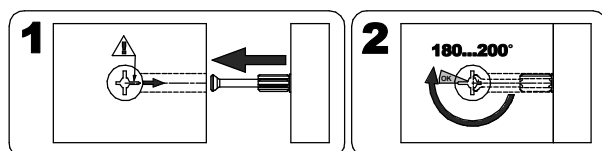


► 5

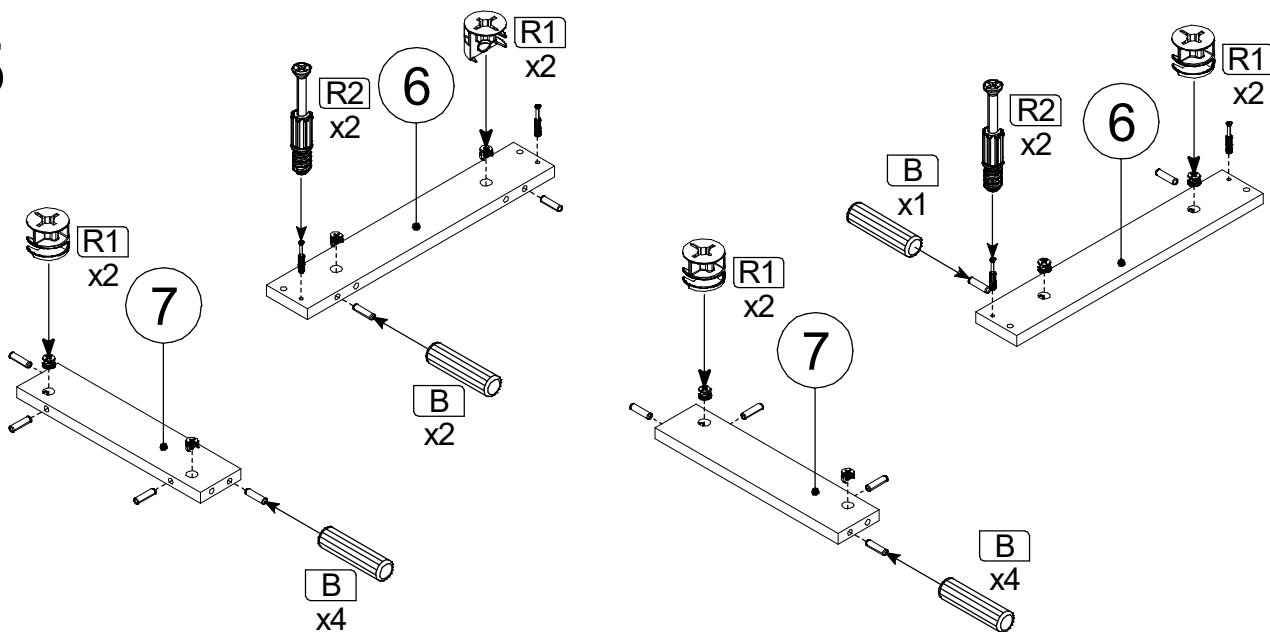




► 6

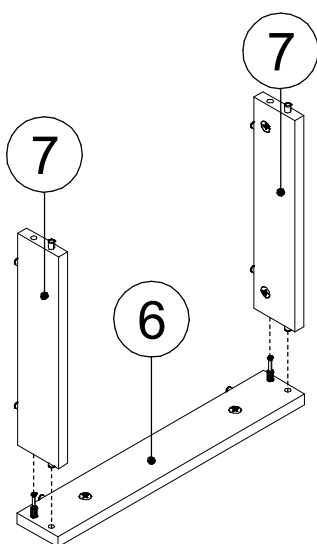




► 7

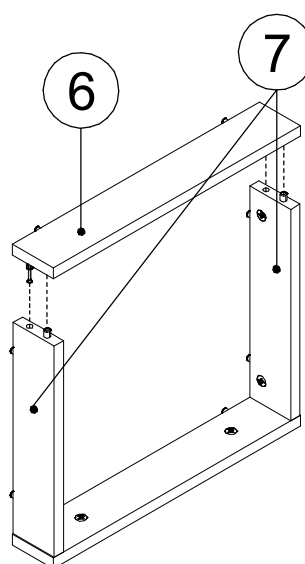



► 8

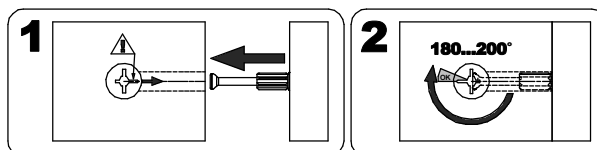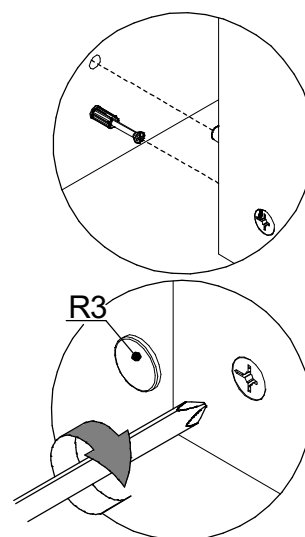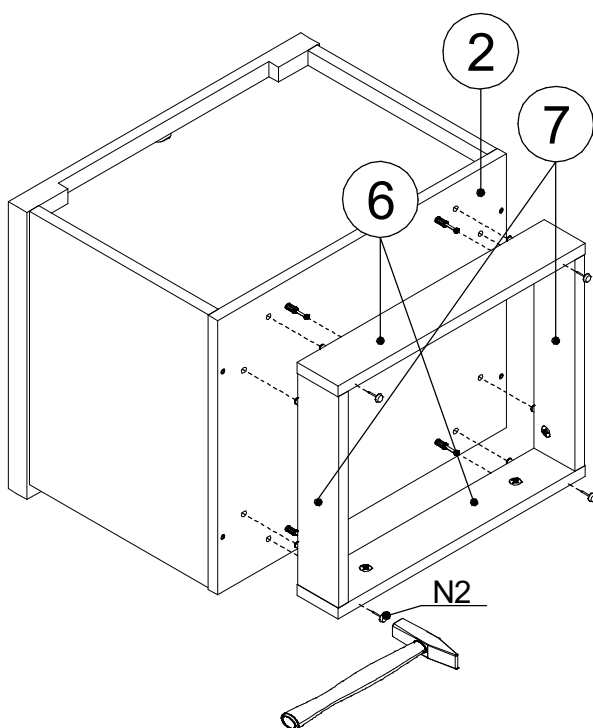


► 9

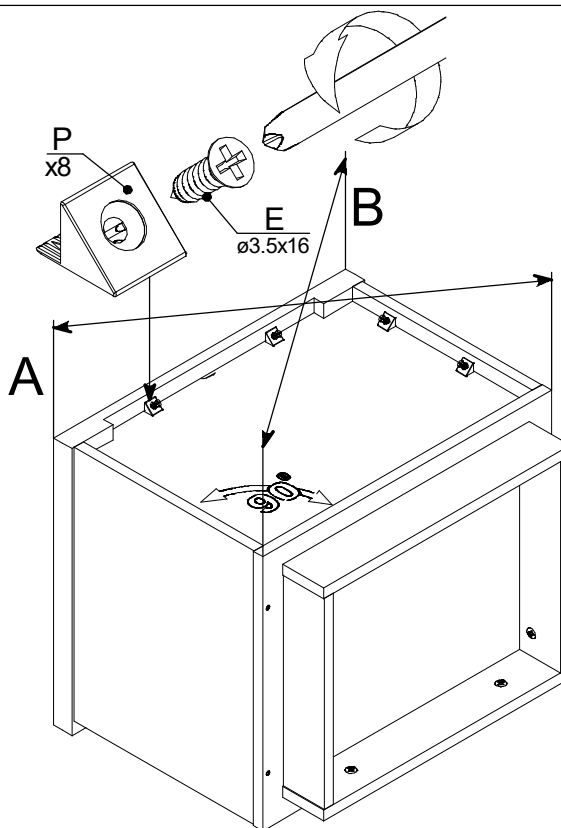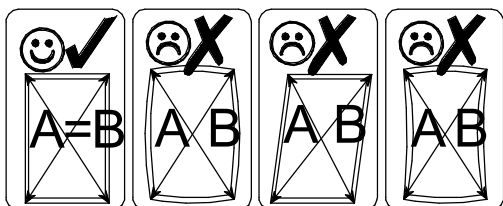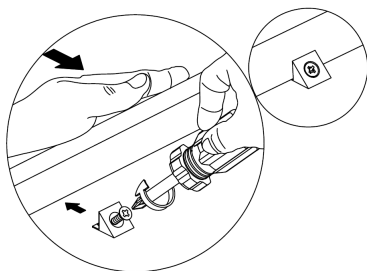


► 10

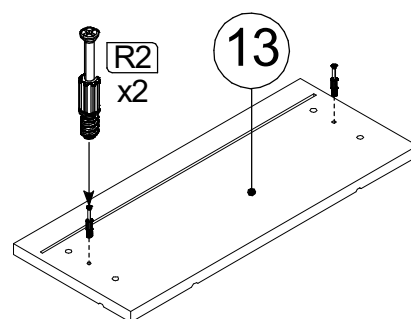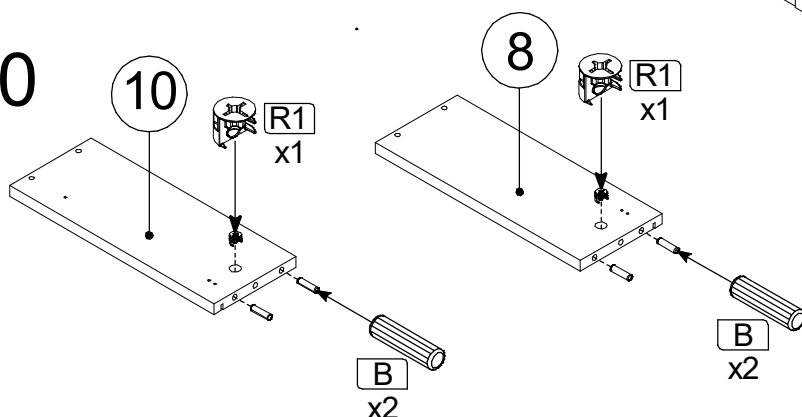



► 1

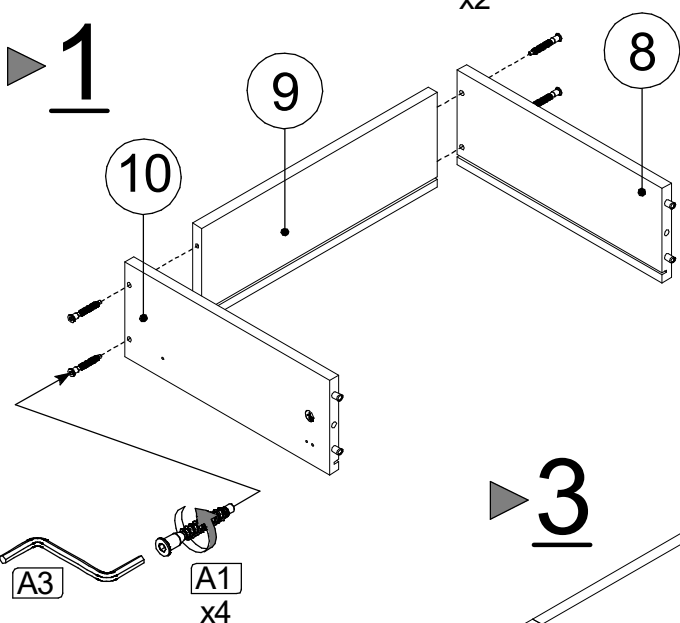


► 2

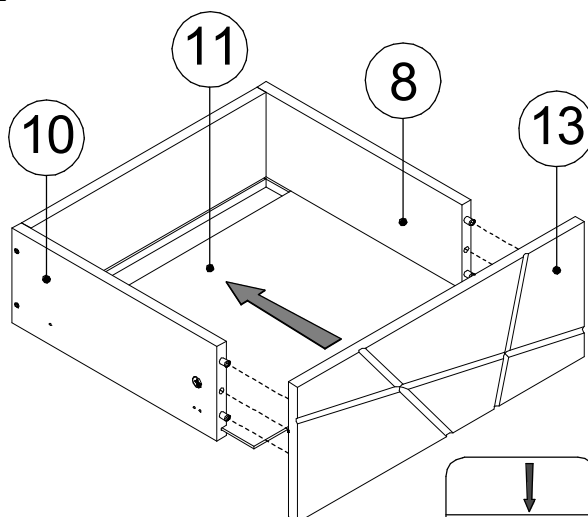

► 3

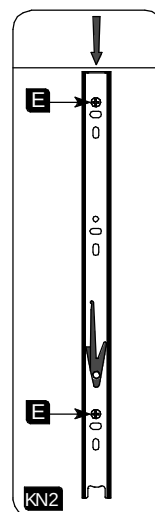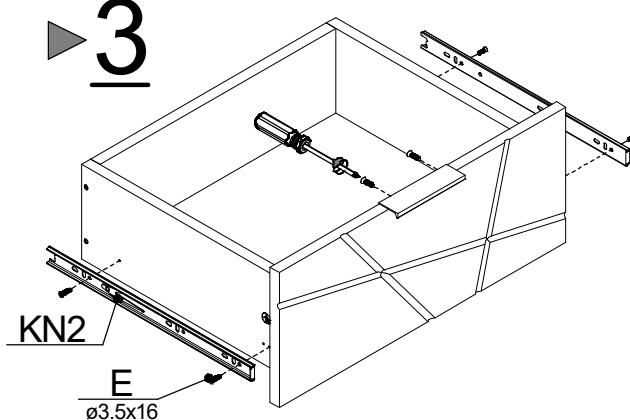

► 11

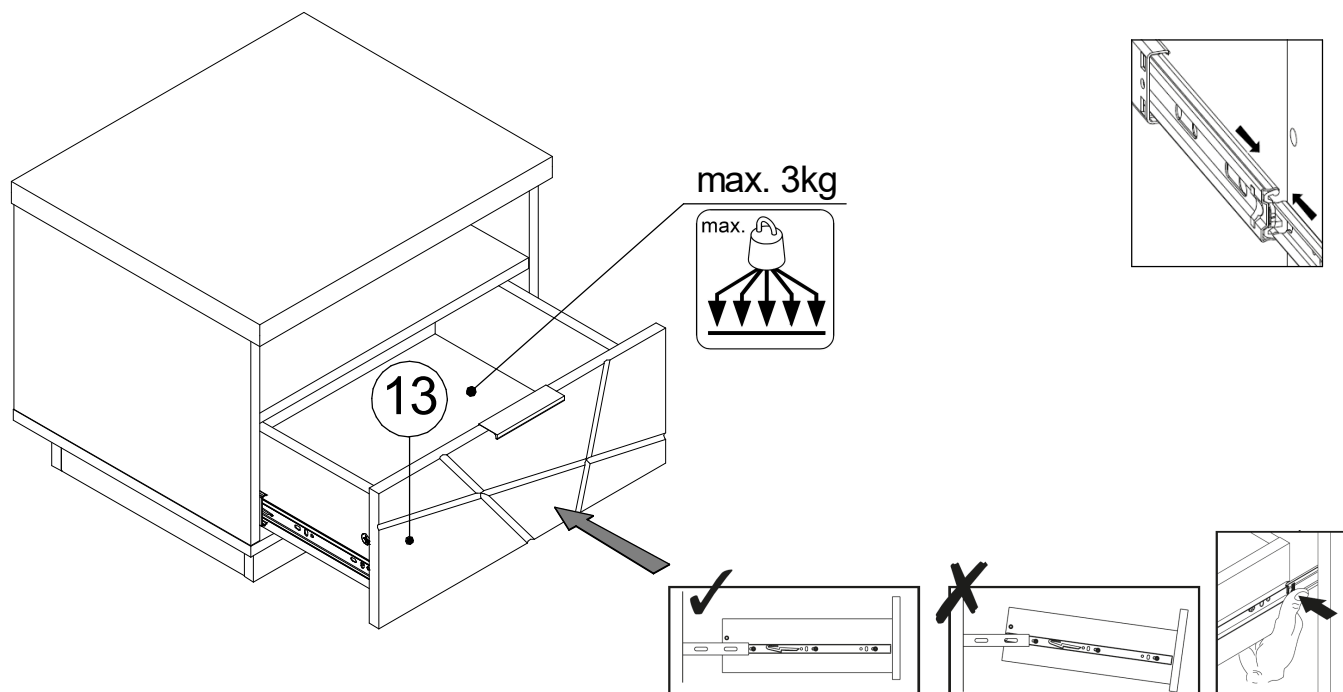

► 12

